
## MANUAL TRANSAXLE LOCATION INDEX [F66M-R]


id0515n2159400

### SKYACTIV-G 1.5

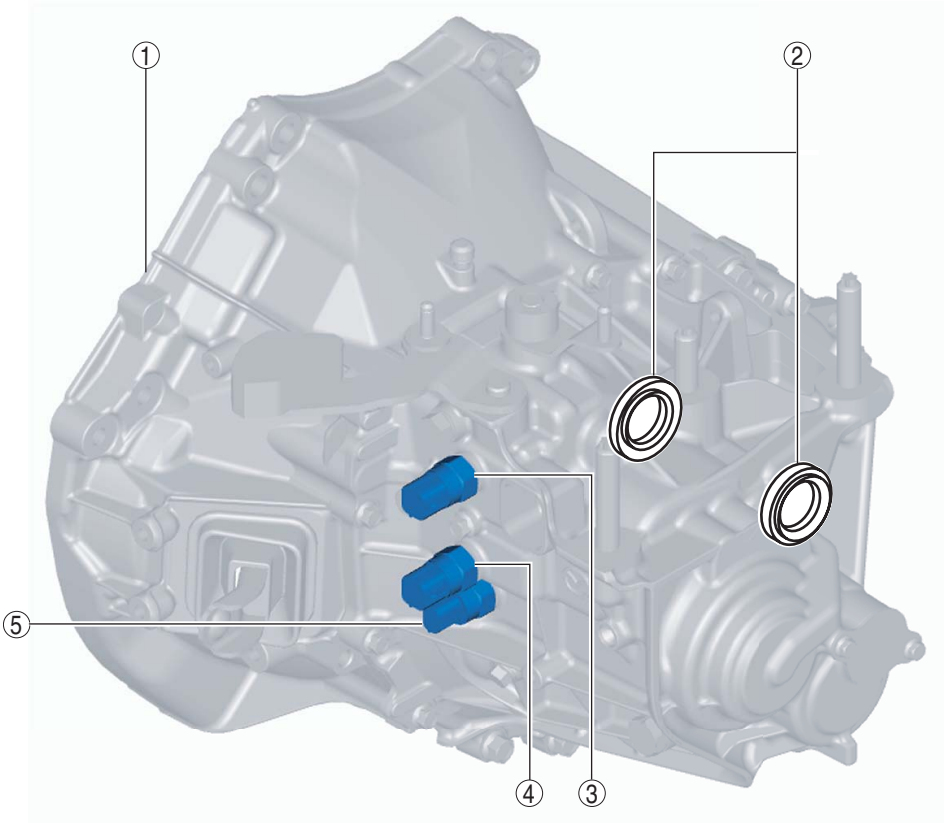


adejjw00010443

### SKYACTIV-D 1.5

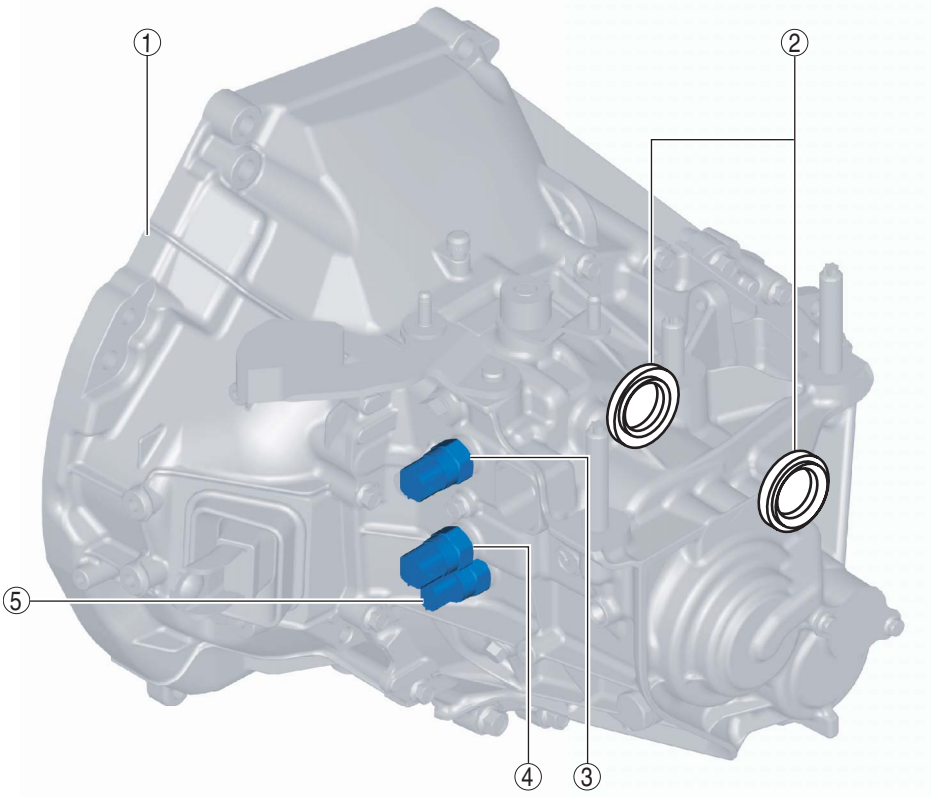


adejjw00012152

| | |
|---|---|
| 1 | Manual transaxle<br>(See MANUAL TRANSAXLE OIL INSPECTION [F66M-R].)<br>(See MANUAL TRANSAXLE OIL REPLACEMENT [F66M-R].)<br>(See MANUAL TRANSAXLE REMOVAL/ INSTALLATION [F66M-R (SKYACTIV-G 1.5)].)<br>(See MANUAL TRANSAXLE REMOVAL/ INSTALLATION [F66M-R (SKYACTIV-D 1.5)].)<br>(See INSPECTION AFTER MANUAL TRANSAXLE OVERHAUL [F66M-R].) |
| 2 | Oil seal (differential)<br>(See OIL SEAL (DIFFERENTIAL) REPLACEMENT [F66M-R].) |
| 3 | Neutral switch No.1<br>(See NEUTRAL SWITCH REMOVAL/ INSTALLATION [F66M-R].) |
| 4 | Neutral switch No.2 (with i-stop)<br>(See NEUTRAL SWITCH REMOVAL/ INSTALLATION [F66M-R].) |
| 5 | Back-up light switch<br>(See BACK-UP LIGHT SWITCH REMOVAL/ INSTALLATION [F66M-R].) |