MANUAL TRANSAXLE OIL INSPECTION [F66M-R]

id0515n2159600

SKYACTIV-G 1.5


1. Park the vehicle on level ground.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the oil level plug and gasket.
4. Verify that the manual transaxle oil is within the range shown in the figure.
   - If it is not within the range, adjust the manual transaxle oil level.

   Manual transaxle oil grade
   API service GL-4
   Manual transaxle oil viscosity
   SAE 75W-80

5. Install a new gasket and the oil level plug.

   Tightening torque
   39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

6. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

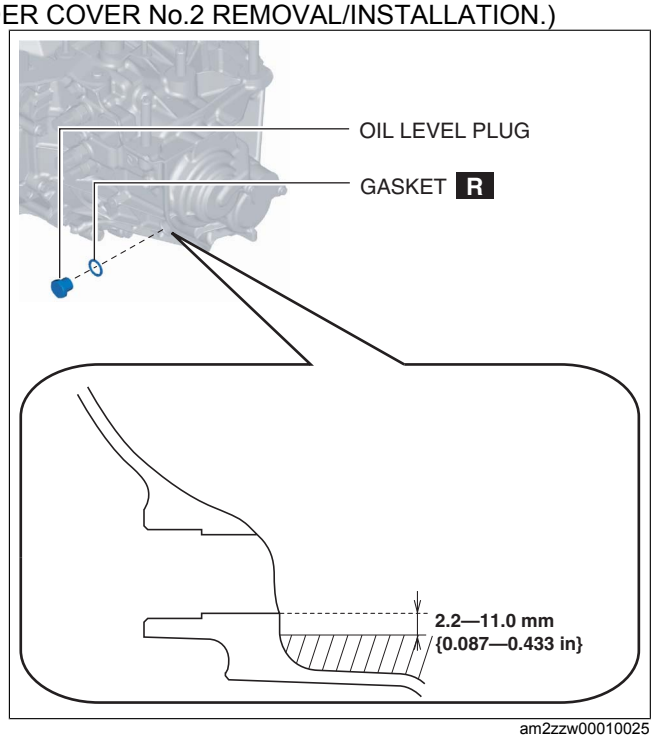

am2zzw00010025

SKYACTIV-D 1.5


1. Park the vehicle on level ground.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the oil level plug and gasket.
4. Verify that the manual transaxle oil is near the brim of the plug port.
   - When the manual transaxle oil level is lower than the lower limit, add manual transaxle oil.

   Manual transaxle oil grade
   API service GL-4
   Manual transaxle oil viscosity
   SAE 75W-80

5. Install a new gasket and the oil level plug.

   Tightening torque
   39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

6. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

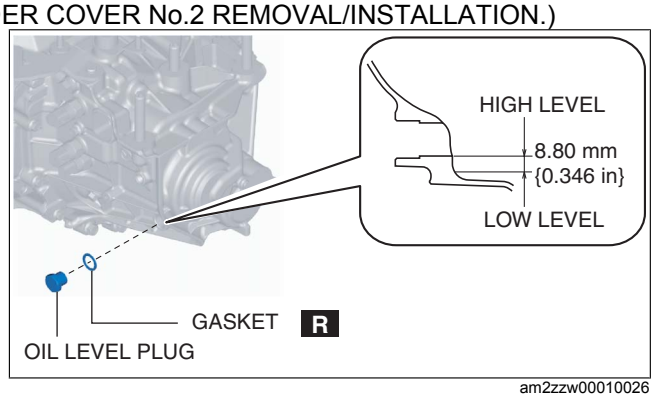

am2zzw00010026