
MANUAL TRANSAXLE OIL REPLACEMENT [F66M-R]

id0515n2159700

1. Park the vehicle on level ground.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the drain plug and gasket, and drain the manual transaxle oil.
4. Install a new gasket and the drain plug.


   Tightening torque
   39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

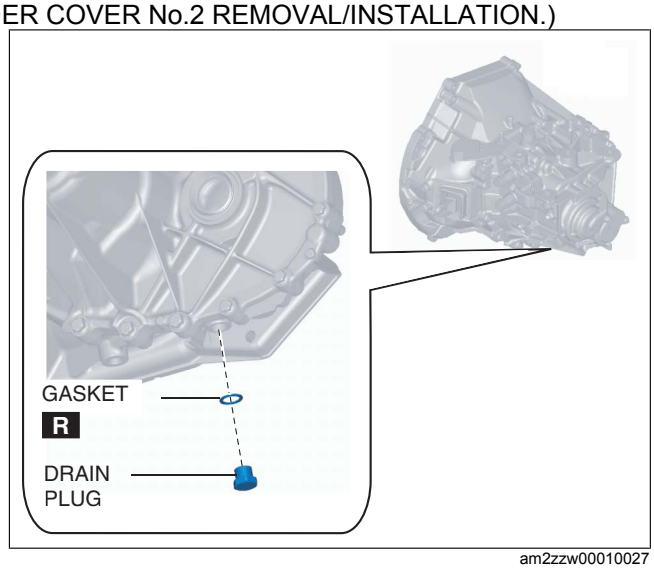

am2zzw00010027

5. Remove the oil level plug and gasket.

SKYACTIV-G 1.5

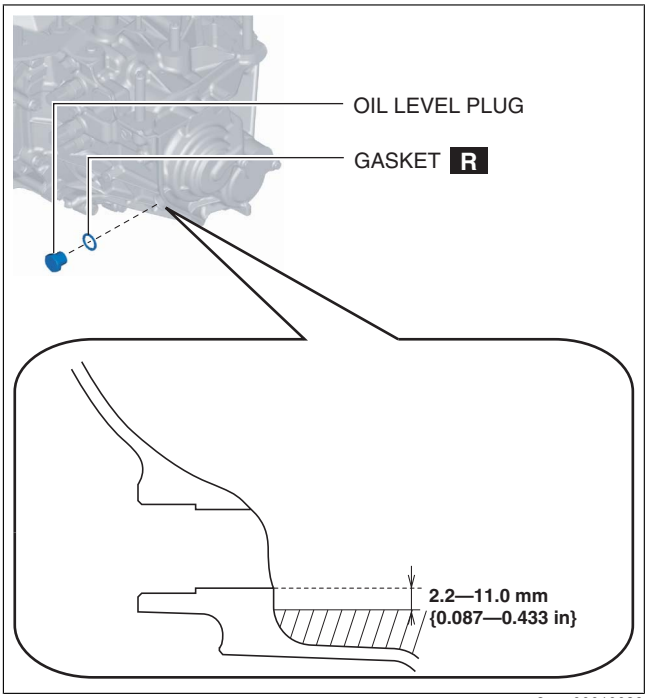


am2zzw00010028

SKYACTIV-D 1.5

6. Add the specified amount of manual transaxle oil through the oil level plug hole.

   Manual transaxle oil grade
   API service GL-4
   Manual transaxle oil viscosity
   SAE 75W-80
   Manual transaxle oil capacity (approx. quantity)
   SKYATIV-G 1.5: 1.59 L {1.68 US qt, 1.40 Imp qt}
   SKYATIV-D 1.5: 1.64 L {1.73 US qt, 1.44 Imp qt}

7. Install a new gasket and the oil level plug.

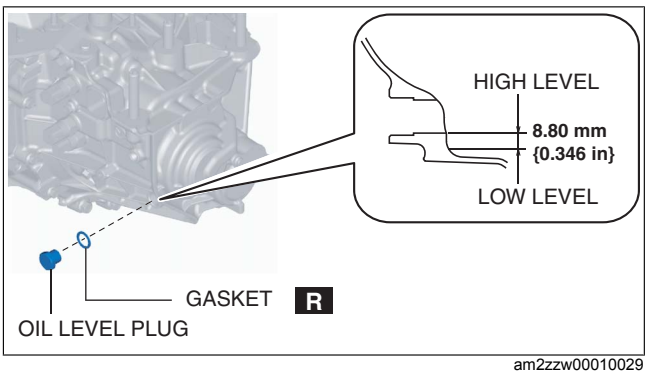

am2zzw00010029

Tightening torque
39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

8. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)