
NEUTRAL SWITCH REMOVAL/INSTALLATION [F66M-R]

id0515n2159800

SKYACTIV-G 1.5
Neutral switch No.1

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove in the order indicated in the table.

1	Neutral switch No.1 connector
2	Neutral switch No.1
3	Gasket

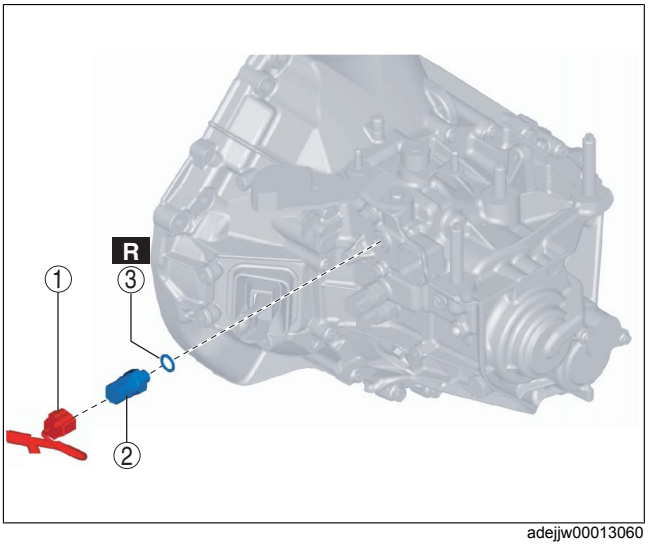


adejjw00013060

4. Install in the order indicated in the table.


Note

- White marking tape is adhered to the neutral switch No.2 connector. Verify that it is correctly installed as shown in the figure. (with i-stop)

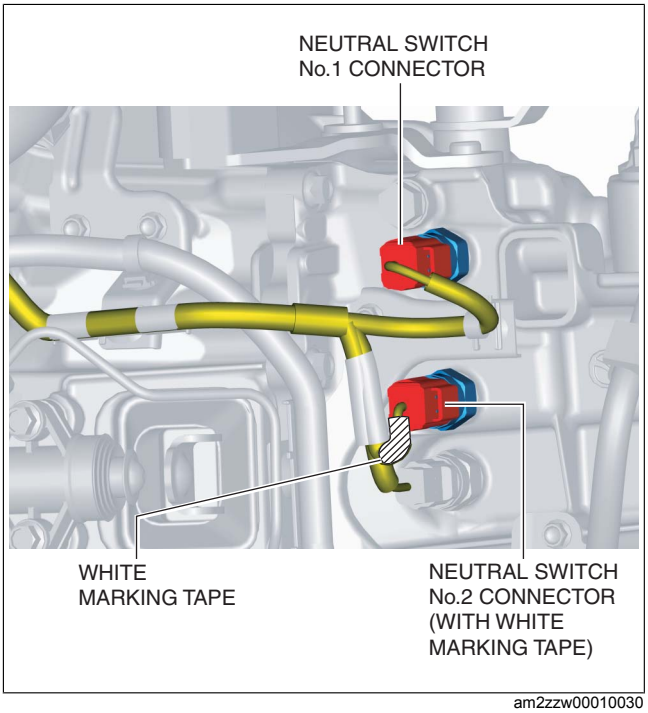

am2zzw00010030

1	Gasket
2	Neutral switch No.1
3	Neutral switch No.1 connector

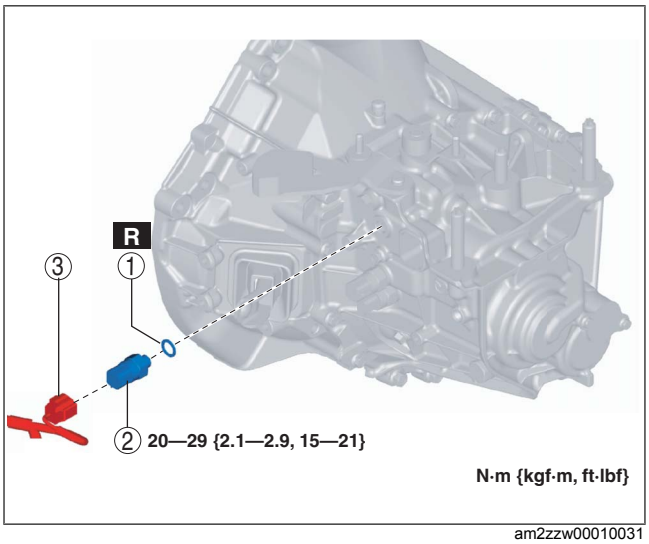


am2zzw00010031

5. Install the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

Neutral switch No.2 (with i-stop)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove in the order indicated in the table.

1	Neutral switch No.2 connector (with white marking tape)
2	Neutral switch No.2
3	Gasket

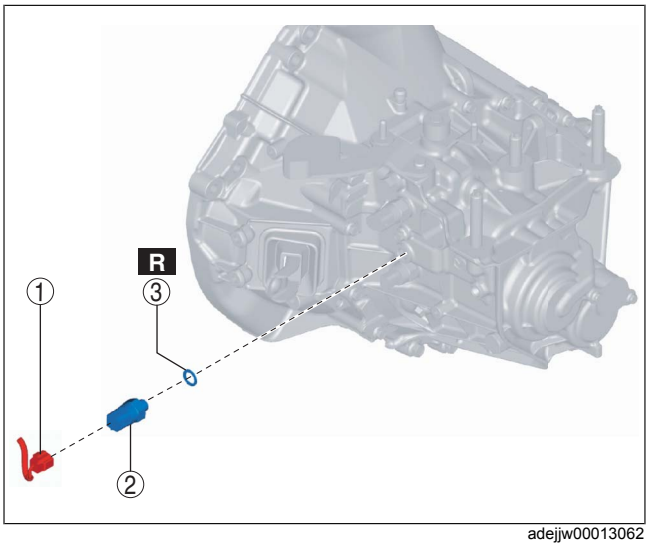


adejjw00013062

4. Install in the order indicated in the table.

Note


- White marking tape is adhered to the neutral switch No.2 connector. Verify that it is correctly installed as shown in the figure.

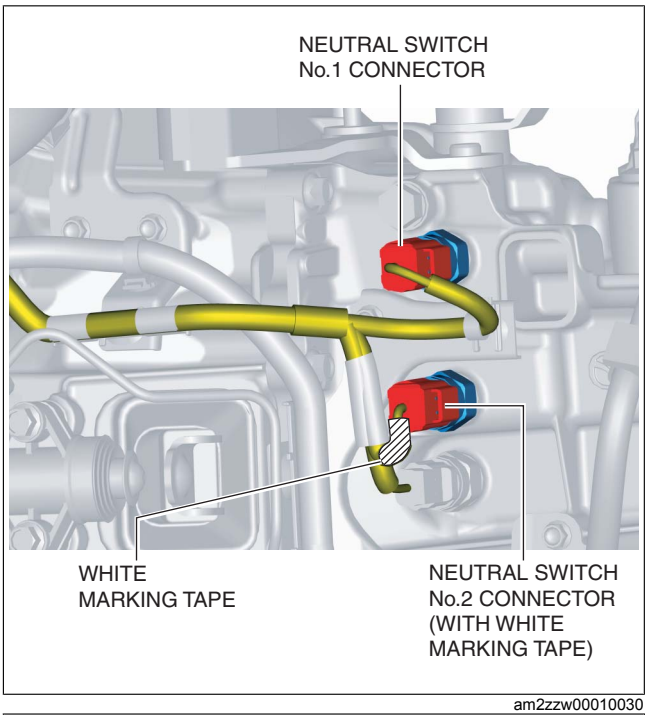

am2zzw00010030

1	Gasket
2	Neutral switch No.2
3	Neutral switch No.2 connector (with white marking tape)

5. Install the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

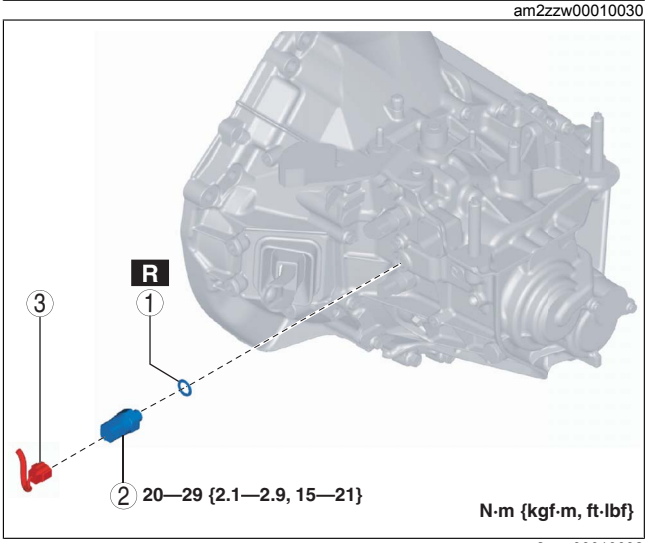

am2zzw00010032


SKYACTIV-D 1.5

Neutral switch No.1

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

3. Remove in the order indicated in the table.

1	Neutral switch No.1 connector
2	Neutral switch No.1
3	Gasket

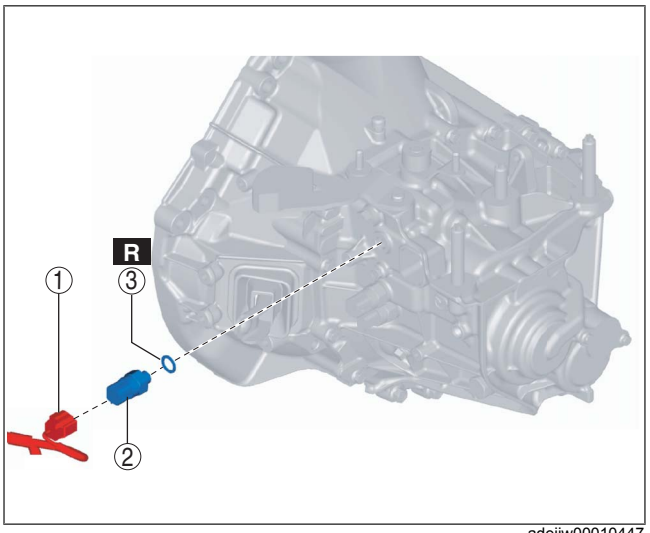


adejjw00010447

4. Install in the order indicated in the table.

1	Gasket
2	Neutral switch No.1
3	Neutral switch No.1 connector

5. Install the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

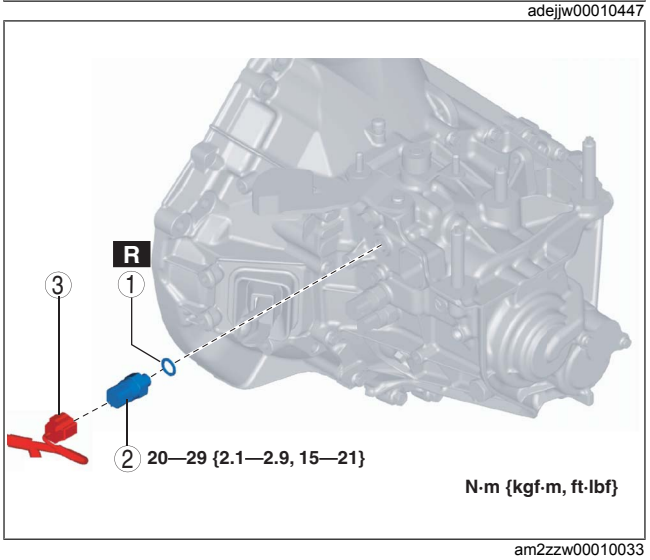


am2zzw00010033

Neutral switch No.2

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Remove in the order indicated in the table.

1	Neutral switch No.2 connector
2	Neutral switch No.2
3	Gasket

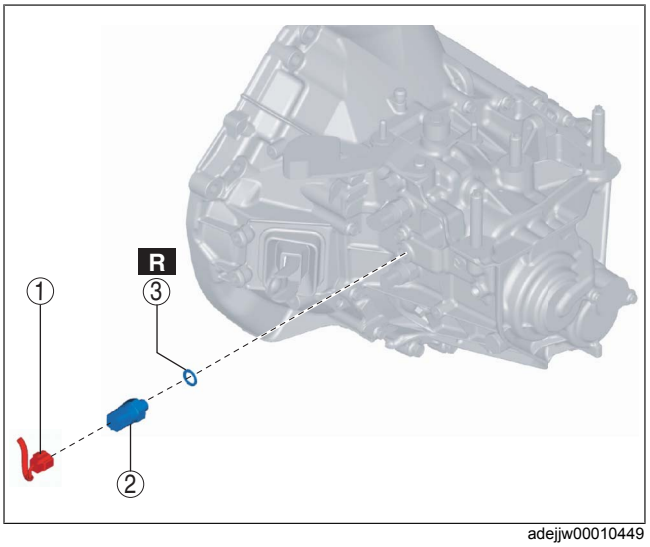


adejjw00010449

4. Install in the order indicated in the table.

1	Gasket
2	Neutral switch No.2
3	Neutral switch No.2 connector

5. Install the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

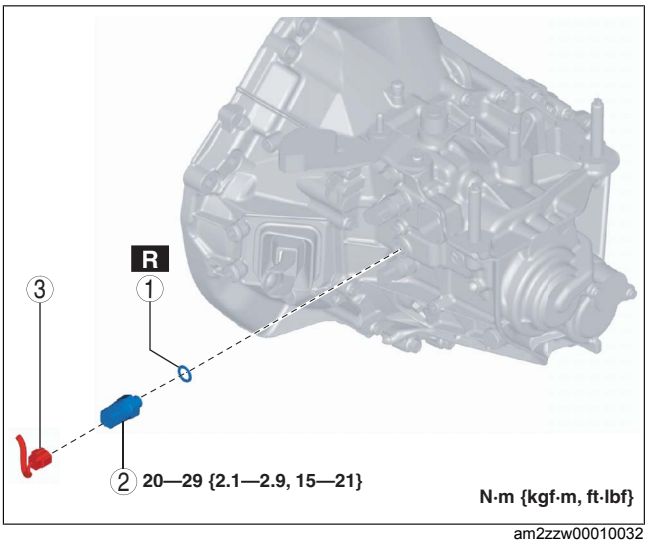

am2zzw00010032