
BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [F66M-R]

id0515n2159900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
3. Remove in the order indicated in the table.

1	Back-up light switch connector
2	Back-up light switch
3	Gasket

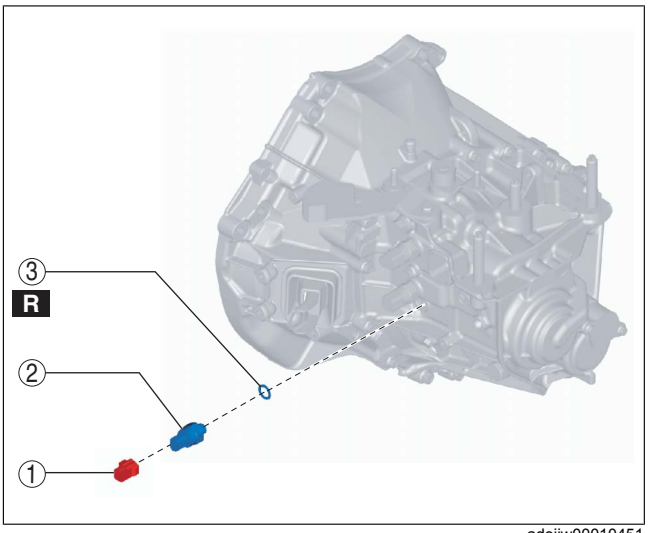


adejjw00010451

4. Install in the order indicated in the table.

1	Gasket
2	Back-up light switch
3	Back-up light switch connector

5. Install the air cleaner, air hose and fresh air duct as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)

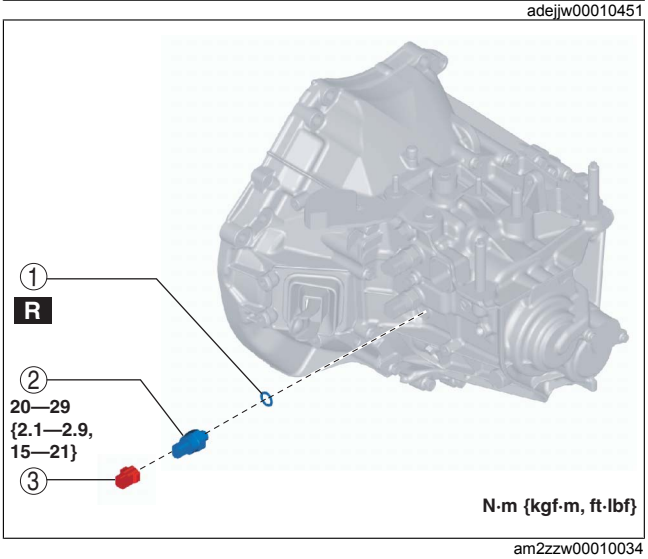

am2zzw00010034