
MANUAL TRANSAXLE [F66M-R]

id0515n2283800

Purpose, Function


- The manual transaxle converts the drive force (speed, torque, rotation direction) input from the engine according to the shift lever operation inside the vehicle.

Construction

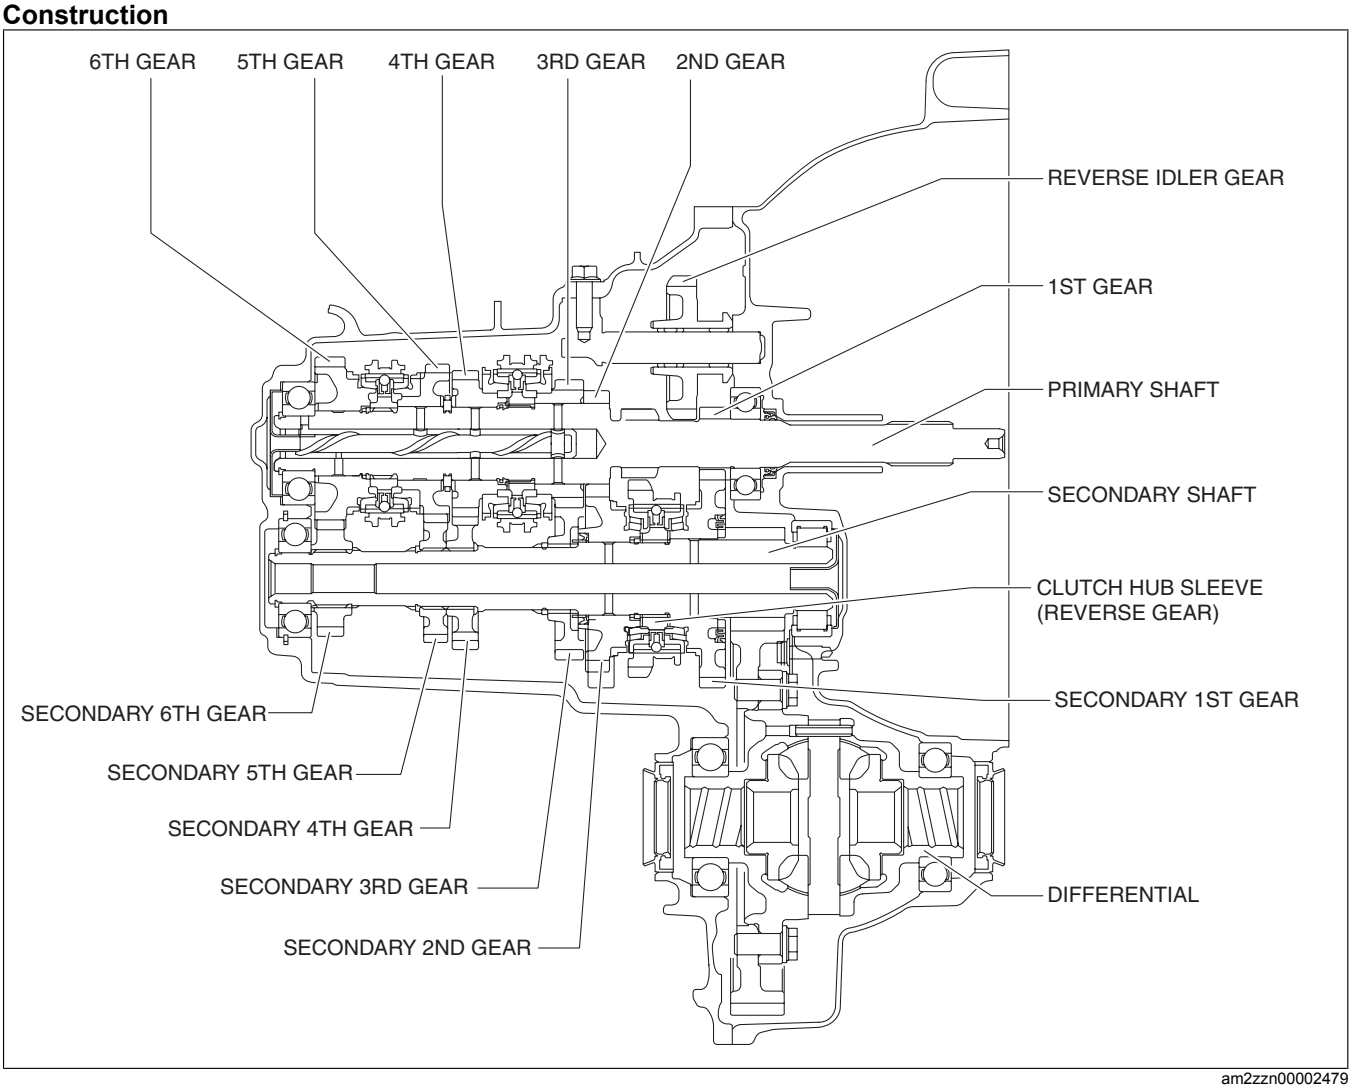

am2zzn00002479

Operation

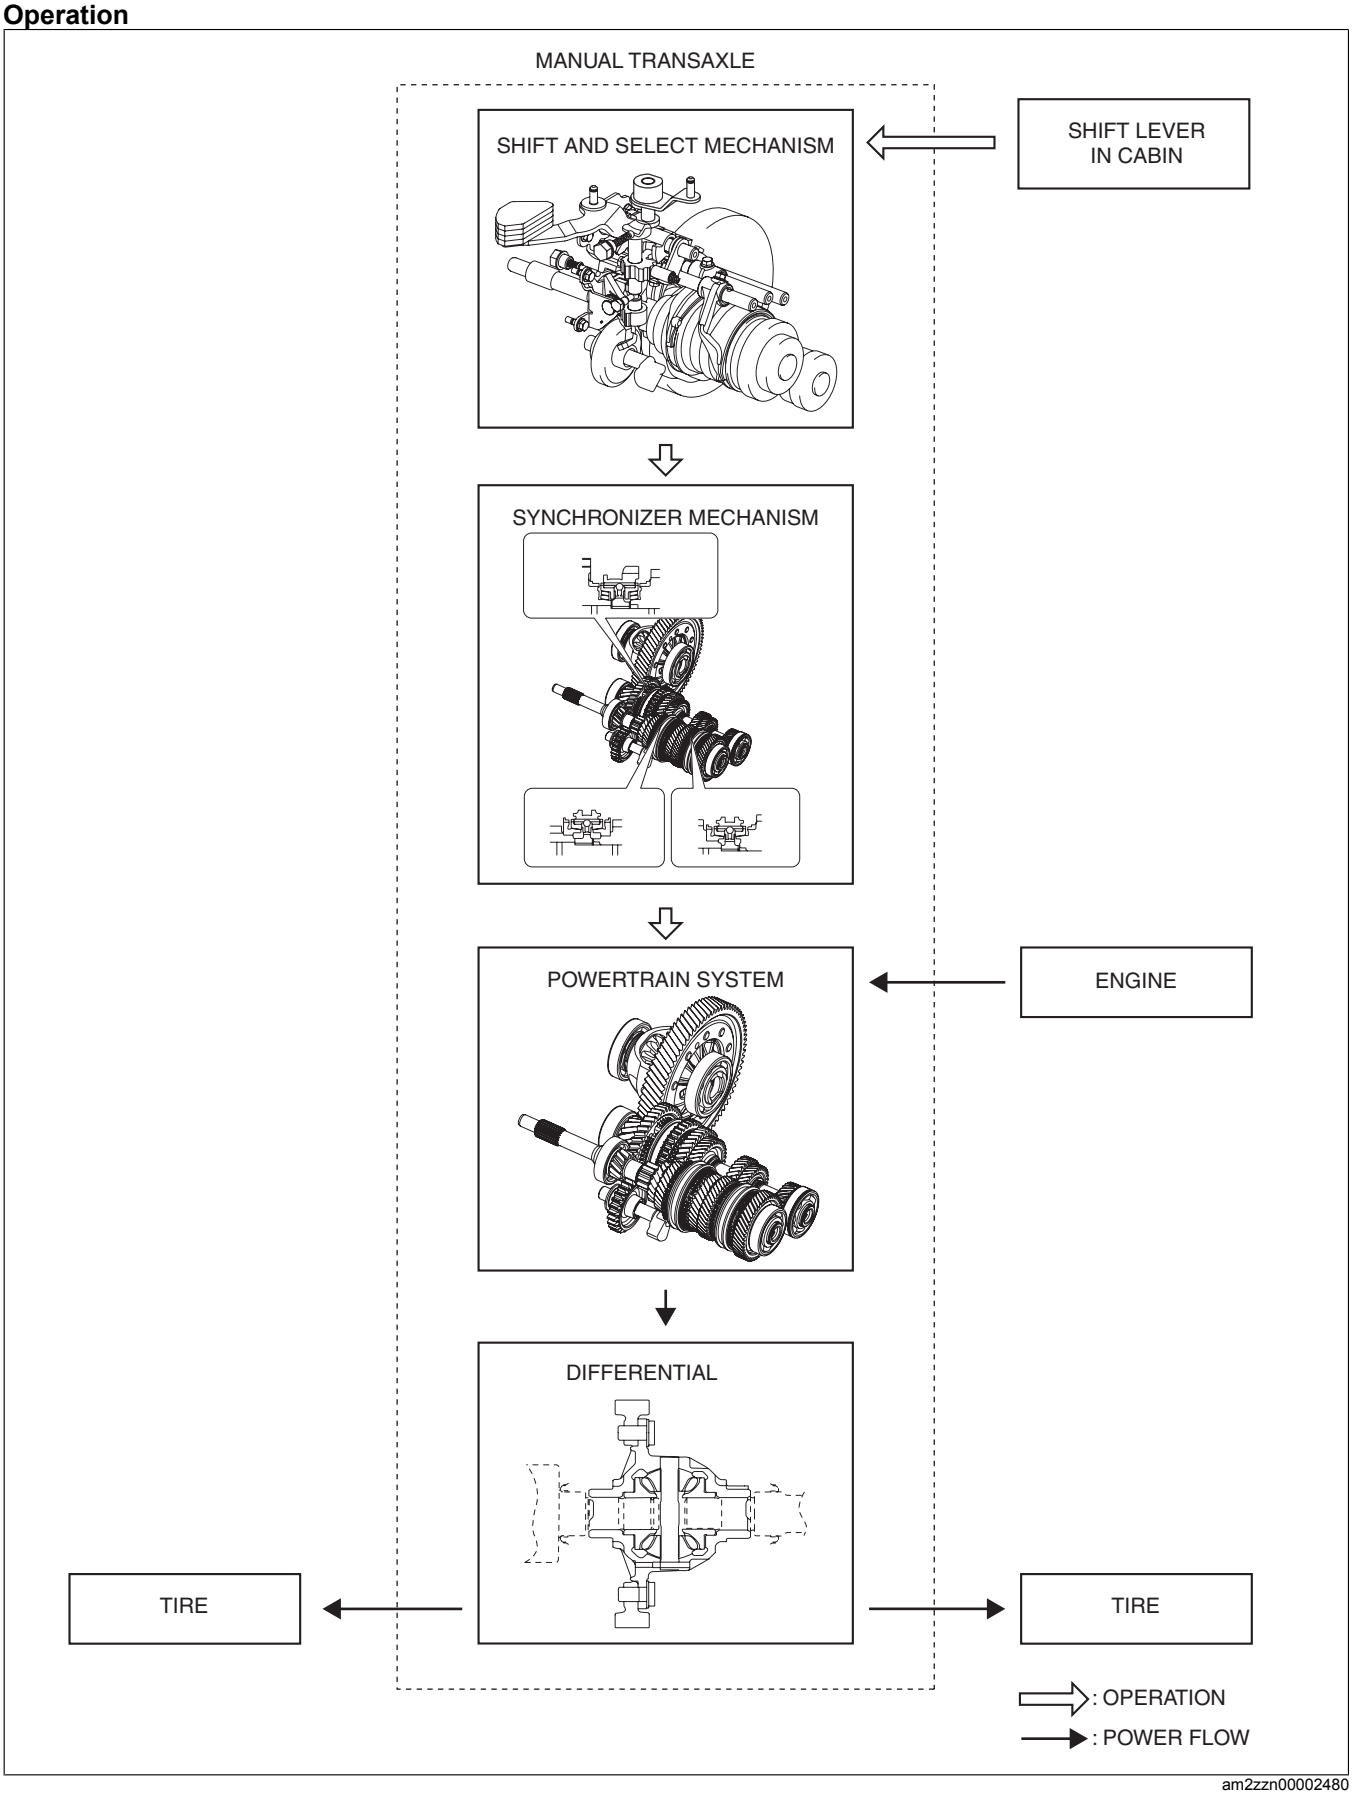

am2zzn00002480