
## SHIFT LEVER [F66M-R]

id0516n2283700

### Purpose, Function

- The shift lever transmits the driver's intention to the manual transaxle via the control cable.

### Construction

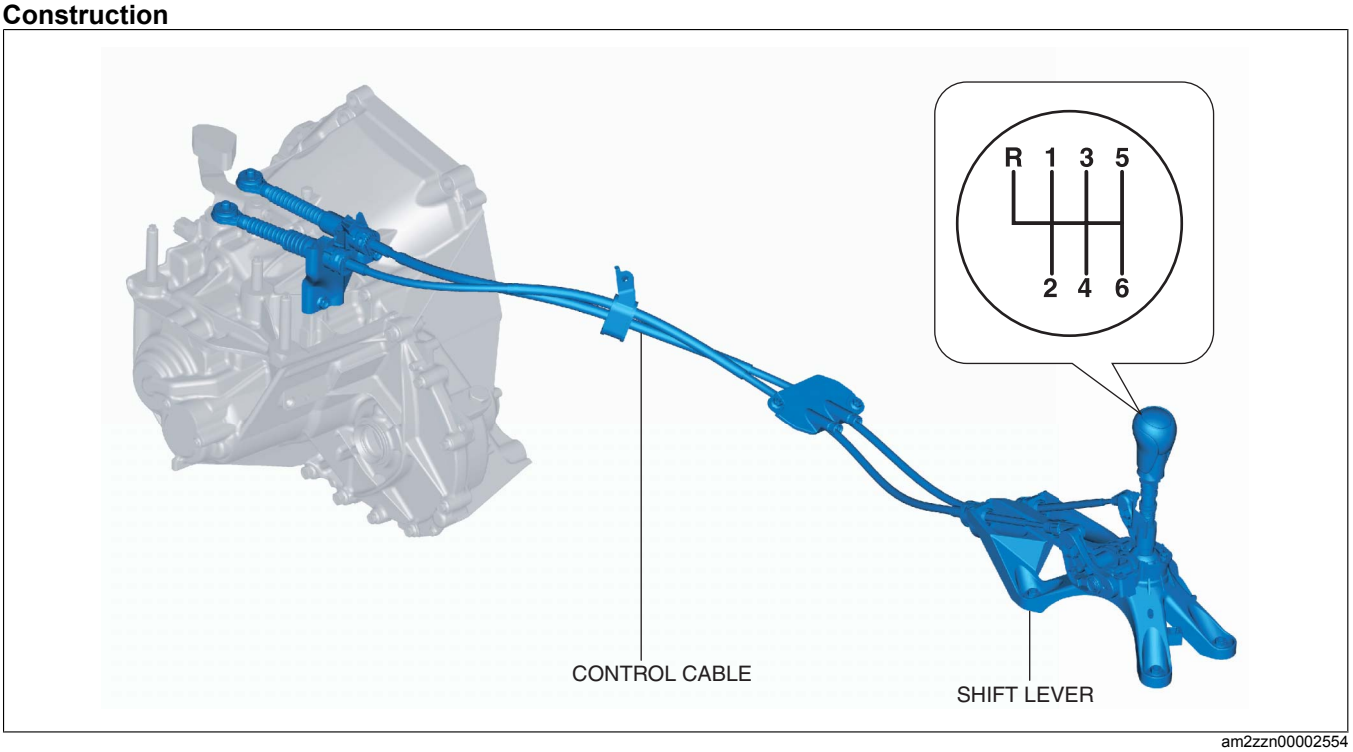


am2zzn00002554


### Shift lever

- The shift lever has an integrated guide plate to prevent improper shifting to 1st gear and reverse.

### Operation

#### 1GR shifting

- The guide plate located on the shift lever prevents improper shifting to the reverse gear while shifting to 1st gear by restricting the movement of the shift lever.

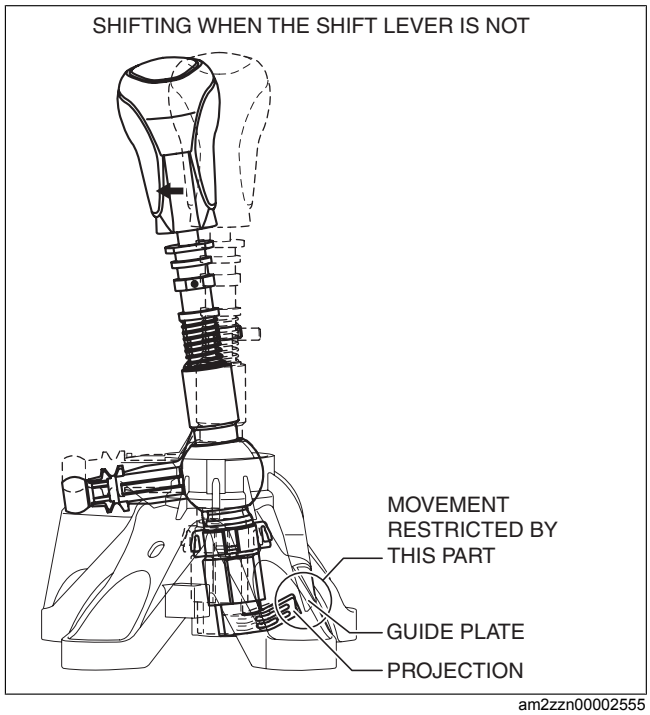



am2zzn00002555

**Reverse shifting**

- When shifting into reverse, once the shift lever is pressed down and moved towards the reverse position.

SHIFTING WHEN THE SHIFT LEVER IS PRESSED DOWN

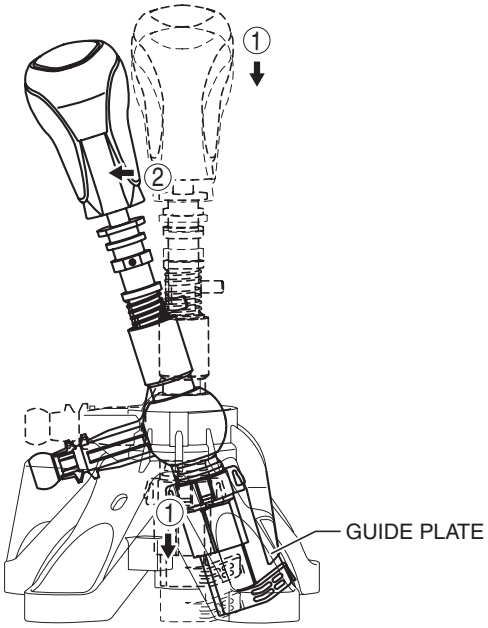


am2zzn00002556