COUPLER COMPONENT REMOVAL/INSTALLATION [CW6A-EL]


id0517l1112400

Warning

- **A hot transaxle and ATF can cause severe burns. Turn off the engine and wait until they are cool.**
- **Always wear protective eye wear when using the air compressor. If the air compressor is used, any particles of dirt or sludge could spatter and get into the eyes.**


Caution

- **If the control valve body is placed with the shift solenoid side facing down on a workbench, the wiring harness or connector of the coupler component may be damaged. When placing the control valve body on a workbench, always place it with the control valve body connector side facing down. However if the control valve body is directly placed on the workbench, the control valve body connector area or the sensor may be damaged. Always place the control valve body on an impact-absorbing material, which is free of foreign matter, so that the connector area and the sensor do not contact the workbench directly.**

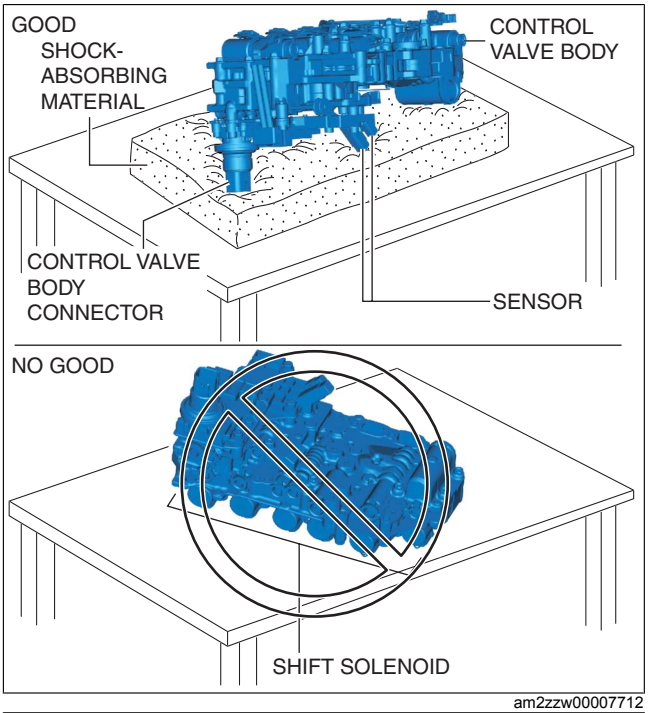

am2zzw00007712

- **Touching the ATF temperature sensor element or the lead wires by hand may cause a malfunction. When handling the coupler component, do not touch the ATF temperature sensor element or the lead wires.**
- **Do not apply excessive force to the coupler component wiring harness.**
- **Do not twist the coupler component wiring harness.**

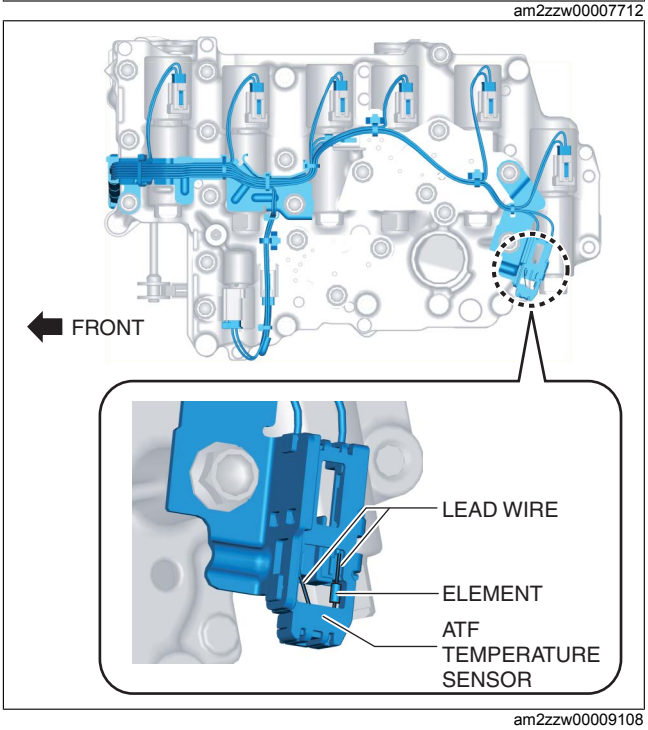


am2zzw00009108

1. Select the selector lever to P position.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
4. Clean the transaxle exterior throughout with a steam cleaner or cleaning solvents.
5. Remove the air cleaner component. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6. Remove the control valve body. (See CONTROL VALVE BODY REMOVAL/INSTALLATION [CW6A-EL].)
7. Remove the oil seal (control valve body). (See OIL SEAL (CONTROL VALVE BODY) REPLACEMENT [CW6A-EL].)

8. Release the tab shown in the figure and disconnect the connector.

Caution

- **When disconnecting connectors, grasp the connectors, not the wiring harnesses. Otherwise, the wiring harnesses may be pulled out of the connector causing poor contact. Disconnect the connector by pulling the connector part straight with the connector tab released.**

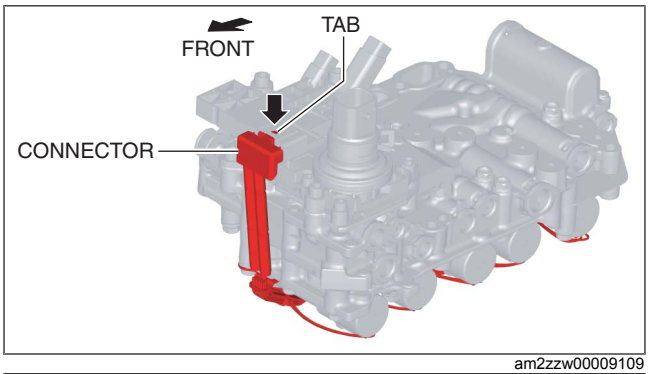


am2zzw00009109

9. Loosen the bolts shown in the figure.


Note

- The connector can be disconnected easily by loosening the bolts.

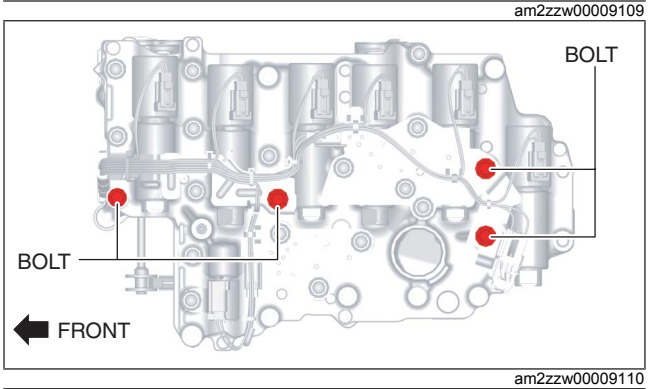

am2zzw00009110

10. Release the ON/OFF solenoid connector tab using a finger and disconnect the ON/OFF solenoid connector.

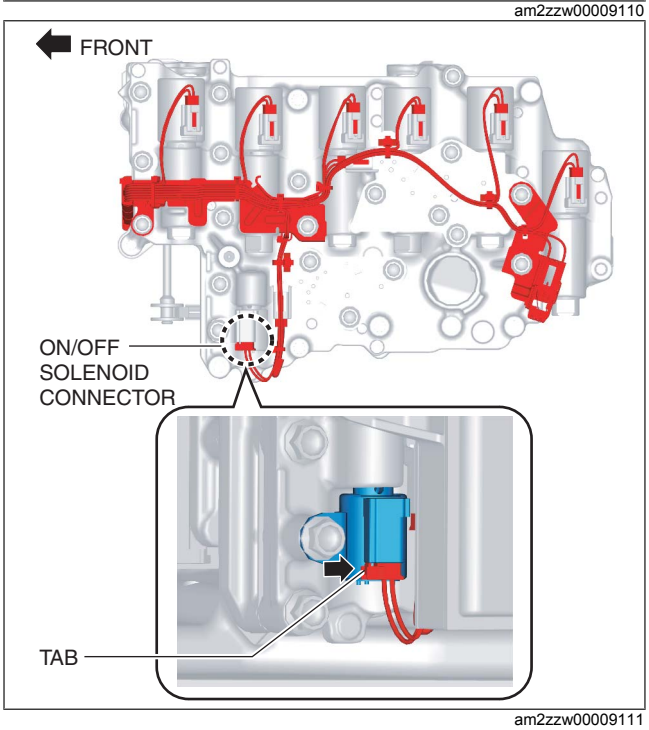


am2zzw00009111

11. Insert a precision flathead screwdriver and move it in the direction of the arrow to disconnect shift solenoid connectors and oil pressure switch connectors.


Caution

- **Do not scratch the shift solenoid, shift solenoid connector, oil pressure switch, and oil pressure switch connector with the precision flathead screwdriver.**
- **When disconnecting connectors, grasp the connectors, not the wiring harnesses. Otherwise, the wiring harnesses may be pulled out of the connector causing poor contact.**

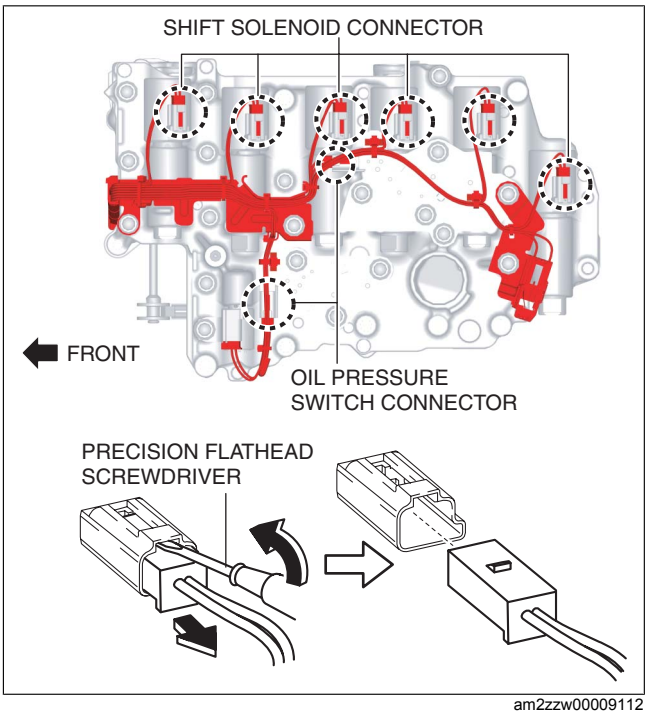


am2zzw00009112

12. Using pliers, detach the tie wrap clips secured to oil pressure switch A.

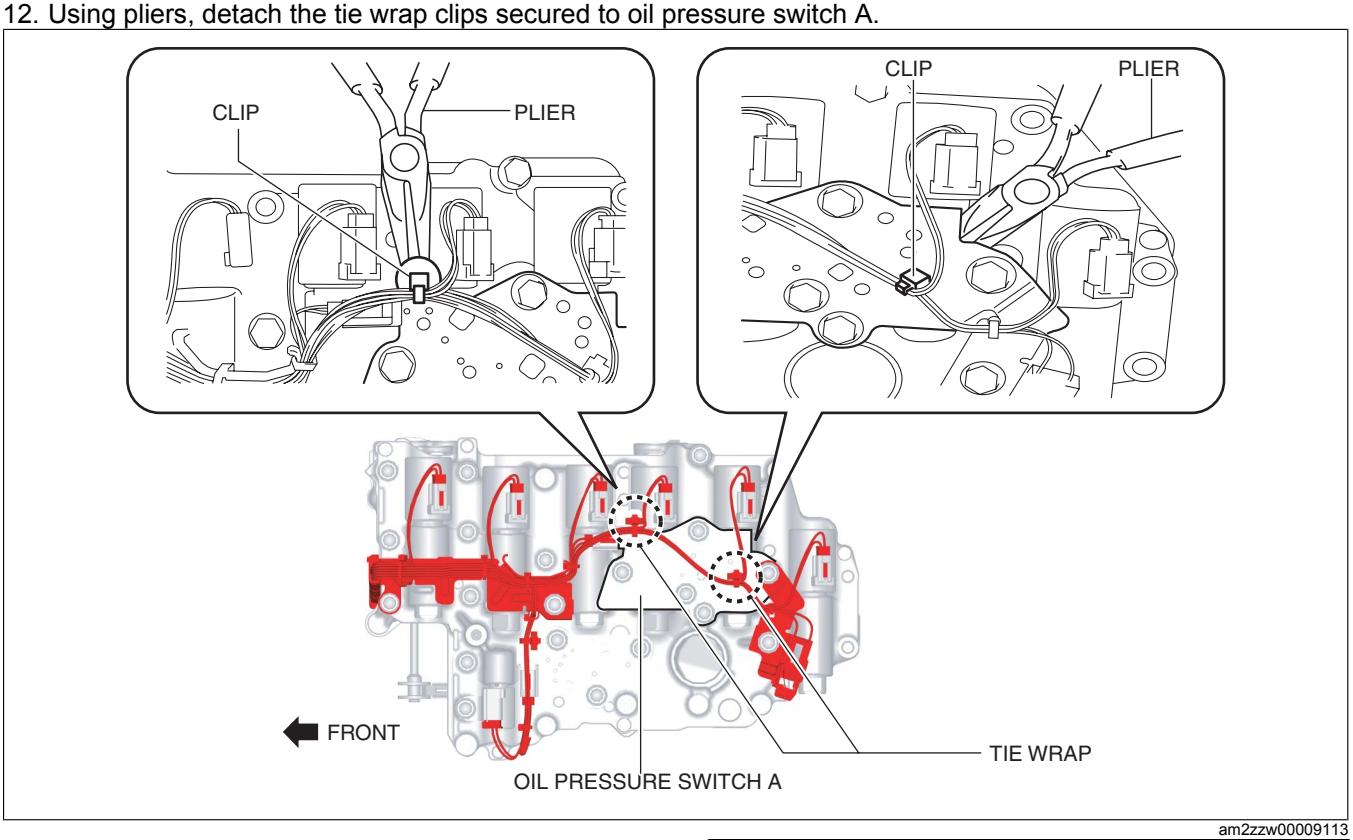


am2zzw00009113

13. Using the following procedure, remove the tie wrap clip secured to the oil pressure switch B.

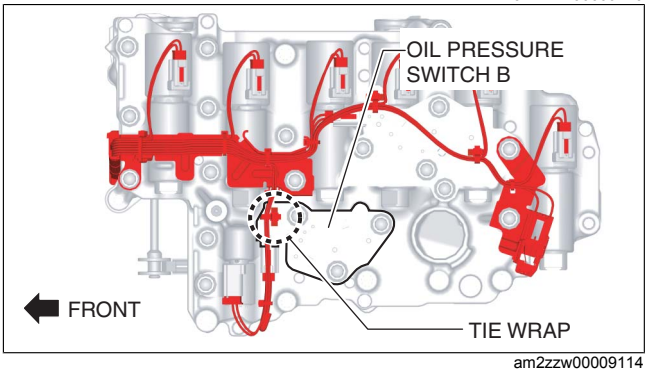

am2zzw00009114


(1) Using pliers, pull up the A part of the tie wrap.

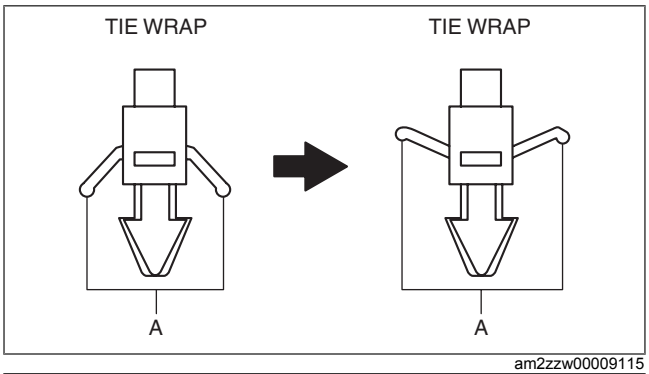

am2zzw00009115


(2) Using nippers, cut the tie wrap clip.

Caution
- **Collect and dispose of the cut tie wrap clip and its fragments securely.**

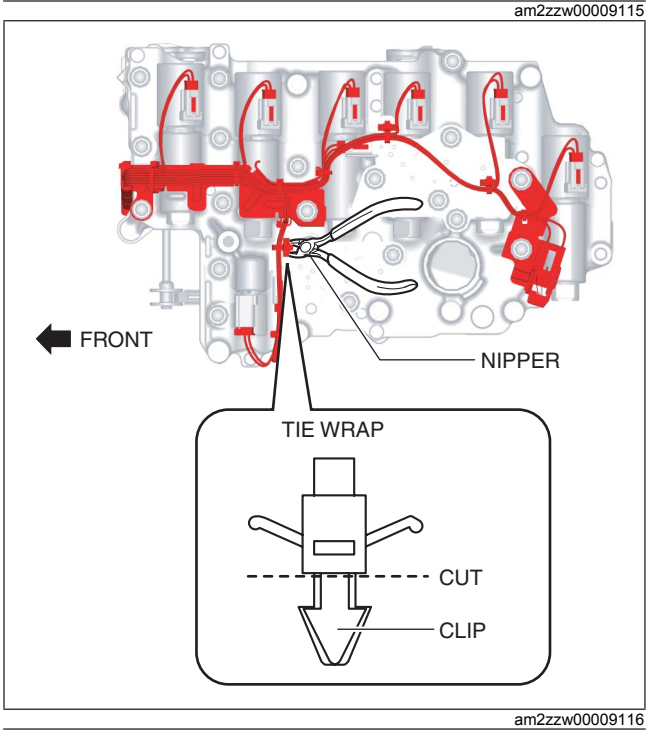


am2zzw00009116

14. Remove the coupler component.

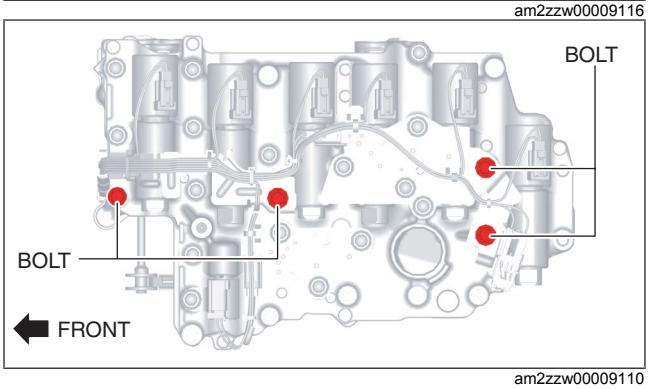

am2zzw00009110


Caution
- **The pins for securing the solenoid valves are located in the area circled with a dotted line, and they may drop down and be lost during coupler component removal. When removing the coupler component, be careful not to drop the pins for securing the solenoid valves, and if they do drop, be careful that they do not got lost.**

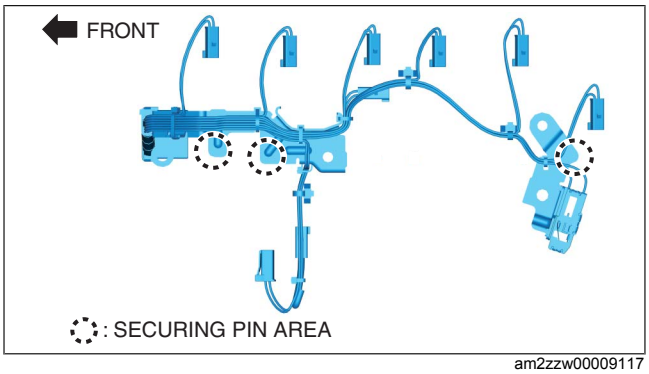

am2zzw00009117

15. Connect the oil pressure switch connectors and shift solenoid connectors.


Caution
- **Insert the connector until a click is heard.**

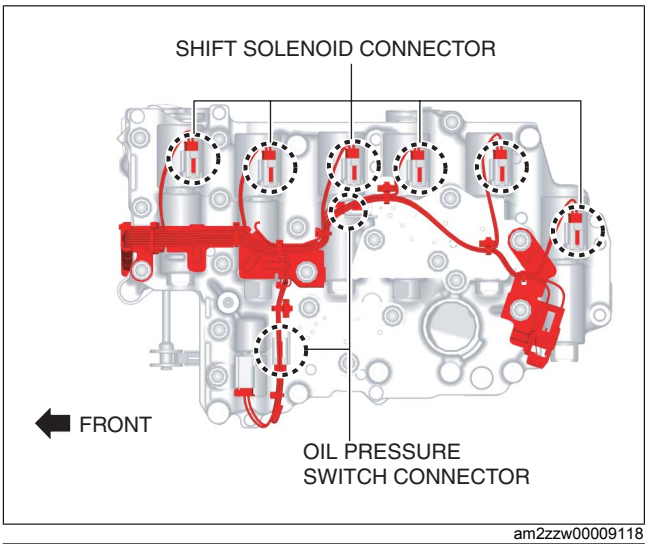

am2zzw00009118

16. Connect the ON/OFF solenoid connector.

Caution
- **Insert the connector until a click is heard.**

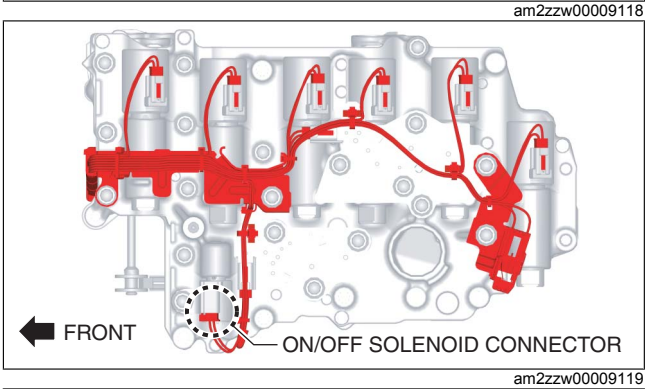


am2zzw00009119

17. Install the coupler component.

Caution
- **When tightening the bolts, be careful not to pinch the coupler component wiring harness. If the wiring harness is pinched, replace the coupler component.**

Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}

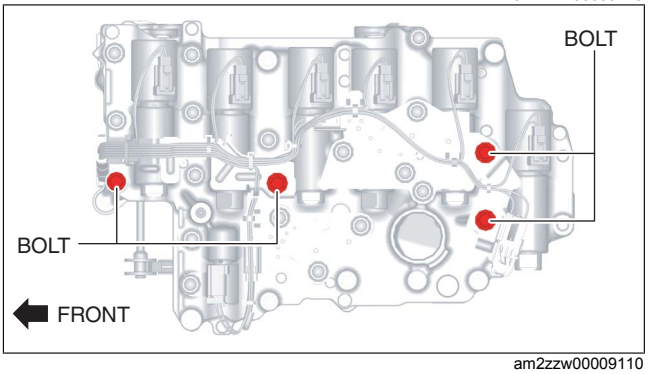


am2zzw00009110

18. Assemble new tie wrap clips.

Caution
- **Assemble the tie wrap clips in the direction shown in the figure.**
- **Verify that the tie wrap clips are assembled to the control valve body securely.**
- **Be careful not to let the coupler component wiring harness contact the surrounding parts.**
- **Do not twist the coupler component wiring harness.**


19. Install the control valve body. (See CONTROL VALVE BODY REMOVAL/INSTALLATION [EW6A-EL].)
20. Install the oil seal (control valve body). (See OIL SEAL (CONTROL VALVE BODY) REPLACEMENT [CW6A-EL].)
21. Install the hose clamp. (See CONTROL VALVE BODY REMOVAL/INSTALLATION [CW6A-EL].)

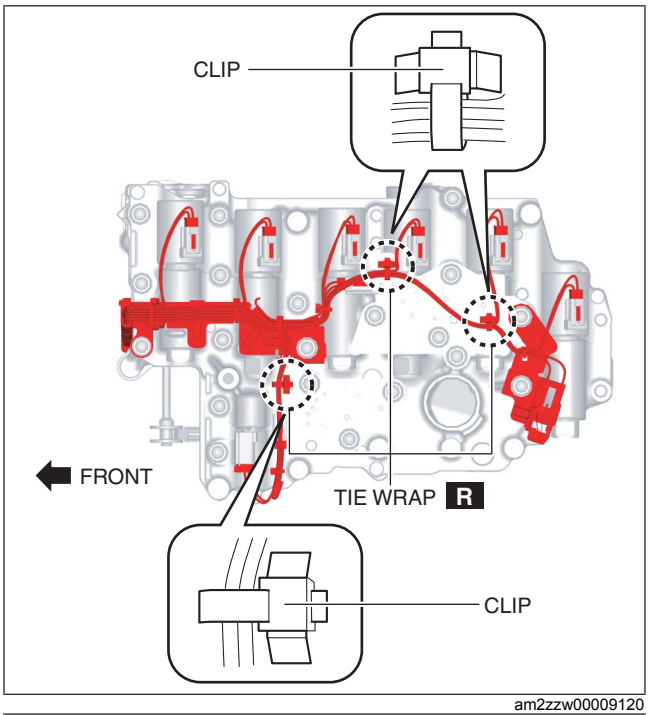

am2zzw00009120

22. Connect the control valve body connector.

Caution
- **Make sure that your hand does not touch the terminal as the connector terminal could be damaged.**
- **Verify that there is no fluid or foreign matter adhering to the connector before connecting the connector.**
- **Insert the connector straight as the connector terminal could be damaged.**
- **Rotate the connector lever until a click is heard.**

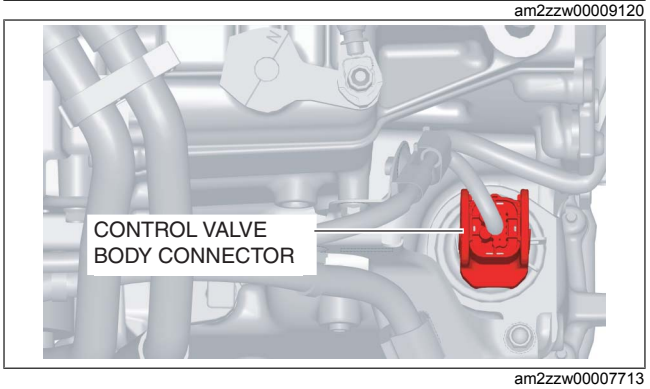

am2zzw00007713

23. Add the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [CW6A-EL].)
24. Install the air cleaner component. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
25. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
26. Perform the “Mechanical System Test”. (See MECHANICAL SYSTEM TEST [CW6A-EL].)
27. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)