ON/OFF SOLENOID REMOVAL/INSTALLATION [CW6A-EL]

id0517l1117100


Warning

- **A hot transaxle and ATF can cause severe burns. Turn off the engine and wait until they are cool.**
- **Always wear protective eye wear when using the air compressor. If the air compressor is used, any particles of dirt or sludge could spatter and get into the eyes.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Clean the transaxle exterior throughout with a steam cleaner or cleaning solvents.
4. Drain the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [CW6A-EL].)
5. Remove the oil pan.

Caution

- **To avoid damaging the control valve body, if there is a large amount of foreign material at the bottom of the oil pan when the oil pan is removed, replace the oil strainer with a new one.**
- **If there is not a large amount of foreign material at the bottom of the oil pan, the oil strainer does not have to be replaced.**

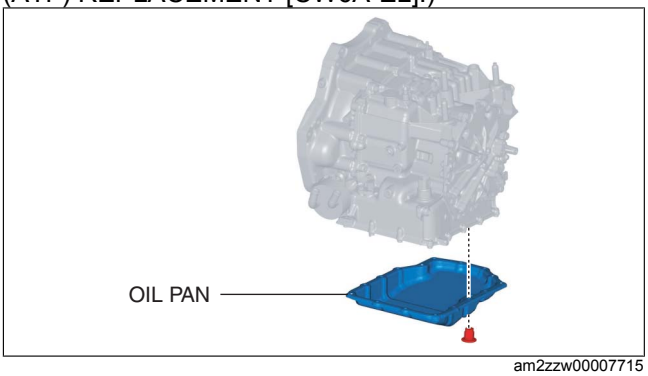


am2zzw00007715

Note


- Always use new oil pan installation bolts when re-installing the oil pan because the oil pan installation bolts cannot be reused.

6. Release the ON/OFF solenoid connector tab using a finger and disconnect the ON/OFF solenoid connector.

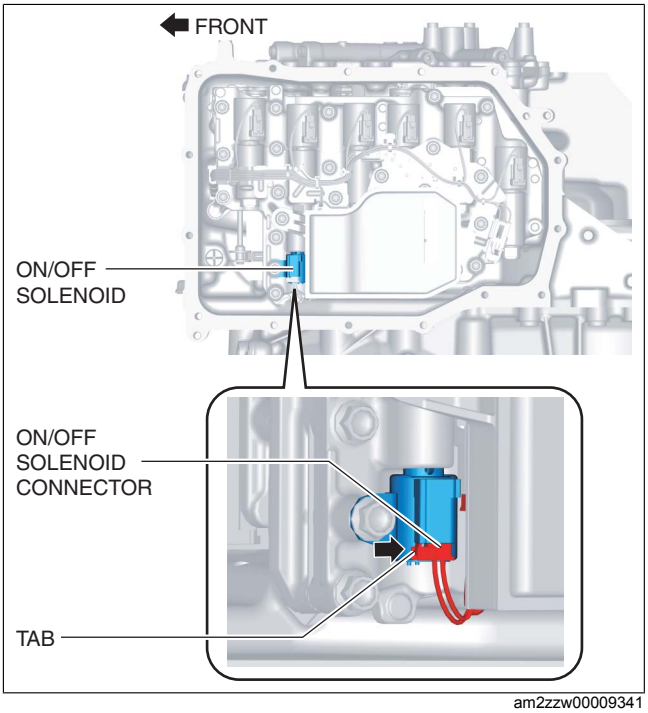

am2zzw00009341


7. Remove the bolt shown in the figure and remove the ON/OFF solenoid.

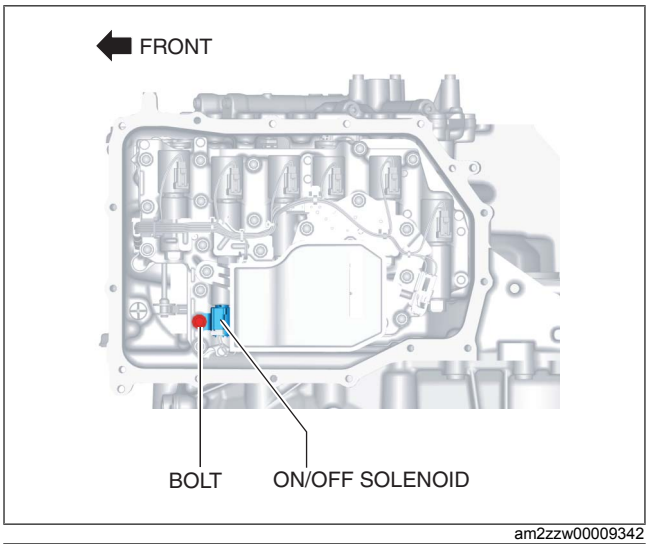

am2zzw00009342


8. Install the ON/OFF solenoid and tighten the bolt.

Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}

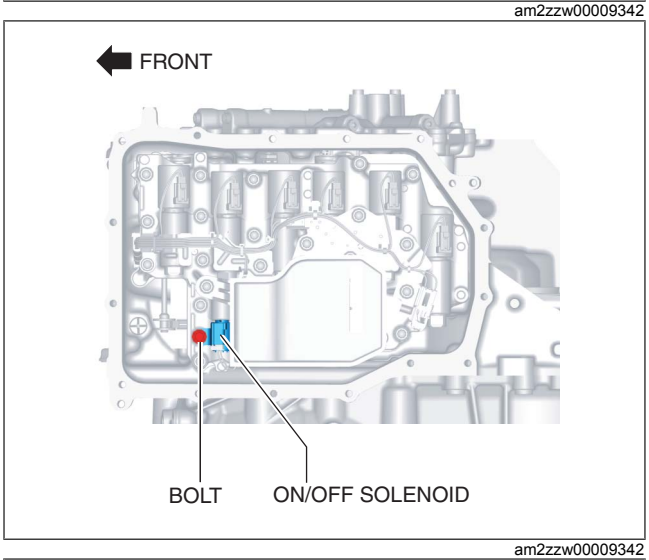

am2zzw00009342


9. Connect the ON/OFF solenoid connector.

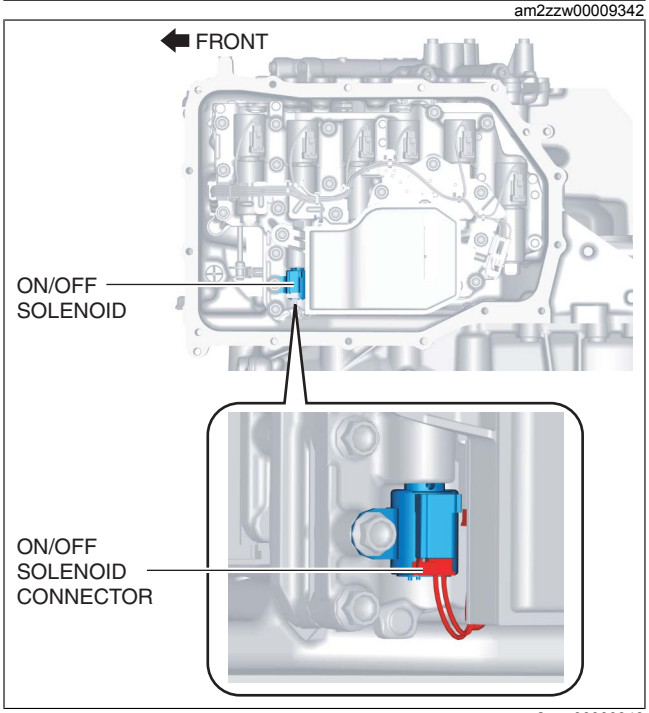

am2zzw00009343

10. Apply a light coat of silicone sealant (TB1217E or equivalent) to the contact surfaces of the oil pan and transaxle case.


    Caution
    - **Clean any remaining silicone sealant on the contact surface of the transaxle case and oil pan, and degrease the sealant area. Otherwise, oil could leak.**

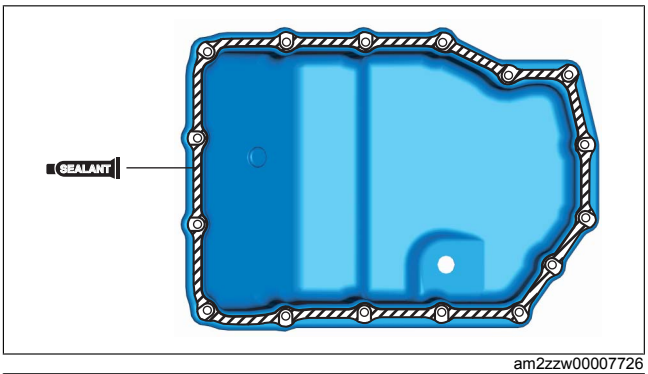

am2zzw00007726

11. Install the oil pan with new bolts before the applied sealant starts to harden.

    Tightening torque
    8—10 N·m {82—101 kgf·cm, 71—88 in·lbf}

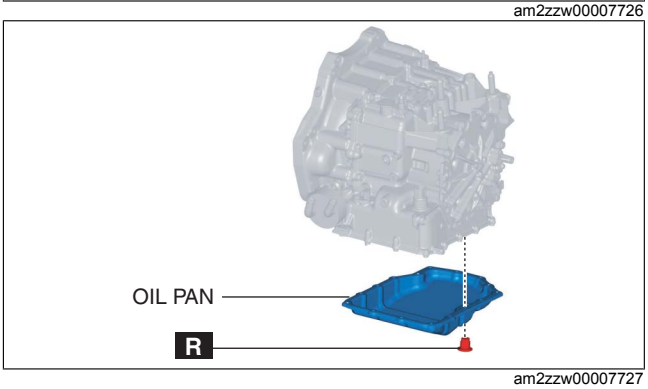

am2zzw00007727

12. Add the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [CW6A-EL].)
13. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
14. Perform the “Mechanical System Test”. (See MECHANICAL SYSTEM TEST [CW6A-EL].)
15. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)