
AUTOMATIC TRANSAXLE LOCATION INDEX [CW6A-EL]

id0517l1118200

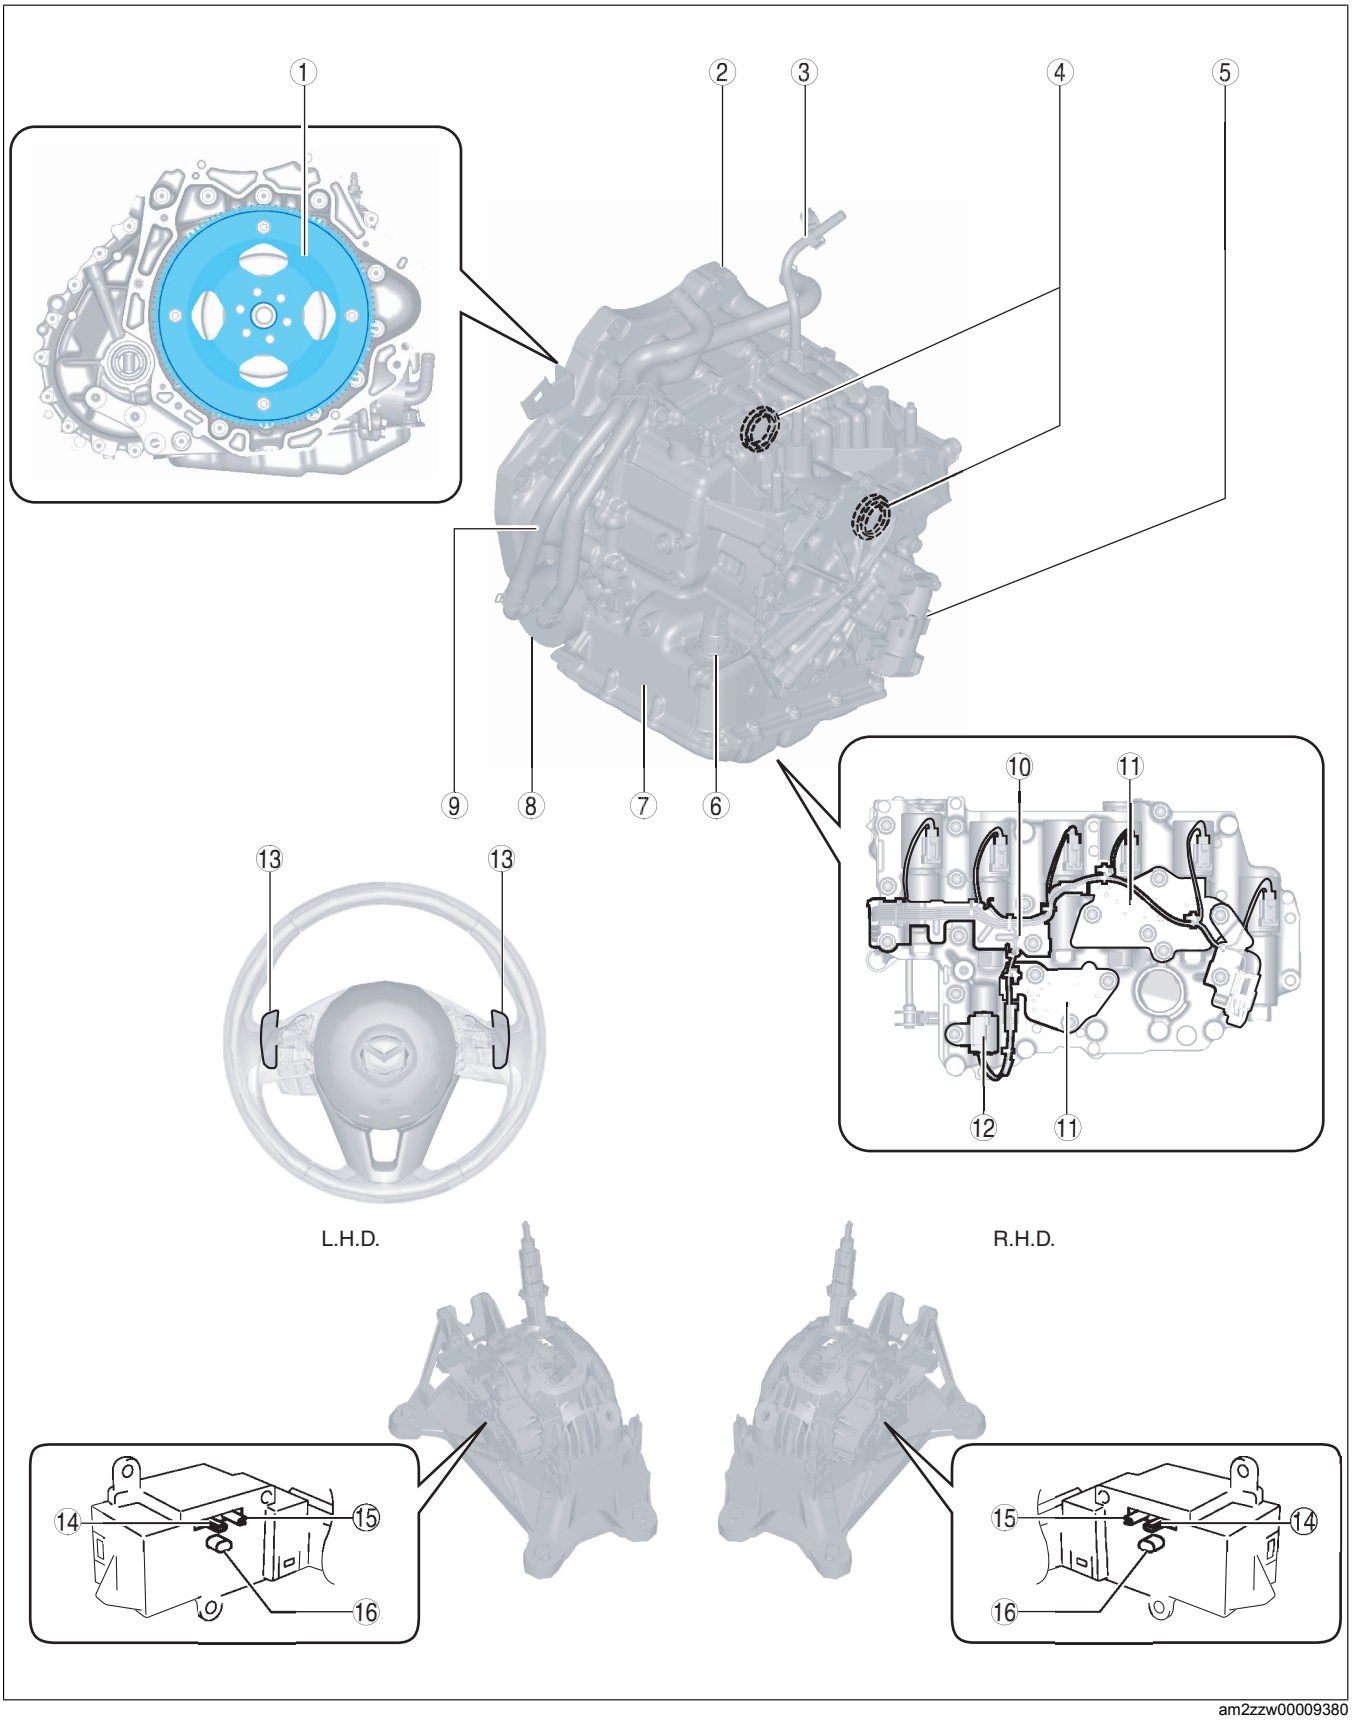

am2zzw00009380

1	Drive plate (See DRIVE PLATE REMOVAL/INSTALLATION [CW6A-EL].)

2	Automatic transaxle (See MECHANICAL SYSTEM TEST [CW6A-EL].) (See ROAD TEST [CW6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [CW6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [CW6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) ADJUSTMENT [CW6A-EL].) (See INITIAL LEARNING [CW6A-EL].) (See AUTOMATIC TRANSAXLE REMOVAL/ INSTALLATION [CW6A-EL].)
3	Breather hose (See AUTOMATIC TRANSAXLE REMOVAL/ INSTALLATION [CW6A-EL].)
4	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [CW6A-EL].)
5	Electric AT oil pump (if equipped) (See ELECTRIC AT OIL PUMP REMOVAL/ INSTALLATION [CW6A-EL].)
6	Oil seal (control valve body) (See OIL SEAL (CONTROL VALVE BODY) REPLACEMENT [CW6A-EL].)
7	Control valve body (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [CW6A-EL].) (See TCM CONFIGURATION [CW6A-EL].)
8	Oil cooler (See OIL COOLER REMOVAL/INSTALLATION [CW6A-EL].)
9	Water hose (See OIL COOLER REMOVAL/INSTALLATION [CW6A-EL].)
10	Coupler component (See COUPLER COMPONENT REMOVAL/ INSTALLATION [CW6A-EL].)
11	Oil pressure switch (See OIL PRESSURE SWITCH REPLACEMENT [CW6A-EL].)
12	ON/OFF solenoid (See ON/OFF SOLENOID REMOVAL/ INSTALLATION [CW6A-EL].)
13	Steering shift switch (See STEERING SHIFT SWITCH INSPECTION [CW6A-EL].) (See STEERING SHIFT SWITCH REMOVAL/ INSTALLATION [CW6A-EL].)
14	Up switch (See UP SWITCH INSPECTION [CW6A-EL].) (See UP SWITCH REMOVAL/INSTALLATION [CW6A-EL].)
15	Down switch (See DOWN SWITCH INSPECTION [CW6A-EL].) (See DOWN SWITCH REMOVAL/INSTALLATION [CW6A-EL].)
16	M position switch (See M POSITION SWITCH INSPECTION [CW6A-EL].) (See M POSITION SWITCH REMOVAL/ INSTALLATION [CW6A-EL].)