
OIL SEAL (DIFFERENTIAL) REPLACEMENT [CW6A-EL]

id0517l1118800


Transaxle Case Side

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Drain the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [CW6A-EL].)
3. Disconnect the front drive shaft (LH) from the transaxle. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
4. Remove the oil seal using a tape-wrapped flathead screwdriver.

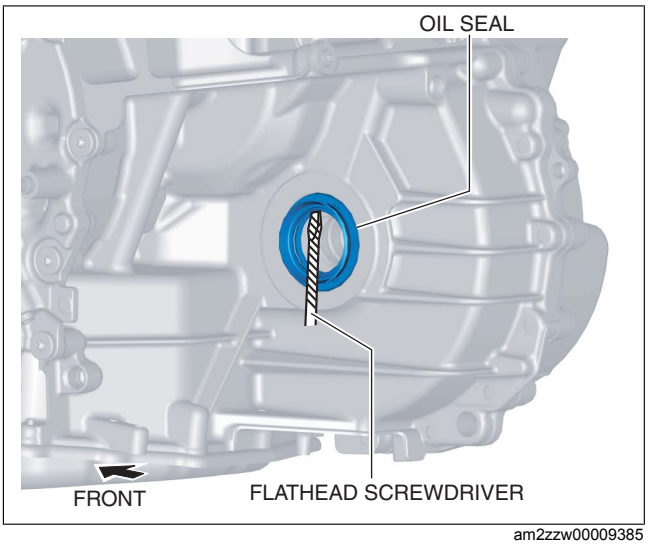

am2zzw00009385

5. Using the **SSTs** and a hammer, install a new oil seal.

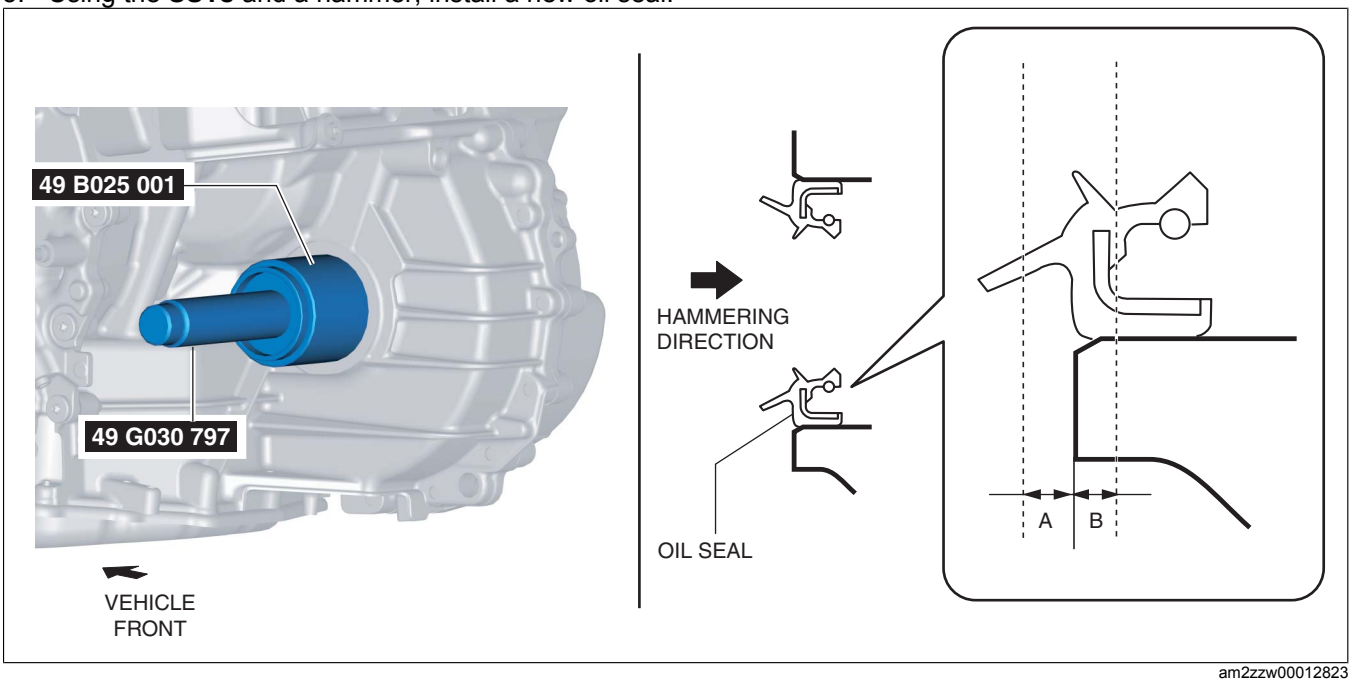

am2zzw00012823

A: 0.5 mm {0.02 in}
B: 0.5 mm {0.02 in}

6. Coat the lip of the oil seal with ATF.


Caution

- **The oil seal is easily damaged by the sharp edges of the drive shaft splines. Do not let the splines contact the oil seal.**

7. Install the front drive shaft (LH) to the transaxle. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
8. Add the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [CW6A-EL].)
9. Perform the “Mechanical System Test”. (See MECHANICAL SYSTEM TEST [CW6A-EL].)
10. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)


Converter Housing Side

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Drain the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [CW6A-EL].)
3. Disconnect the front drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
4. Remove the oil seal using a tape-wrapped flathead screwdriver.

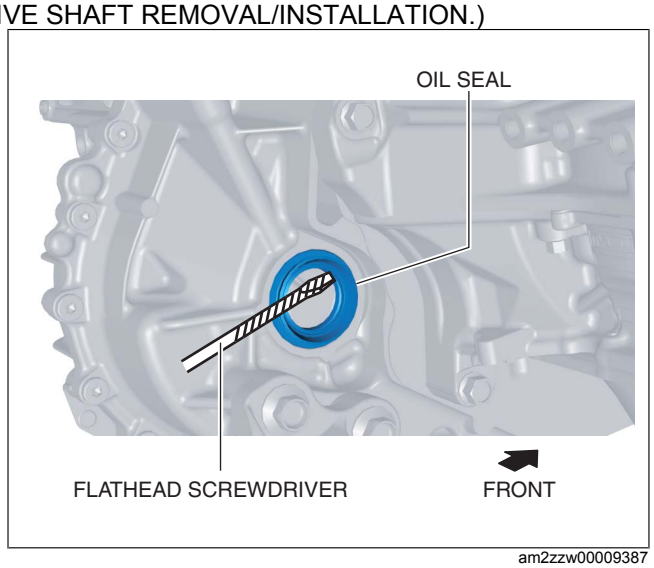

am2zzw00009387

5. Using the **SSTs** and a hammer, install a new oil seal.

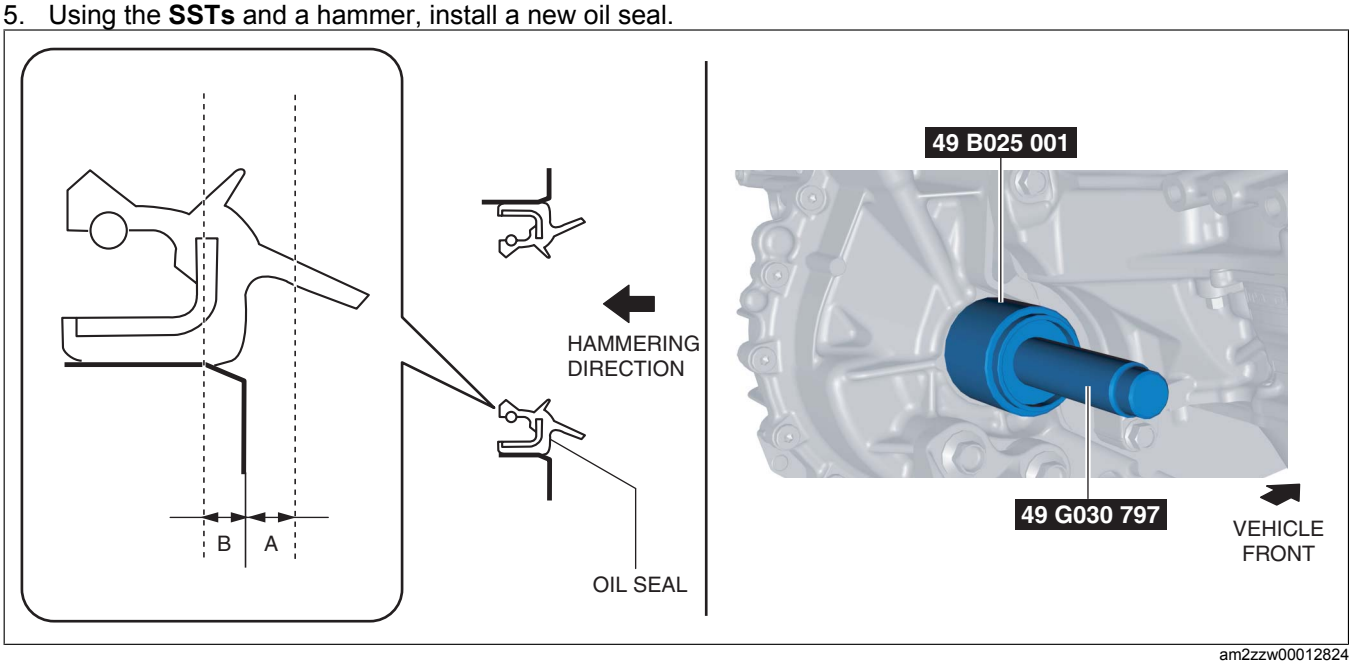

am2zzw00012824

A: 0.5 mm {0.02 in}
B: 0.5 mm {0.02 in}

6. Coat the lip of the oil seal with ATF.

Caution

- **The oil seal is easily damaged by the sharp edges of the drive shaft splines. Do not let the splines contact the oil seal.**

7. Install the front drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
8. Add the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [CW6A-EL].)
9. Perform the “Mechanical System Test”. (See MECHANICAL SYSTEM TEST [CW6A-EL].)
10. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)