## 2-6 BRAKE [CW6A-EL]


id0517l1351500

### Purpose/Function

- The 2-6 brake locks the rear internal gear and reduction internal gear while in 2GR and 6GR.


### Construction

- The 2-6 brake consists of the following parts shown in the figure.

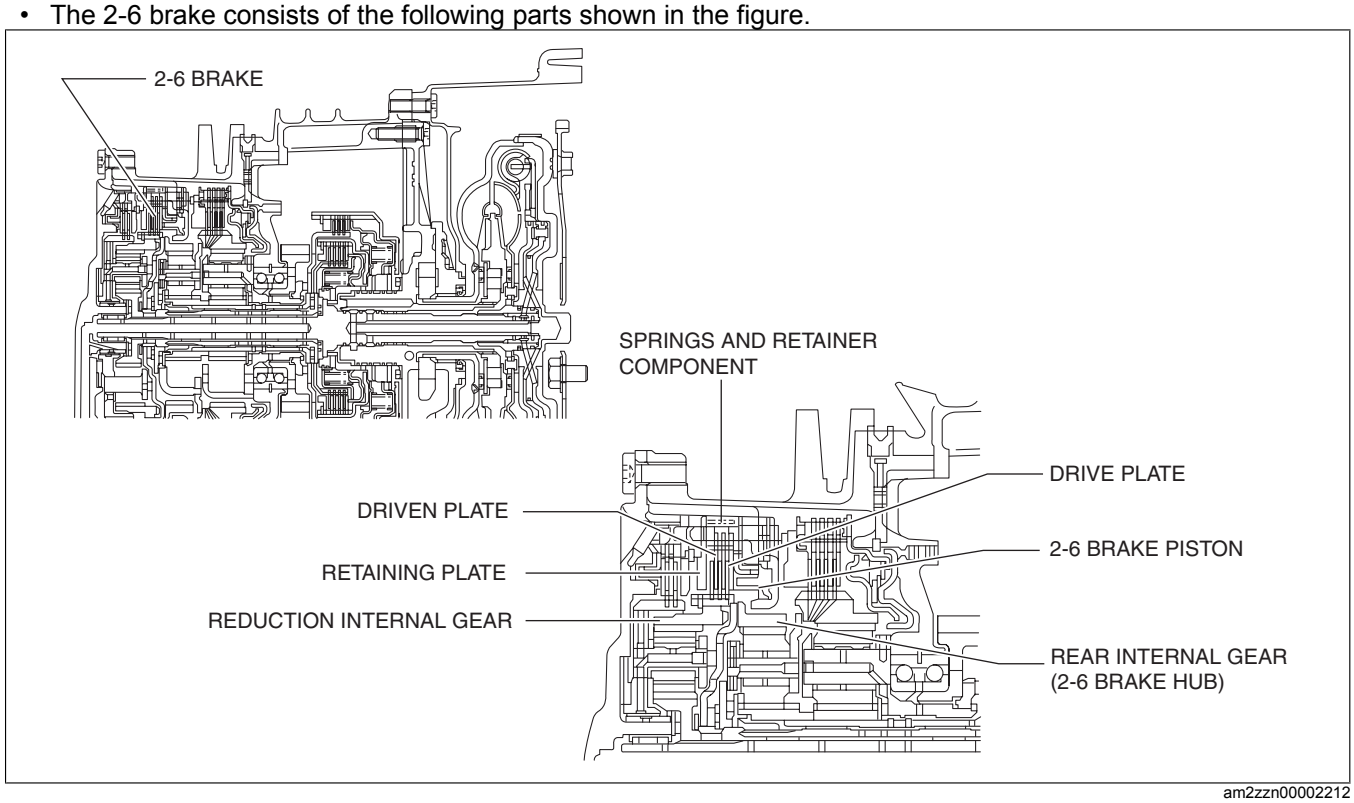



am2zzn00002212

- The driven plate of the 2-6 brake does not rotate because it is connected to the end cover component.

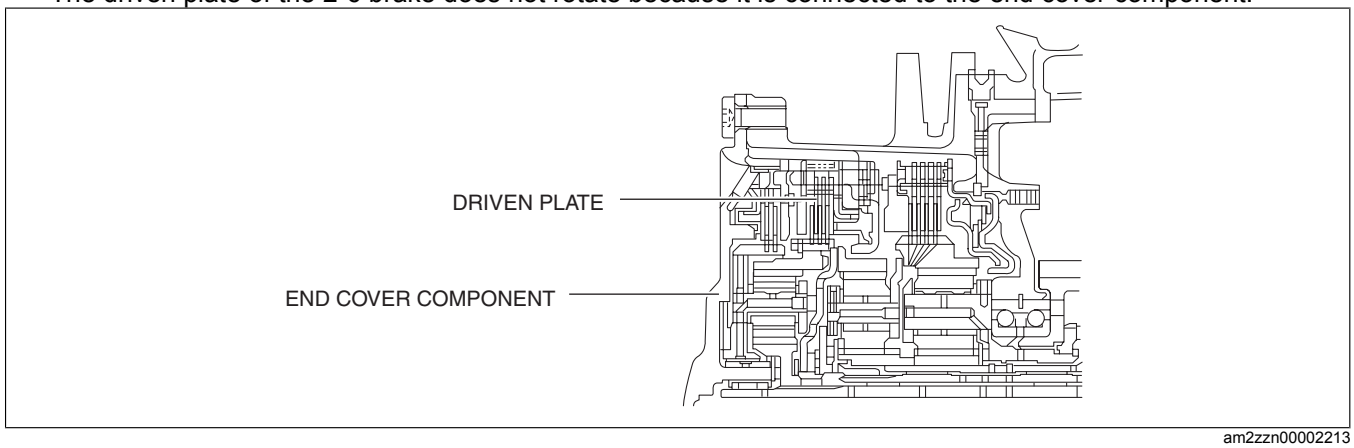


am2zzn00002213

- The drive plate of the 2-6 brake is engaged with the 2-6 brake hub and rear internal gear, and the 2-6 brake hub is splined to the reduction internal gear. Therefore, the rear internal gear and reduction internal gear are locked by the 2-6 brake.

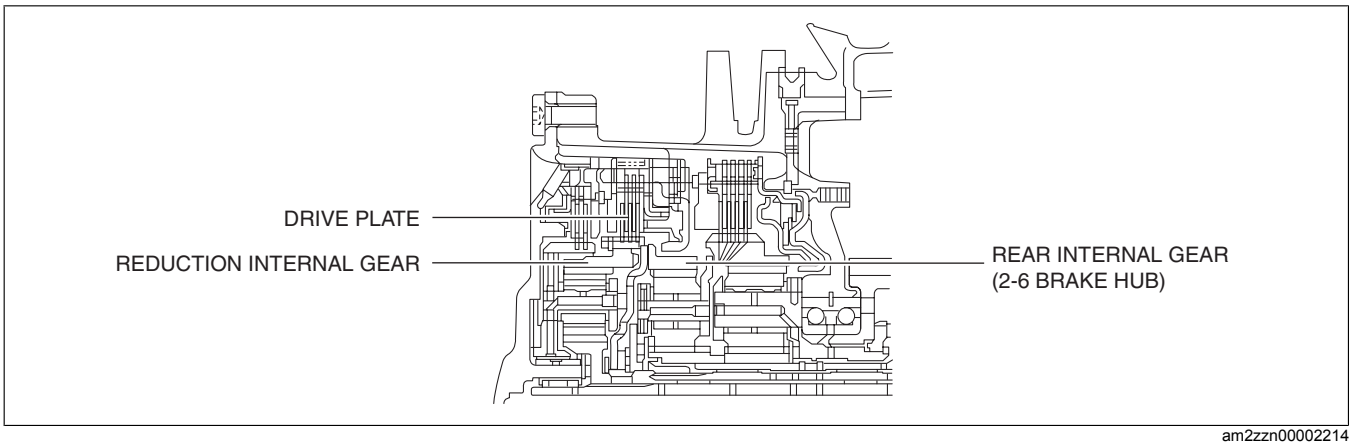



am2zzn00002214

- For the 2-6 brake piston, a compact and highly reliable bonded seal piston has been adopted in which the piston and seal are molded together.

**Operation**

- When hydraulic pressure is applied to the 2-6 brake piston, the drive plate and driven plate are pressure bonded to lock the rear internal gear and reduction internal gear.

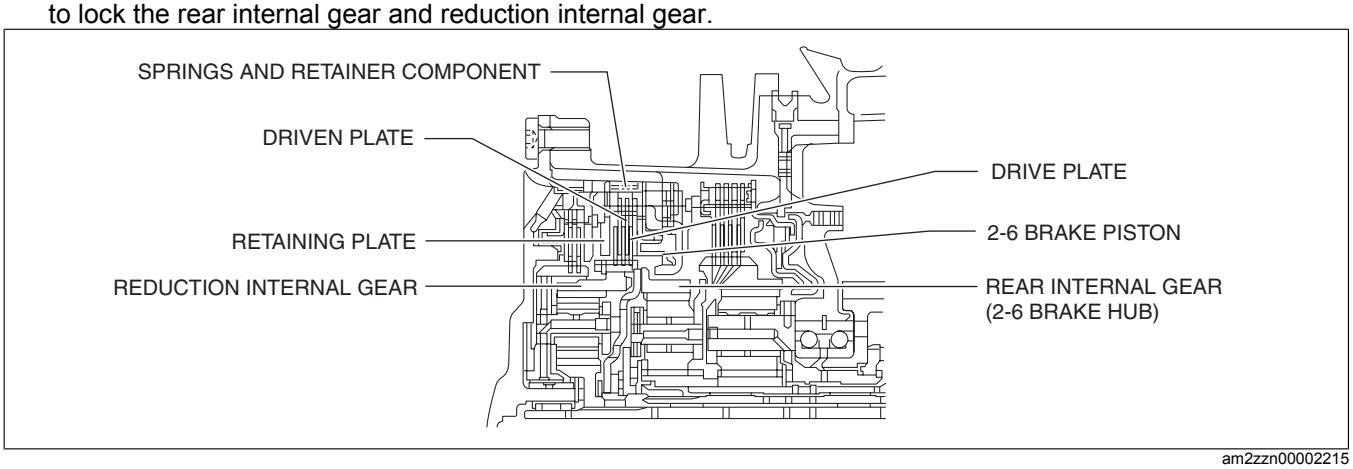


am2zzn00002215