PRIMARY GEAR [CW6A-EL]


id0517l1351900

Purpose/Function

- The primary gear transmits the drive force converted by the 3-piece planetary gear to the secondary gear.

Construction

- The primary gear is engaged with the front planetary carrier and rotates as a single unit.

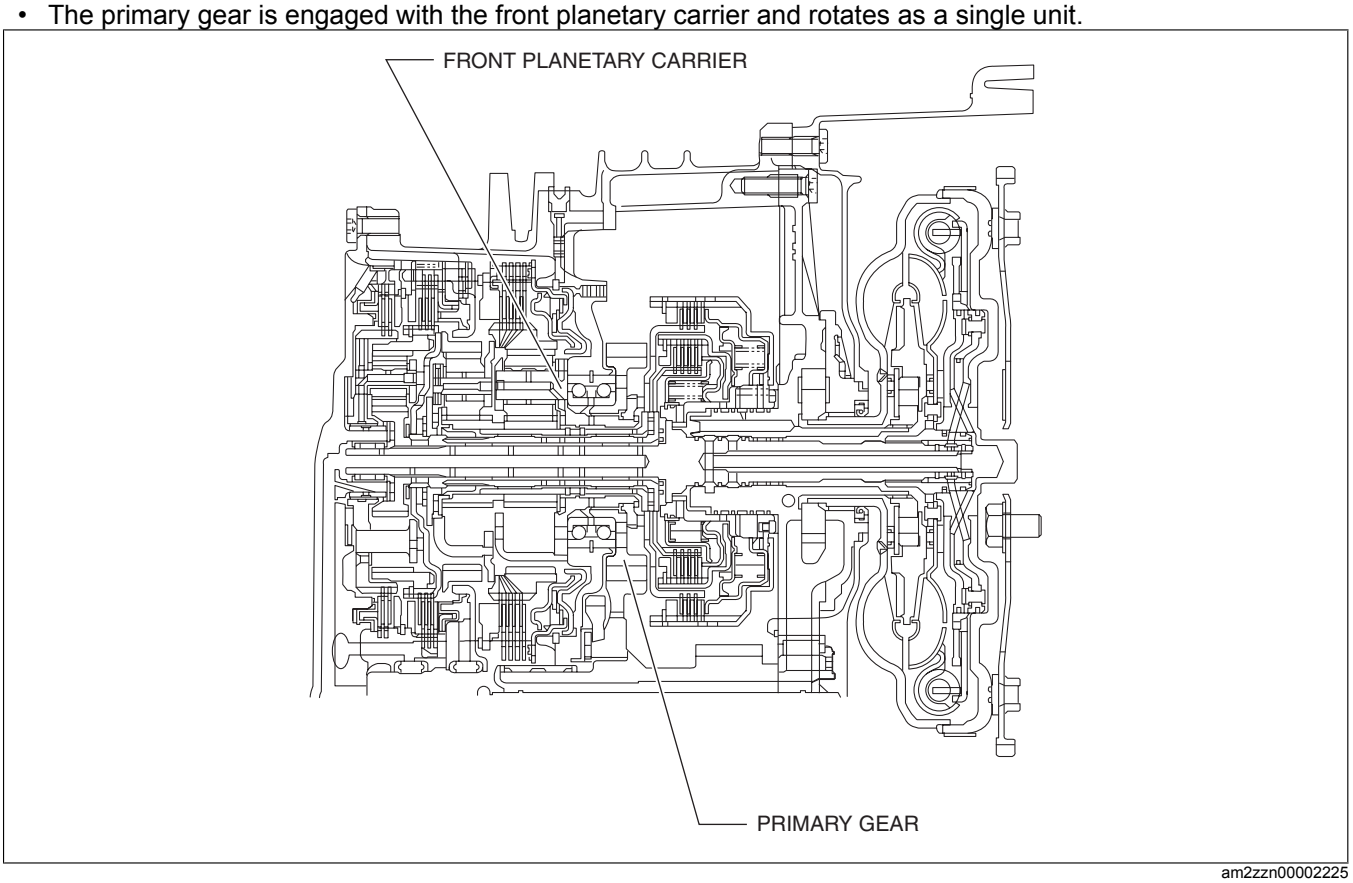

am2zzn00002225