SHIFT POSITION INDICATION [CW6A-EL]


id0517I1360900

Purpose/Function

- The shift position indication indicates the selector lever position.

Construction


- The shift position indication is built into the instrument cluster.

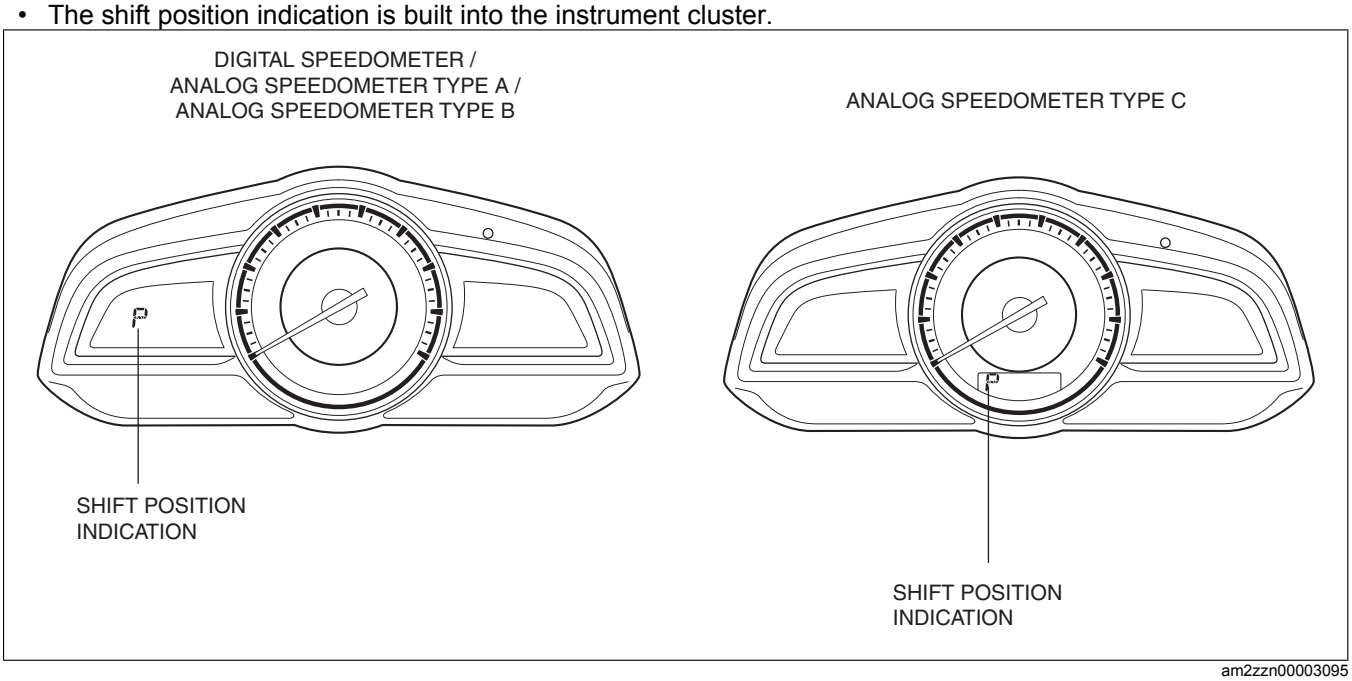

am2zzn00003095

Operation

- The TCM sends a shift position indication illumination request signal to the instrument cluster via CAN based on the signal from the integrated transaxle range sensor signal received via CAN.

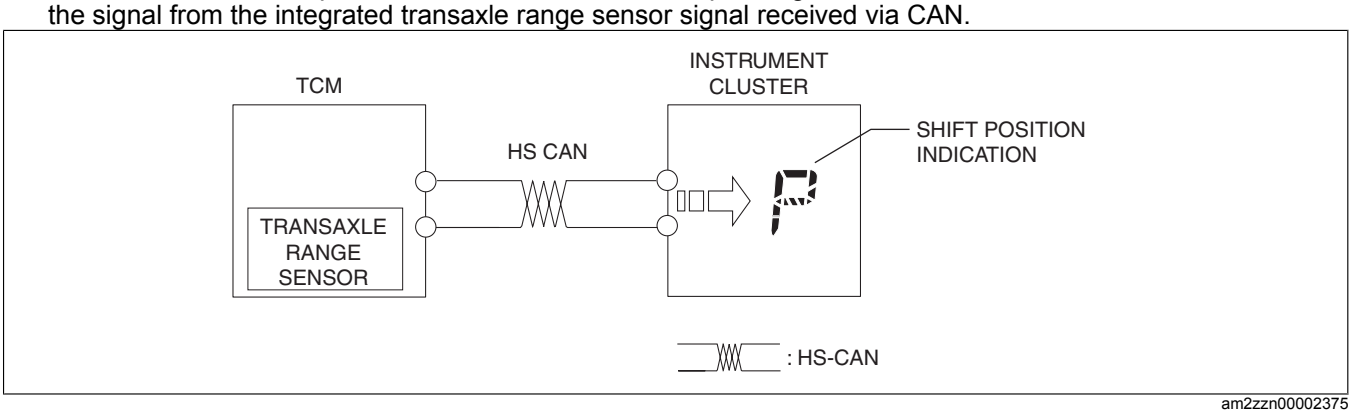

am2zzn00002375