OIL PRESSURE SWITCH REMOVAL/INSTALLATION [EW6A-EL]

id0517l2112600


Warning
- **A hot transaxle and ATF can cause severe burns. Turn off the engine and wait until they are cool.**
- **Always wear protective eye wear when using the air compressor. If the air compressor is used, any particles of dirt or sludge could spatter and get into the eyes.**

Caution
- **If the oil pressure switch has been replaced, perform initial learning. (See INITIAL LEARNING [EW6A-EL].)**

Oil Pressure Switch A


1. Select the selector lever to P position.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
3. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
4. Clean the transaxle exterior throughout with a steam cleaner or cleaning solvents.
5. Remove the air cleaner component. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Drain the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [EW6A-EL].)
7. Remove the oil pan.
8. Insert a precision flathead screwdriver and move it in the direction of the arrow to disconnect the oil pressure switch A connector as shown in the figure.

Caution
- **Do not scratch the oil pressure switch A and oil pressure switch connector A with the precision flathead screwdriver.**
- **When disconnecting connectors, grasp the connectors, not the wiring harnesses. Otherwise, the wiring harnesses may be pulled out of the connector causing poor contact.**

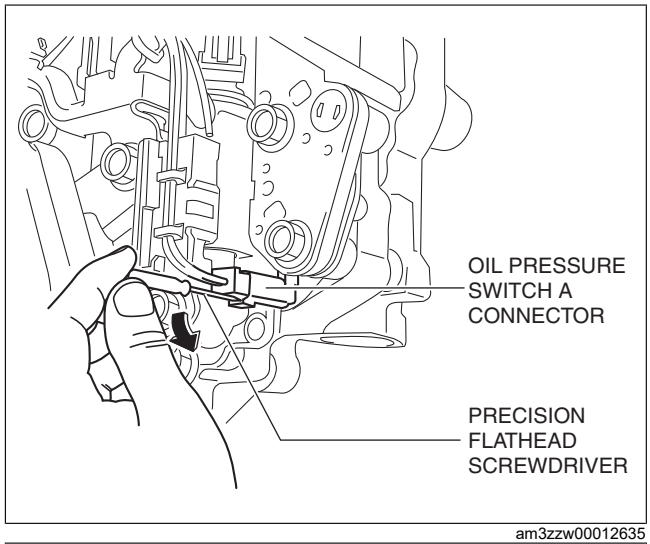


am3zzw00012635

9. Remove the oil pressure switch A fitting bolts.

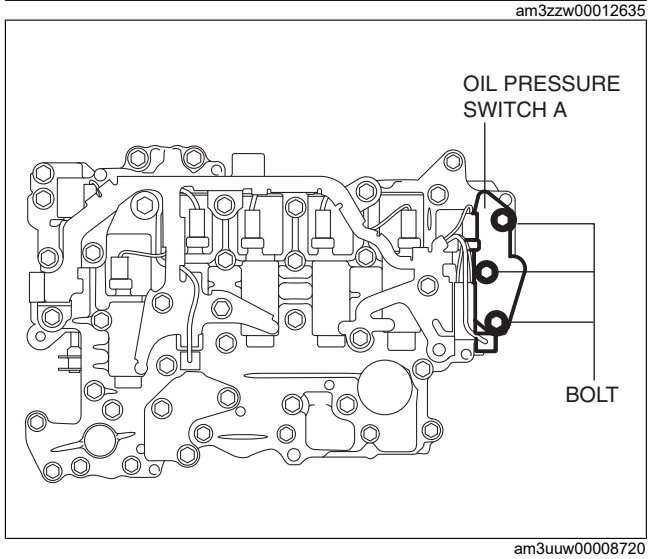

am3uuw00008720

10. Insert a flathead screwdriver as shown in the figure and remove oil pressure switch A from the control valve body while avoiding contact with the oil pan installation surface.

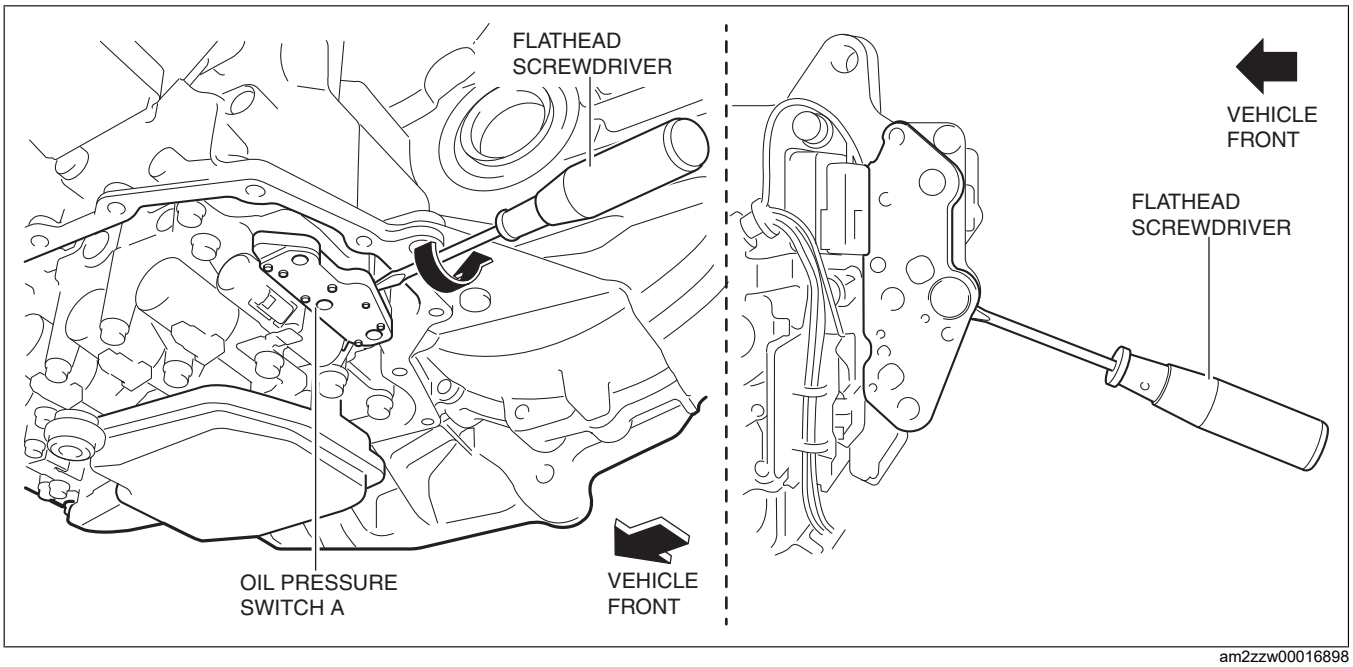


am2zzw00016898


11. Install the oil pressure switch A to the control valve body.
12. Install the oil pressure switch A fitting bolts.

Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}

13. Connect the oil pressure switch A connector.

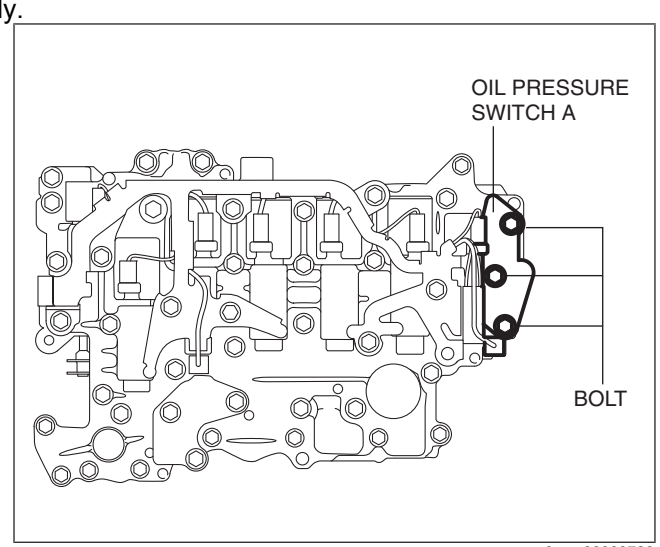


am3uuw00008720

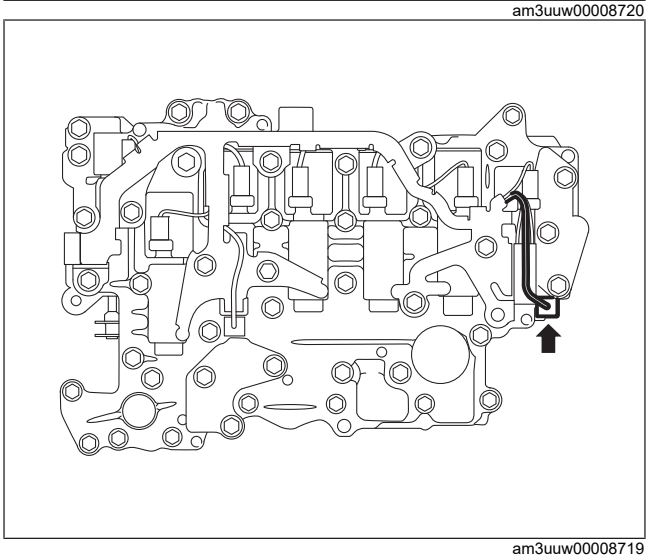

am3uuw00008719

14. Apply a light coat of silicone sealant (TB1217E or equivalent) to the contact surfaces of the oil pan and transaxle case.

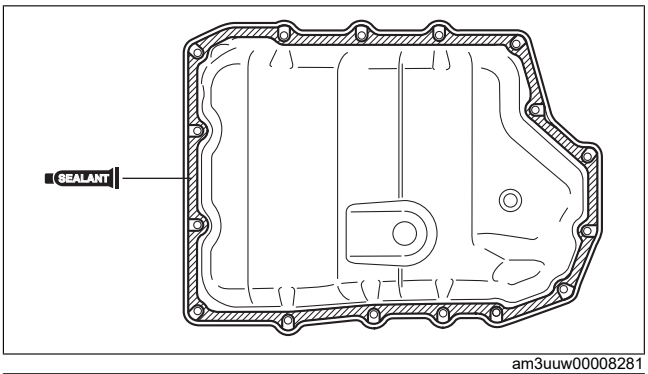


am3uuw00008281

Caution
- **Clean any remaining silicone sealant on the contact surface of the transaxle case and oil pan, and degrease the sealant area. Otherwise, oil could leak.**

15. Install the oil pan with new bolts before the applied sealant starts to harden.

Tightening torque
8—10 N·m {82—101 kgf·cm, 71—88 in·lbf}

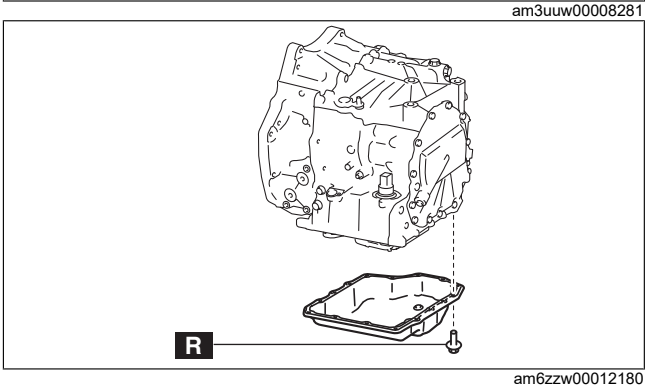

am6zzw00012180

16. Add the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [EW6A-EL].)
17. Install the air cleaner component. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
18. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
19. Perform the “Initial Learning” (oil pressure switch A Replacement). (See INITIAL LEARNING [EW6A-EL].)
20. Perform the “Mechanical System Test”. (See MECHANICAL SYSTEM TEST [EW6A-EL].)
21. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

Oil Pressure Switch B
1. Disconnect the negative battery cable. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Clean the transaxle exterior throughout with a steam cleaner or cleaning solvents.
4. Drain the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [EW6A-EL].)
5. Remove the oil pan.


Caution
- **To avoid damaging the control valve body, if there is a large amount of foreign material at the bottom of the oil pan when the oil pan is removed, replace the oil strainer with a new one.**
- **If there is not a large amount of foreign material at the bottom of the oil pan, the oil strainer does not have to be replaced.**

Note
- Always use new oil pan installation bolts when re-installing the oil pan because the oil pan installation bolts cannot be reused.

6. Remove the oil strainer. (See CONTROL VALVE BODY REMOVAL/INSTALLATION [EW6A-EL].)
7. Remove the oil strainer O-rings. (See CONTROL VALVE BODY REMOVAL/INSTALLATION [EW6A-EL].)


8. Insert a precision flathead screwdriver and move it in the direction of the arrow to disconnect the oil pressure switch B connector as shown in the figure.

Caution
- **Do not scratch the oil pressure switch B and oil pressure switch connector B with the precision flathead screwdriver.**
- **When disconnecting connectors, grasp the connectors, not the wiring harnesses. Otherwise, the wiring harnesses may be pulled out of the connector causing poor contact.**

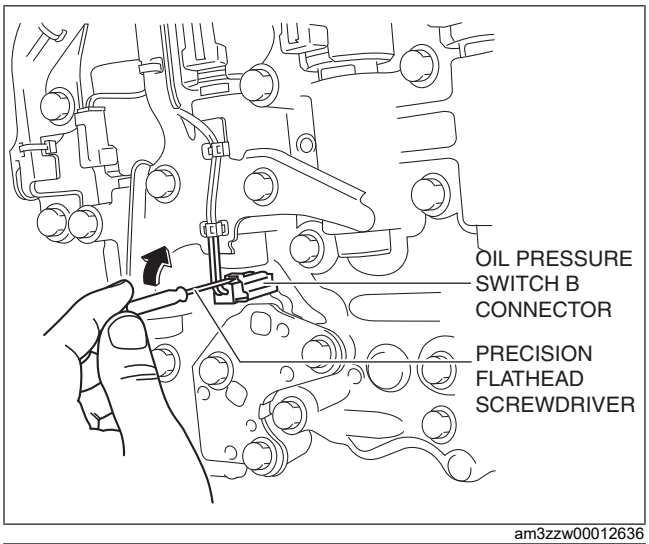

am3zzw00012636


9. Remove the oil pressure switch B.

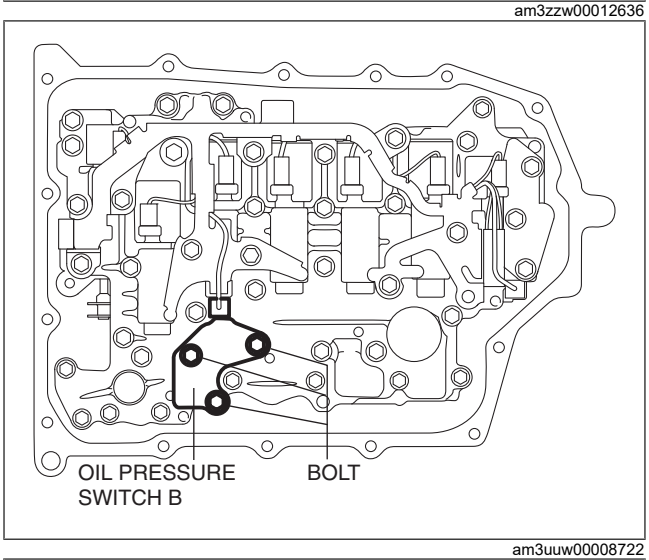

am3uuw00008722

10. Install the oil pressure switch B.

Tightening torque
9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}

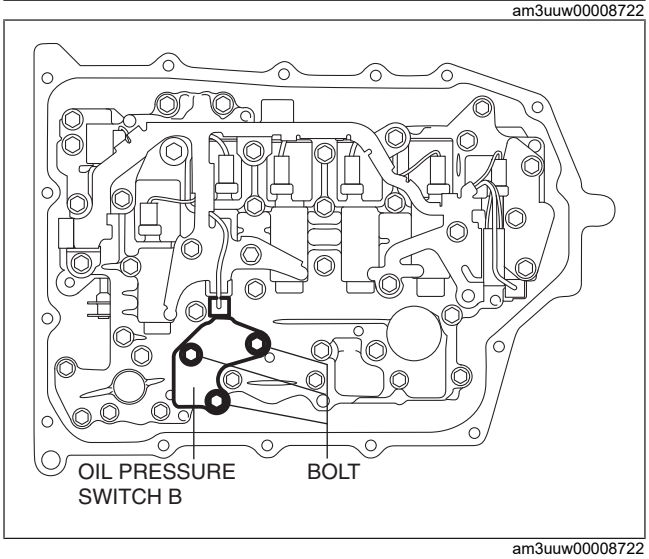


am3uuw00008722

11. Connect the oil pressure switch B connector.
12. Install the oil strainer O-rings. (See CONTROL VALVE BODY REMOVAL/INSTALLATION [EW6A-EL].)


    Note
    - If there is a large amount of foreign material at the bottom of the oil pan, replace the oil strainer with a new one.

13. Install the oil strainer. (See CONTROL VALVE BODY REMOVAL/INSTALLATION [EW6A-EL].)

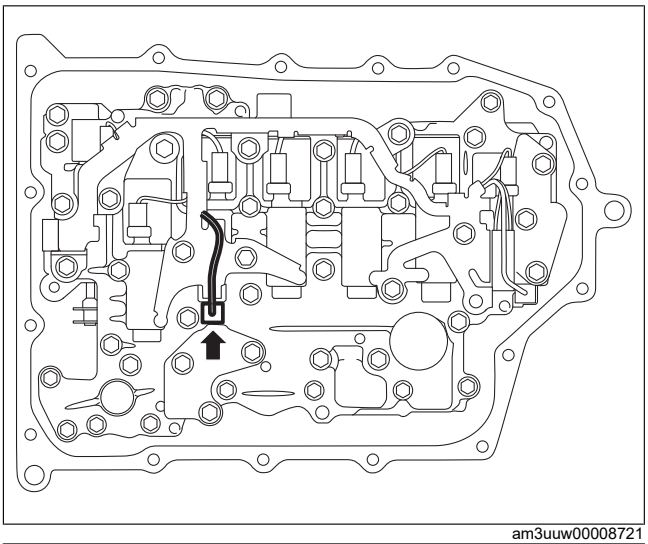
am3uuw00008721

14. Apply a light coat of silicone sealant (TB1217E or equivalent) to the contact surfaces of the oil pan and transaxle case.


    Caution
    - **Clean any remaining silicone sealant on the contact surface of the transaxle case and oil pan, and degrease the sealant area. Otherwise, oil could leak.**

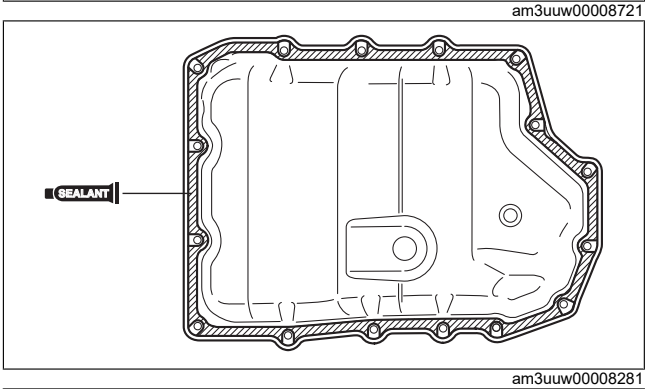

am3uuw00008281

15. Install the oil pan with new bolts before the applied sealant starts to harden.

    Tightening torque
    8—10 N·m {82—101 kgf·cm, 71—88 in·lbf}

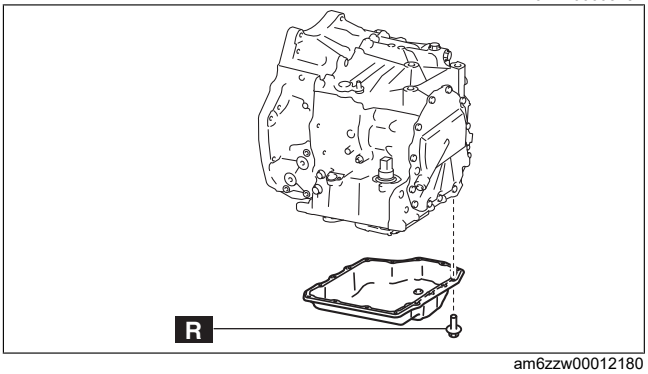

am6zzw00012180

16. Add the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [EW6A-EL].)
17. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
18. Perform the “Initial Learning” (oil pressure switch B Replacement). (See INITIAL LEARNING [EW6A-EL].)
19. Perform the “Mechanical System Test”. (See MECHANICAL SYSTEM TEST [EW6A-EL].)
20. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)