
AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [EW6A-EL]

id0517I2118600

Warning
- **Do not perform the servicing while the ATF is hot. Otherwise, it could cause severe burns or serious injury.**


1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Remove the dipstick securing bolt.
3. Remove the dipstick.

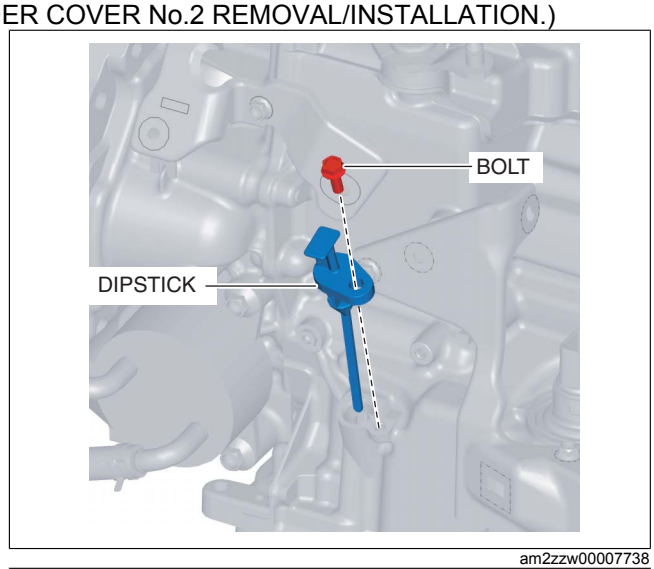

am2zzw00007738

4. Remove the drain plug and washer, and drain the ATF.
5. Install a new washer and drain plug.

Tightening torque
30—41 N·m {3.1—4.1 kgf·m, 23—30 ft·lbf}

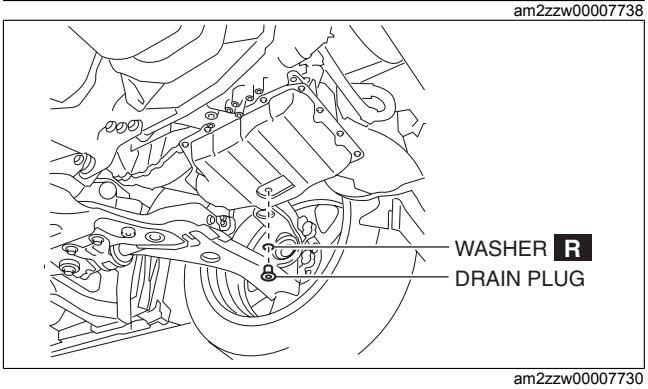

am2zzw00007730

6. Add ATF from the dipstick installation hole.


Note
- The ATF color is blue.
- Only use ATF FZ for the EW6A-EL.

ATF type
ATF FZ
Resupply amount (Reference)
ATF is drained from drain plug: 3.3 L {3.5 US qt, 2.9 Imp qt}

7. Adjust the ATF level. (See AUTOMATIC TRANSAXLE FLUID (ATF) ADJUSTMENT [EW6A-EL].)
8. Insert the dipstick and install the securing bolt.

Tightening torque
8—11 N·m {82—112 kgf·cm, 71—97 in·lbf}

9. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

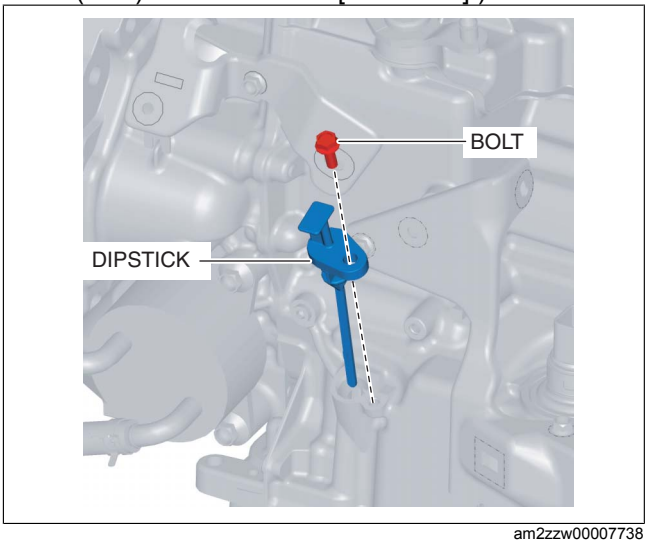

am2zzw00007738