AUTOMATIC TRANSAXLE FLUID (ATF) ADJUSTMENT [EW6A-EL]


id0517l2119300

Caution
- **Only adjust the ATF level when the ATF temperature is 45—55 °C {113—131 °F}. If the ATF level is incorrect, it could damage the transaxle.**
- **Do not add ATF over the specification. Otherwise, the transaxle performance could be reduced and ATF could leak.**

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Remove the dipstick securing bolt.
3. Adjust the ATF level.
   (1) Connect the M-MDS to the DLC-2 and display the PID TFT.
   (2) Warm up the engine until the ATF temperature is **50 °C {122 °F}**.
   (3) Remove the dipstick and wipe the ATF off using a rag while leaving the engine idling.

Warning
- **Keep hands and tools away from the cooling fan even if the cooling fan is not operating to prevent injury, or damage to the cooling fan.**
- **Do not touch parts which have become heated. Otherwise, it could cause severe burns or serious injury.**

   (4) Insert the dipstick and pull it out again.

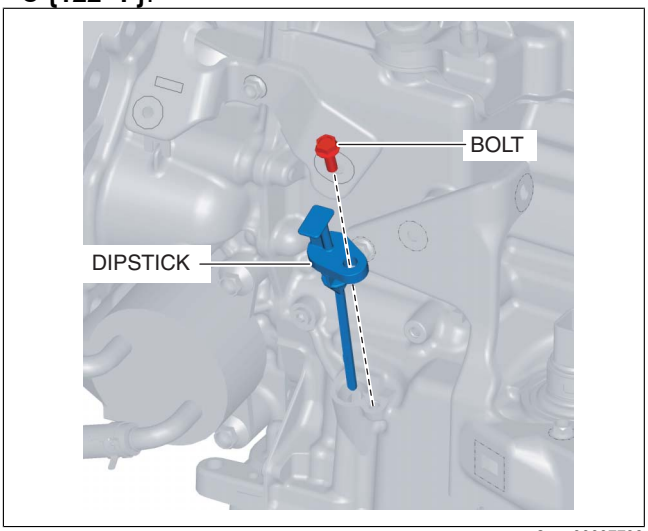


am2zzw00007738

   (5) Verify that ATF is adhering to the central marker area on the dipstick.
      - If ATF is not adhering to the central marker area on the dipstick, adjust the ATF level to the central marker area.

Note
- The ATF color is blue.
- Only use ATF FZ for the EW6A-EL.

ATF type
ATF FZ

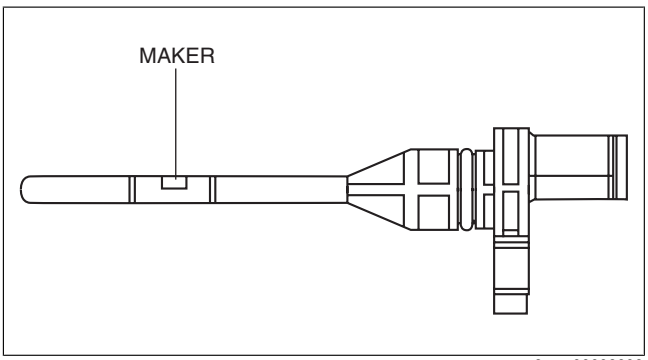


am3uuw00008393

4. Insert the dipstick and install the securing bolt.

   Tightening torque
   8—11 N·m {82—112 kgf·cm, 71—97 in·lbf}

5. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/ INSTALLATION.)

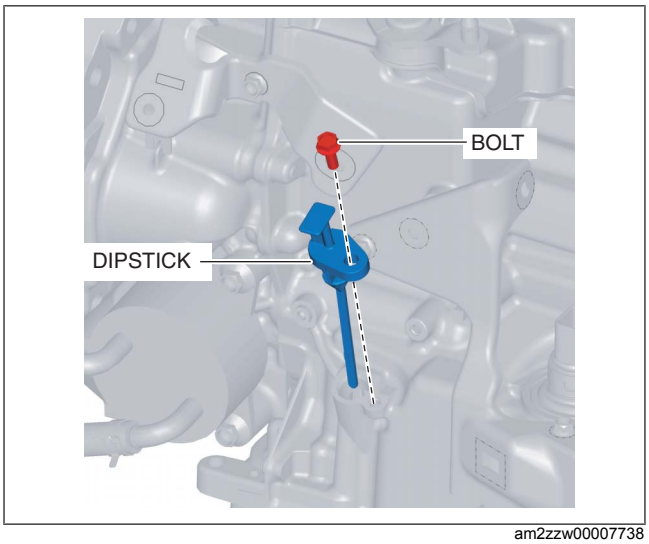

am2zzw00007738