STEERING SHIFT SWITCH [EW6A-EL]


id0517I2363200

Purpose, Function

- The steering shift switch detects the shift-up and shift-down operations of the steering shift.
- Steering shift switch signal sends to the TCM via the CAN and is used for the manual shift control and engine transaxle total control.

Construction


- The steering shift switches are installed on the back side of the steering wheel; the up switch on the right side and the down switch on the left side.
- By positioning the steering shift switches optimally for ease of driver operations, operability of the switches has been improved while ensuring an easy-to-grip steering wheel.

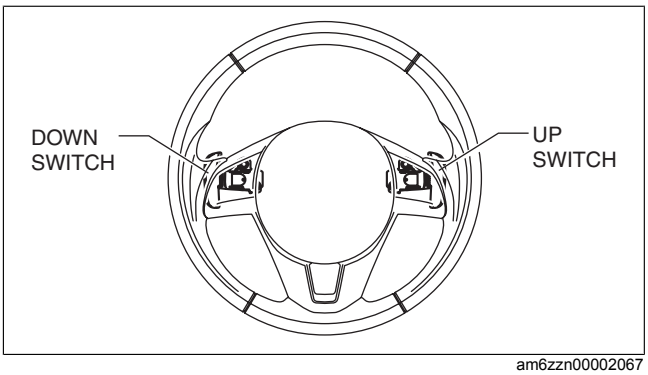

am6zzn00002067

Operation

- The steering shift switches are a momentary-type switch, thus the contact point closes only when a switch is operated (pulled).
- The TCM detects the steering shift switch operation condition by opening/closing the up or down switch contact point for the steering shift switch.

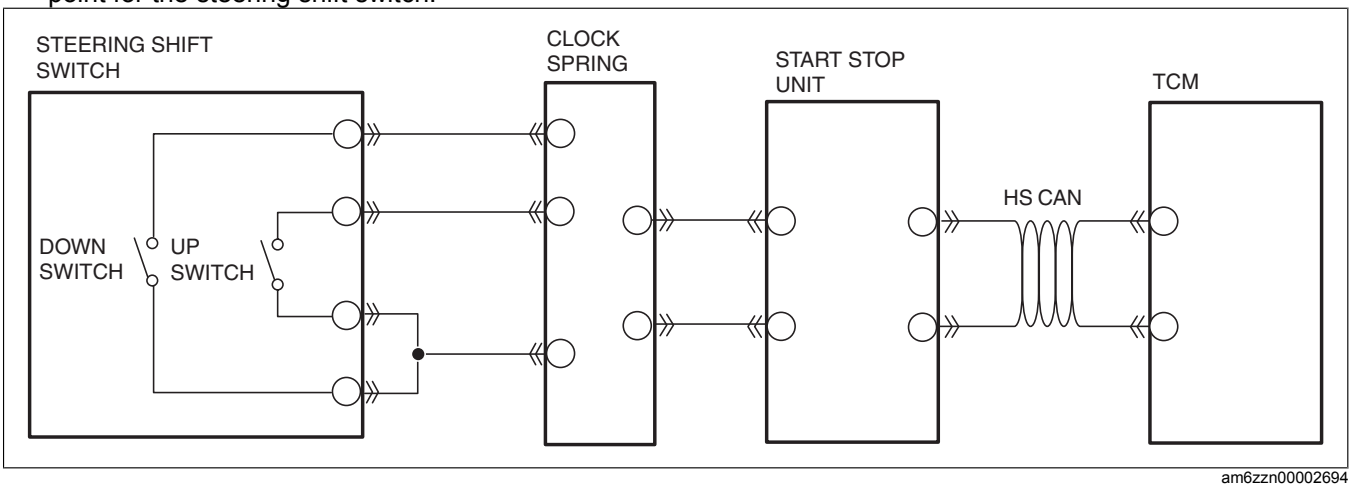

am6zzn00002694