STEERING SHIFT SWITCH INSPECTION [EW6A-EL]

id0517I2600700


Warning

- **Handling the driver-side air bag module improperly can accidentally deploy the air bag module, which may seriously injure you. Read the air bag system service warnings and cautions before handling the air bag module. (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)**

Note


- When removing the driver-side air bag module, it is necessary to rotate the steering wheel. If the ignition has been switched off with the driver's door closed, the steering wheel will be locked. Perform the procedure from Steps 1-3 so that the steering wheel will not be locked.

1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
6. Disconnect the steering shift switch wiring harness connector.
7. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)

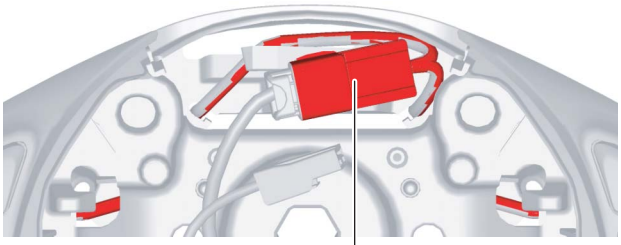

am2zzw00007736


8. Using a precision flathead screwdriver, release the tab.

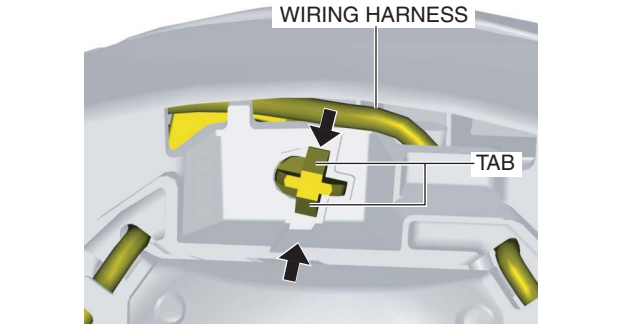

am2zzw00007737


9. Measure the continuity between steering shift switch wiring harness connector terminals A—B and terminals D—E.

Up switch

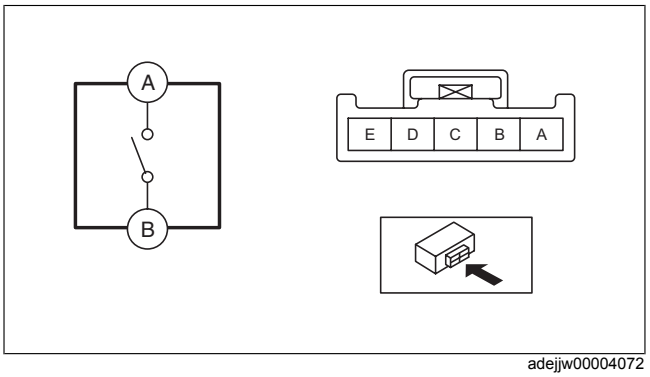

adejjw00004072

Down switch

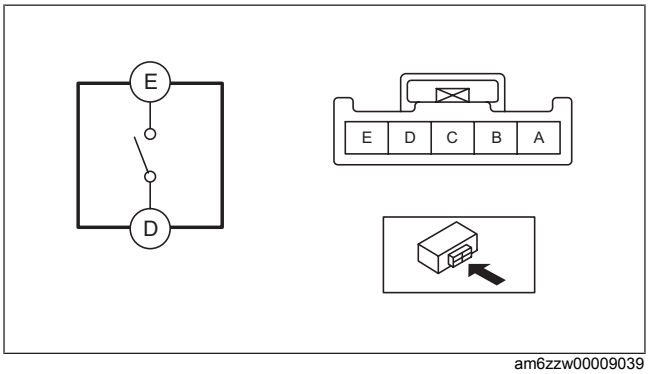

am6zzw00009039

Switch	Terminal	Test condition	Continuity
Up switch	A—B	Up switch is operated (up switch is pulled outward)	Continuity
		Up switch is not operated (up switch is not pulled outward)	No continuity
Down switch	D—E	Down switch is operated (down switch is pulled outward)	Continuity
		Down switch is not operated (down switch is not pulled outward)	No continuity

- If there is any malfunction, replace the steering shift switch. (See STEERING SHIFT SWITCH REMOVAL/INSTALLATION [EW6A-EL].)