SHIFT-LOCK SYSTEM


id051800140300

Purpose, Function

- The shift-lock system operates when the ignition is switched ON and the brake pedal is not depressed, and inhibits the selector lever from being shifted from the P position to other positions.
- If the shift-lock cannot be released by the normal operation, it can be released manually by inserting a flathead screwdriver into the shift-lock release hole (emergency manual shift-lock release system).


Construction

Wiring diagram

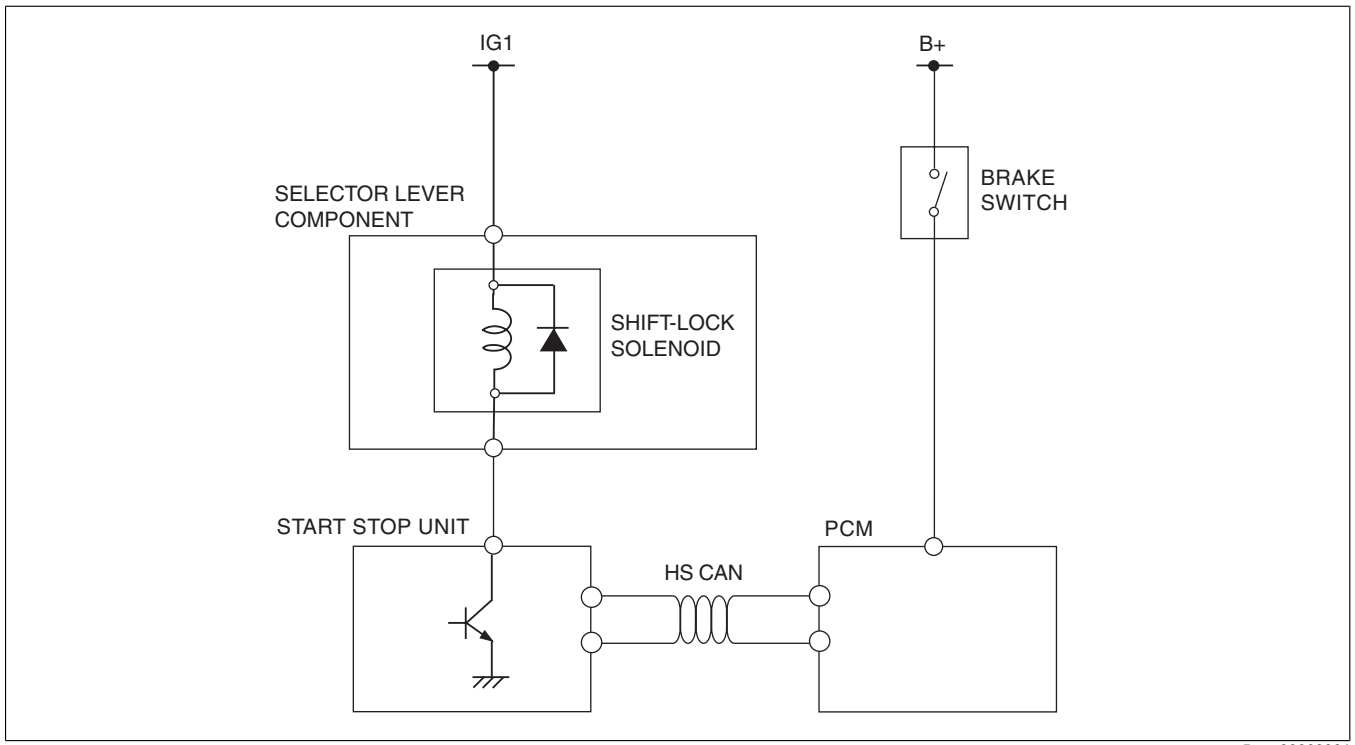

ac5wzn00000961

Structural view

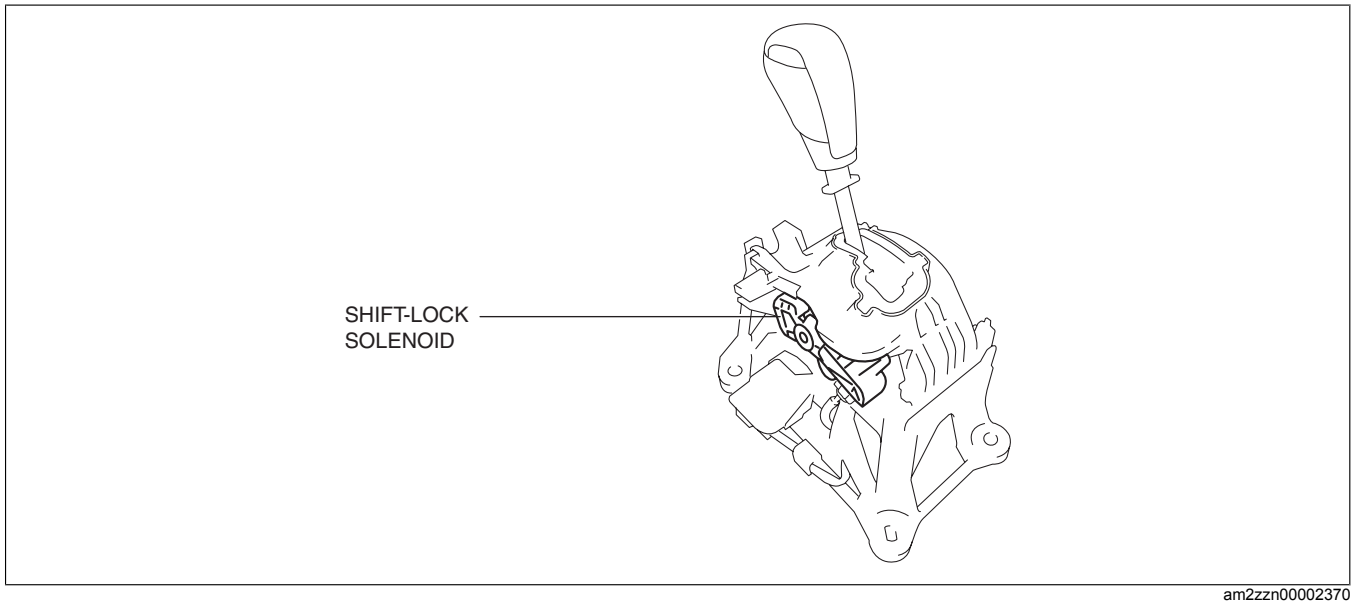

am2zzn00002370

Operation


Shift-lock Release Conditions

- The shift-lock is released when all of the following conditions are met (except emergency manual shift-lock release system is operated).
  - — Selector lever is in P position
  - — Ignition is switched to ON

— Brake pedal is depressed (brake light switch is on)

Shift-lock operation conditions (shift-lock release conditions not satisfied)


- When the shift-lock release conditions are not met, the shift-lock operates (The selector lever cannot be moved to any position other than P).
- Because there is no energization to the shift-lock solenoid at this time, the shift-lock solenoid is not energized.
- As a result, the lock slider is in the position shown in the figure and the movement of the guide pin in the downward direction is controlled by the lock slider.
- For selector levers in which movement is controlled by the guide pin, the selector lever cannot be moved to a position other than the P position.

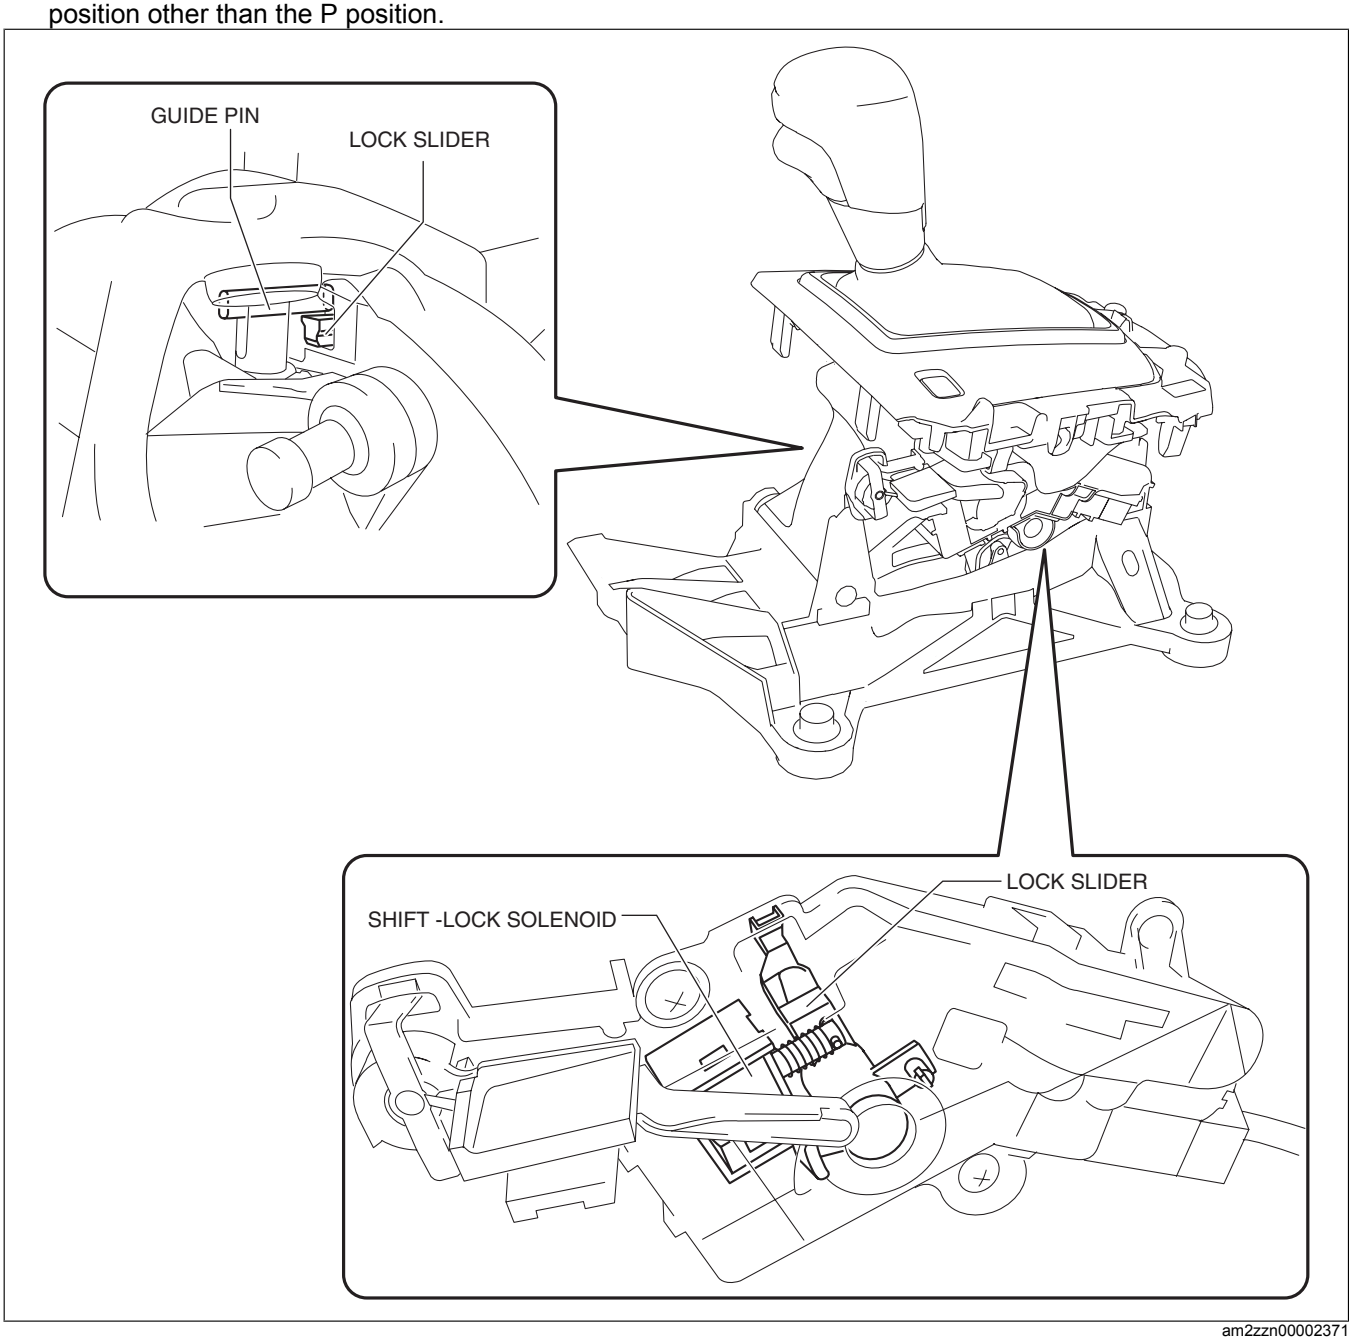

am2zzn00002371

Shift-lock release (Shift-lock release conditions are satisfied)


- When the shift-lock release conditions are met, the shift-lock does not operate (The selector lever can be moved out of P).
- At this time, the shift-lock solenoid is energized because there is energization to the shift-lock solenoid.
- As a result, the lock slider moves in the direction shown by arrow (1) in the figure. Then, the guide pin can move in the direction of arrow (2) shown in the figure.
- For selector levers in which movement is not controlled by the guide pin, the selector lever can be moved to any position.

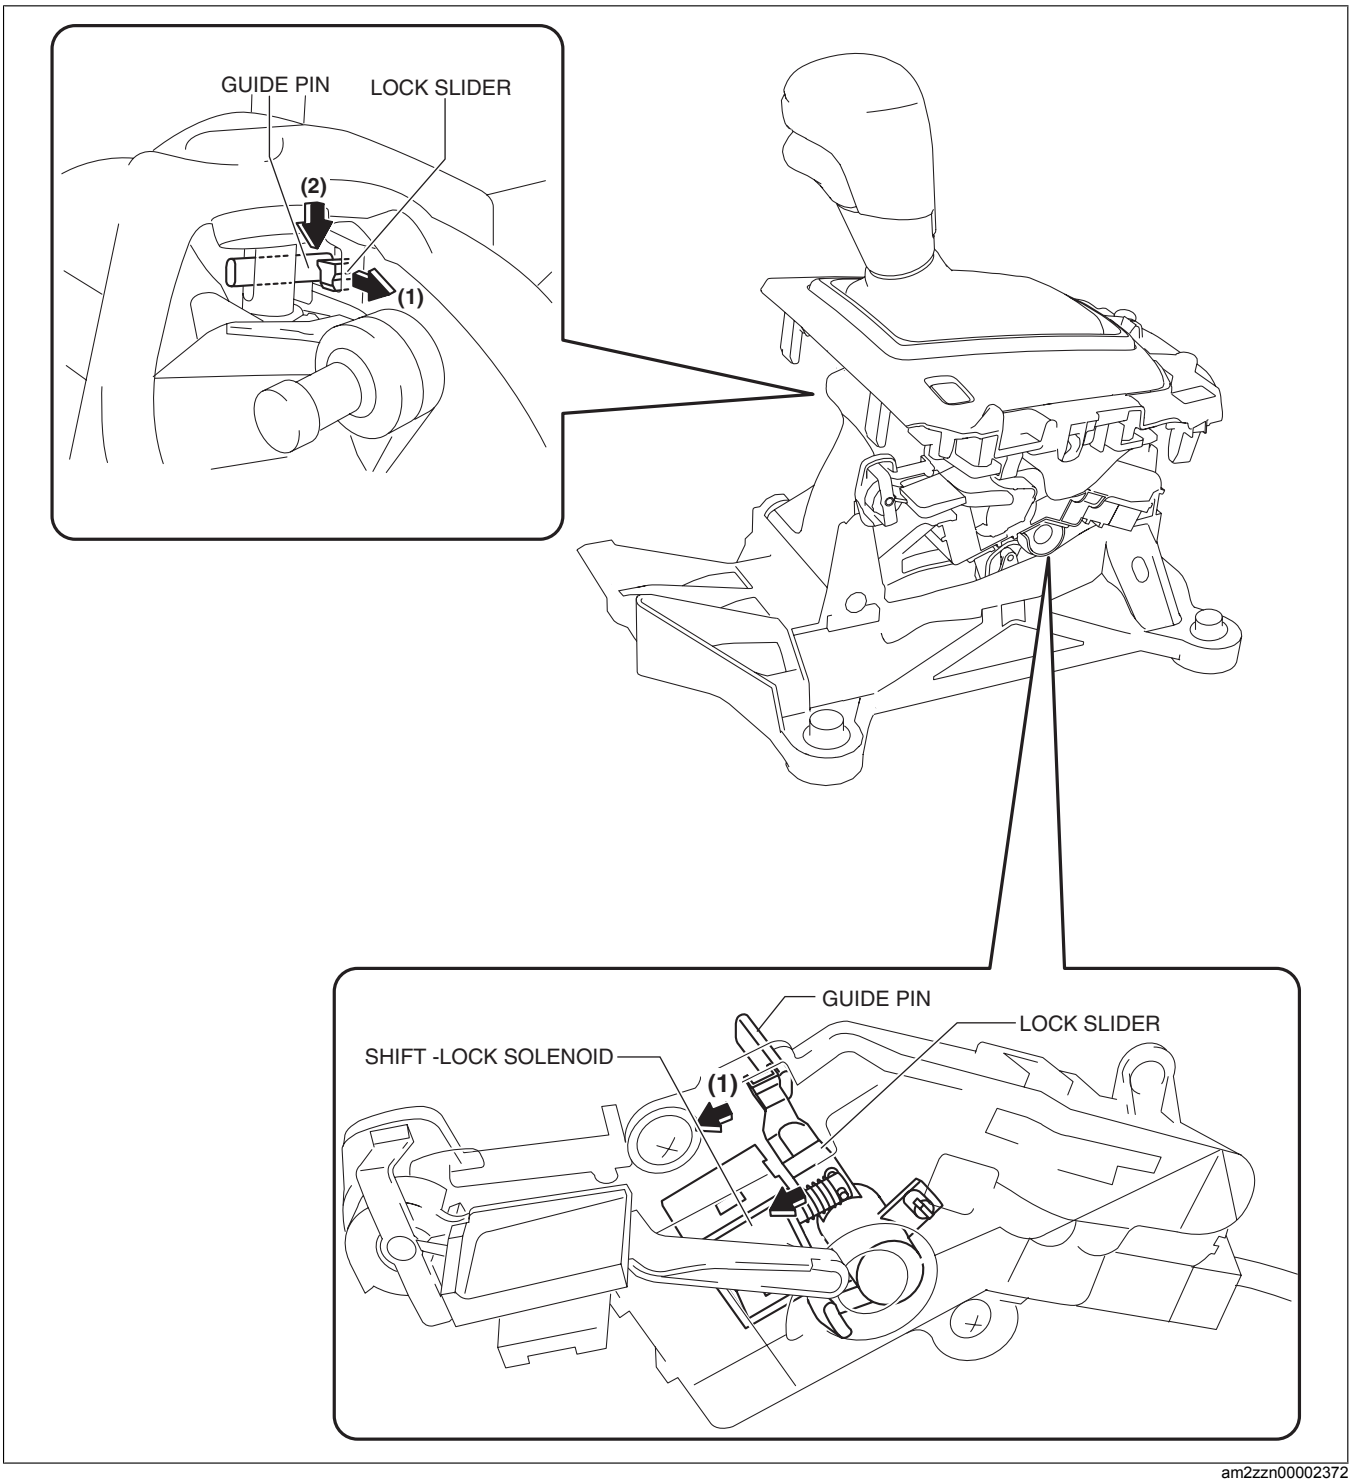

am2zzn00002372

Emergency manual shift-lock release system operation

- The emergency manual shift-lock release system can be released manually even if the shift-lock release conditions are not met.
- The guide pin restriction can be cancelled forcibly by pressing in the shift-lock override button using a flathead screwdriver, and moving the lock slider.
- As a result, the selector lever can be moved to any position.

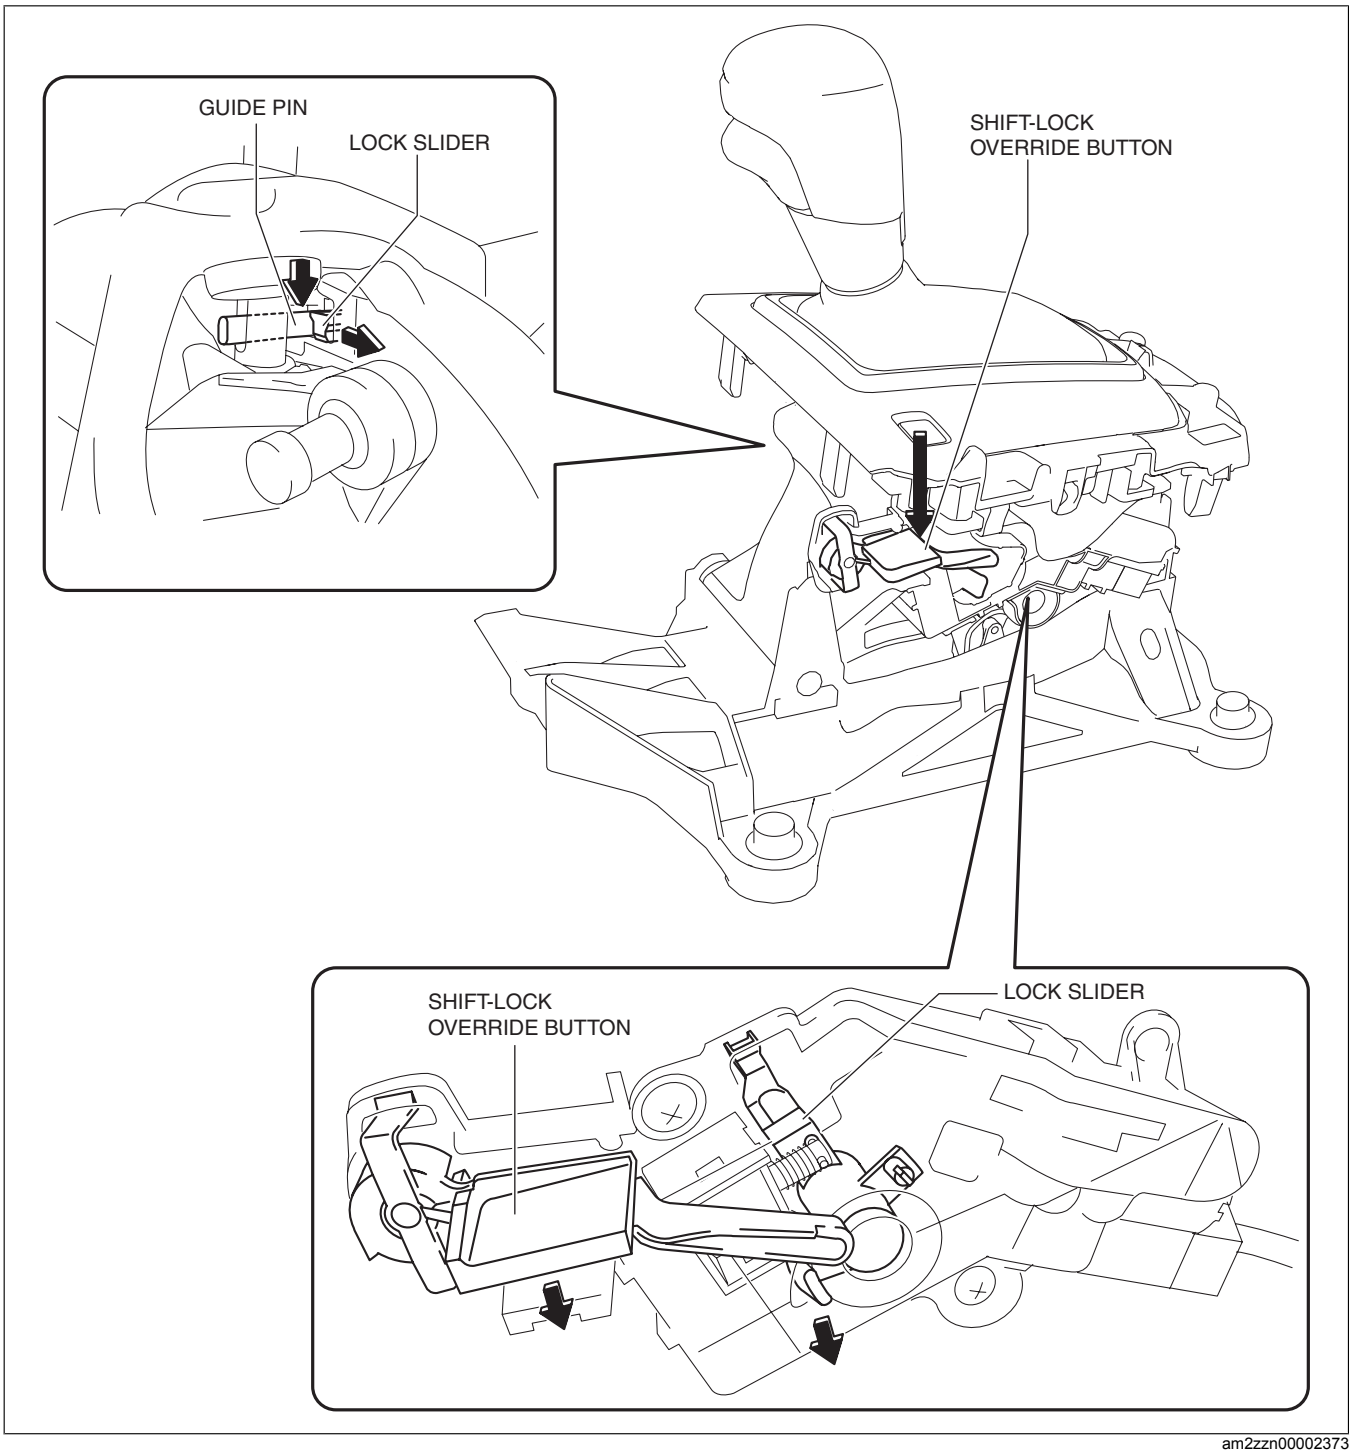

am2zzn00002373