
POWER STEERING MALFUNCTION INDICATOR LIGHT

id061300245300

Purpose
- The power steering malfunction indicator light warns the driver that there is a malfunction with the electric power steering (EPS) system.

Function
- If there is a malfunction in the EPS system, the power steering malfunction indicator light illuminates.
- If the EPS system and CAN lines are normal, it illuminates when the ignition is switched ON (engine off), and turns off after the engine is started.

Construction
- The power steering malfunction indicator light is built into the instrument cluster.

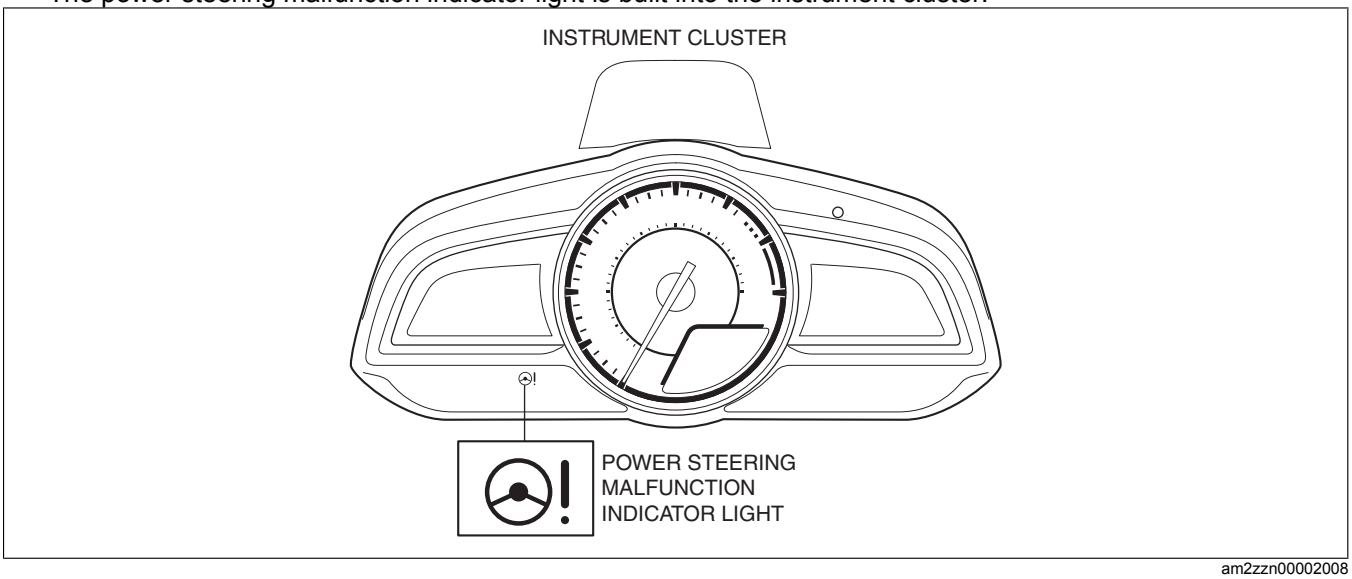

am2zzn00002008

Operation

EPS system malfunction detection
- If the EPS control module (CM) detects a system malfunction, it sends a power steering malfunction indicator light illumination on request signal to the instrument cluster via CAN.
- The instrument cluster illuminates the power steering malfunction indicator light when it receives a power steering malfunction indicator light illumination on request signal.

Note
- A warning message in the center display is displayed with the power steering malfunction indicator light turned on or flashed. For the message content and verification method, refer to the [CENTER DISPLAY (WITH CENTER DISPLAY)]. (See CENTER DISPLAY [WITH CENTER DISPLAY].)

Initial check
- If the EPS system and CAN lines are normal, it illuminates when the ignition is switched ON (engine off), and turns off after the engine is started. If there is a system malfunction, the power steering malfunction indicator light illuminates.

Fail-safe
- Function not equipped.