
TIE-ROD END REPLACEMENT


id061300801200

1. Remove the snap pin from the tie-rod end.

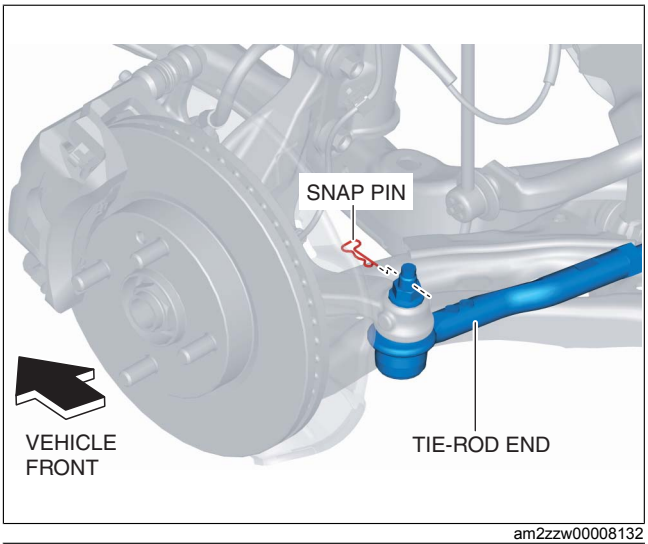


am2zzw00008132

2. Loosen the locknut of the tie-rod end.

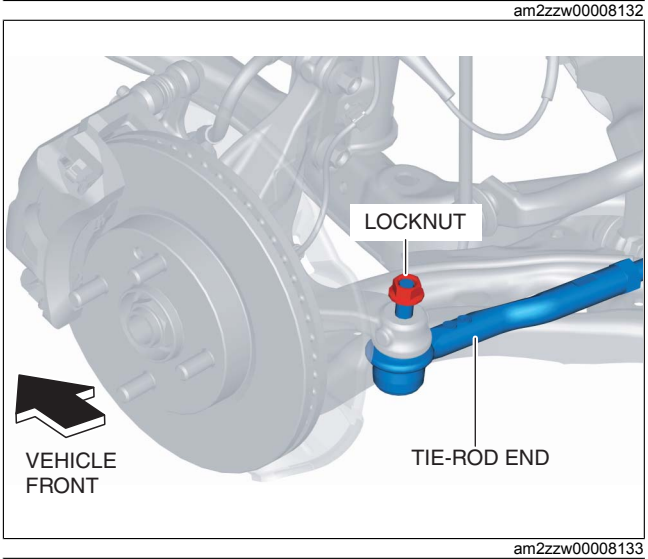


am2zzw00008133

3. Using the **SST**, disconnect the steering knuckle and tie-rod end.

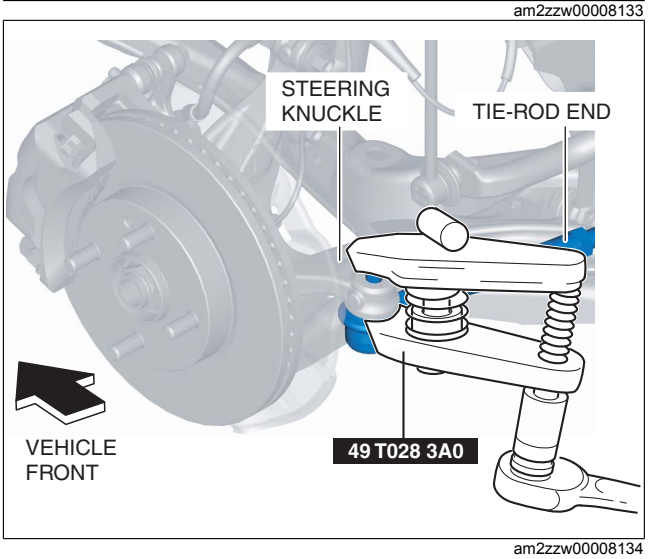


am2zzw00008134

4. Remove the locknut from the tie-rod end.

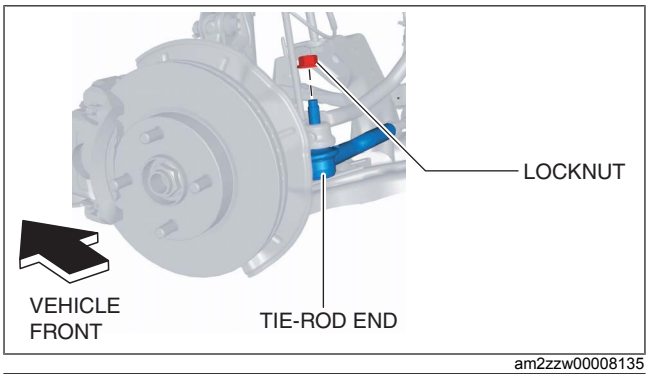


am2zzw00008135

5. Place alignment marks as shown in the figure for proper installation.

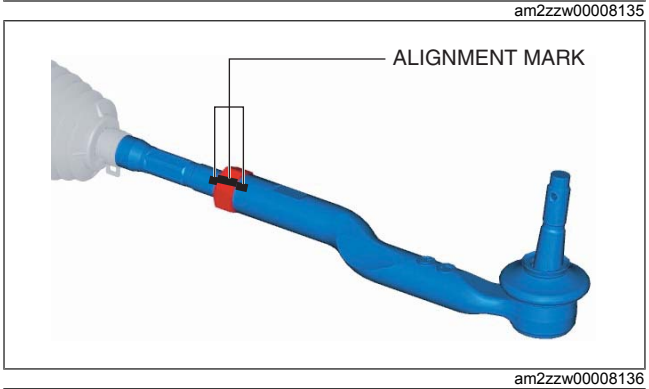


am2zzw00008136

6. Remove the tie-rod end.

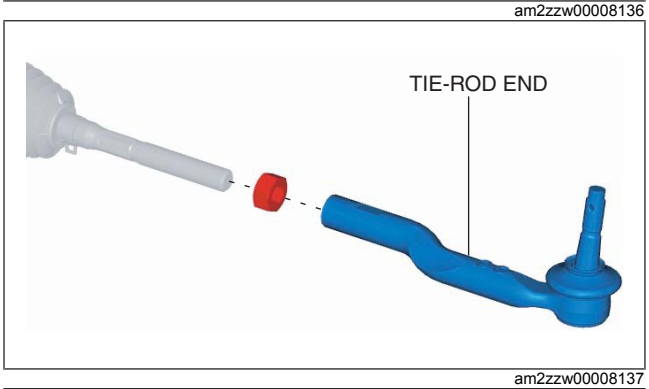


am2zzw00008137

7. Place alignment marks on the new tie-rod end in the same positions as the removed tie-rod end.

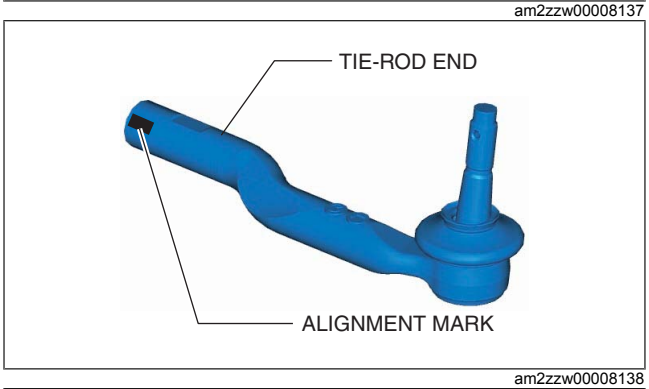

am2zzw00008138


8. Align the marks that were made before removing the tie-rod end, and assemble the tie-rod end to the tie rod.

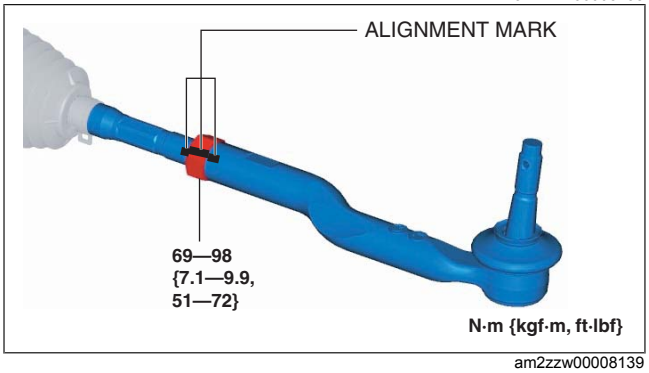

am2zzw00008139

Note

- "R" is inscribed on the right side of the tie-rod end and "L" is inscribed on the left side of the tie-rod end. Verify if the part is for the left or right side before installation because the left and right parts of the tie-rod end have different shapes.

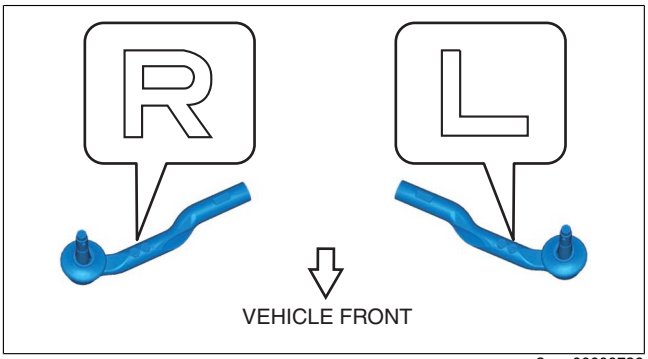


am2zzw00008726

9. Verify that dimension A shown in the figure is within the specification.


   Specification
   14.8—27.8 mm {0.59—1.09 in}

   - If not within the specification, make adjustments so that dimension A is within the specification.

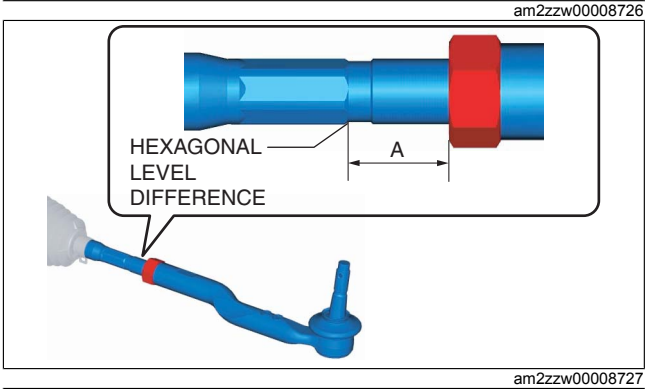


am2zzw00008727

10. Install the tie-rod end to the steering knuckle.

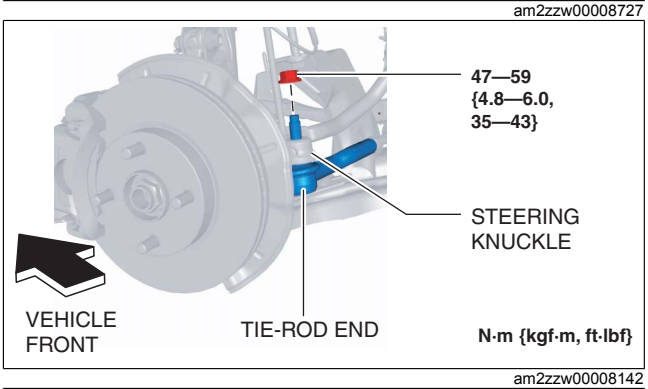


am2zzw00008142

11. Install a new snap pin to the tie-rod end.

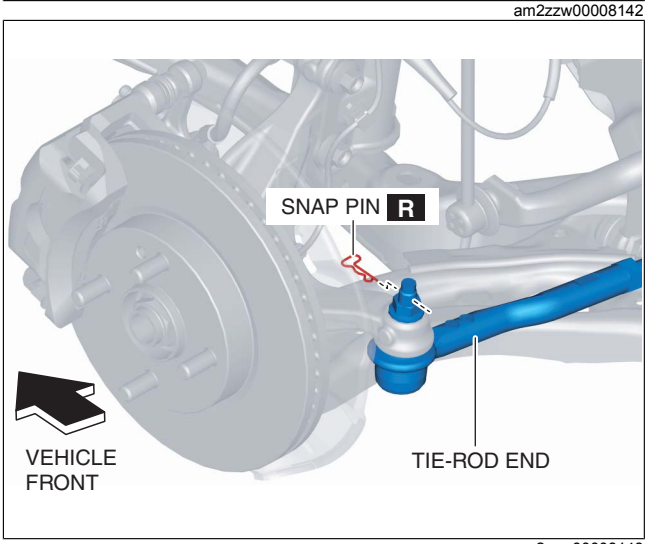

am2zzw00008143

12. Verify that A and B shown in the figure are parallel while the vehicle is on the ground.

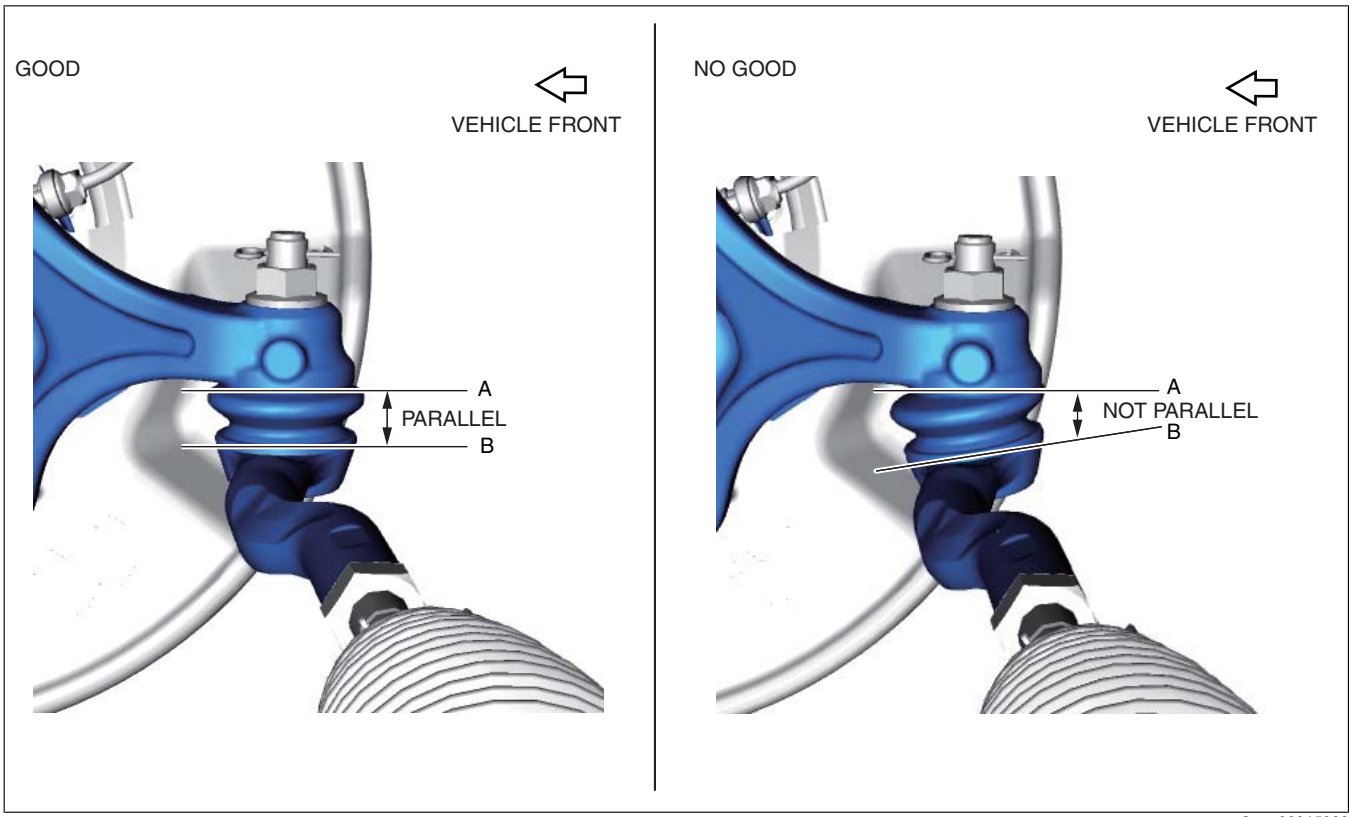


am2zzw00015383

Caution

- **Install the tie-rod end to the correct position. Otherwise, it could cause cracks on the tie-rod end boot.**

- If the installation position is not correct, perform the adjustment using the following procedure.
  1. Adjust the tie-rod end by rotating it so that it is at the correct position.

13. After installation, inspect the front wheel alignment and adjust it if necessary. (See FRONT WHEEL ALIGNMENT.)

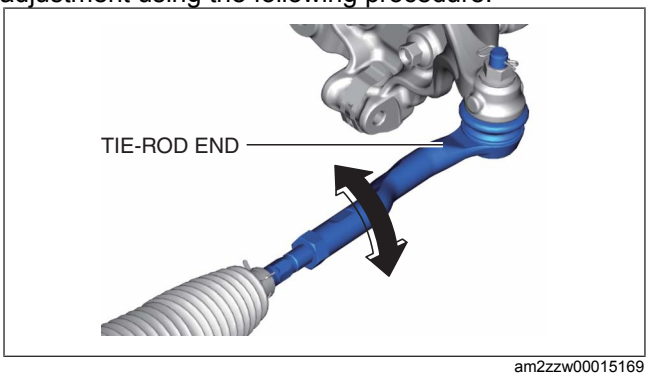

am2zzw00015169