
STEERING LOCATION INDEX


id061300801500

L.H.D.

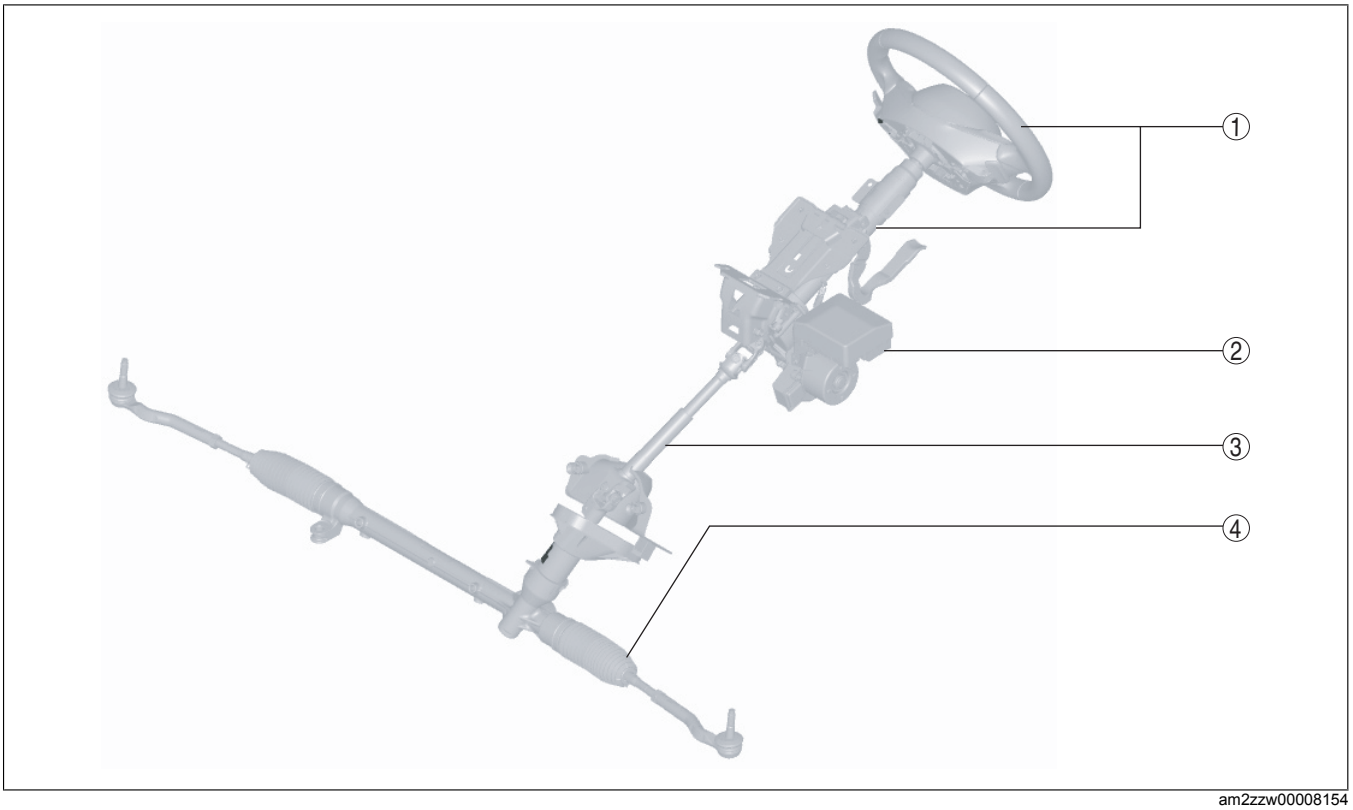

am2zzw00008154

R.H.D.

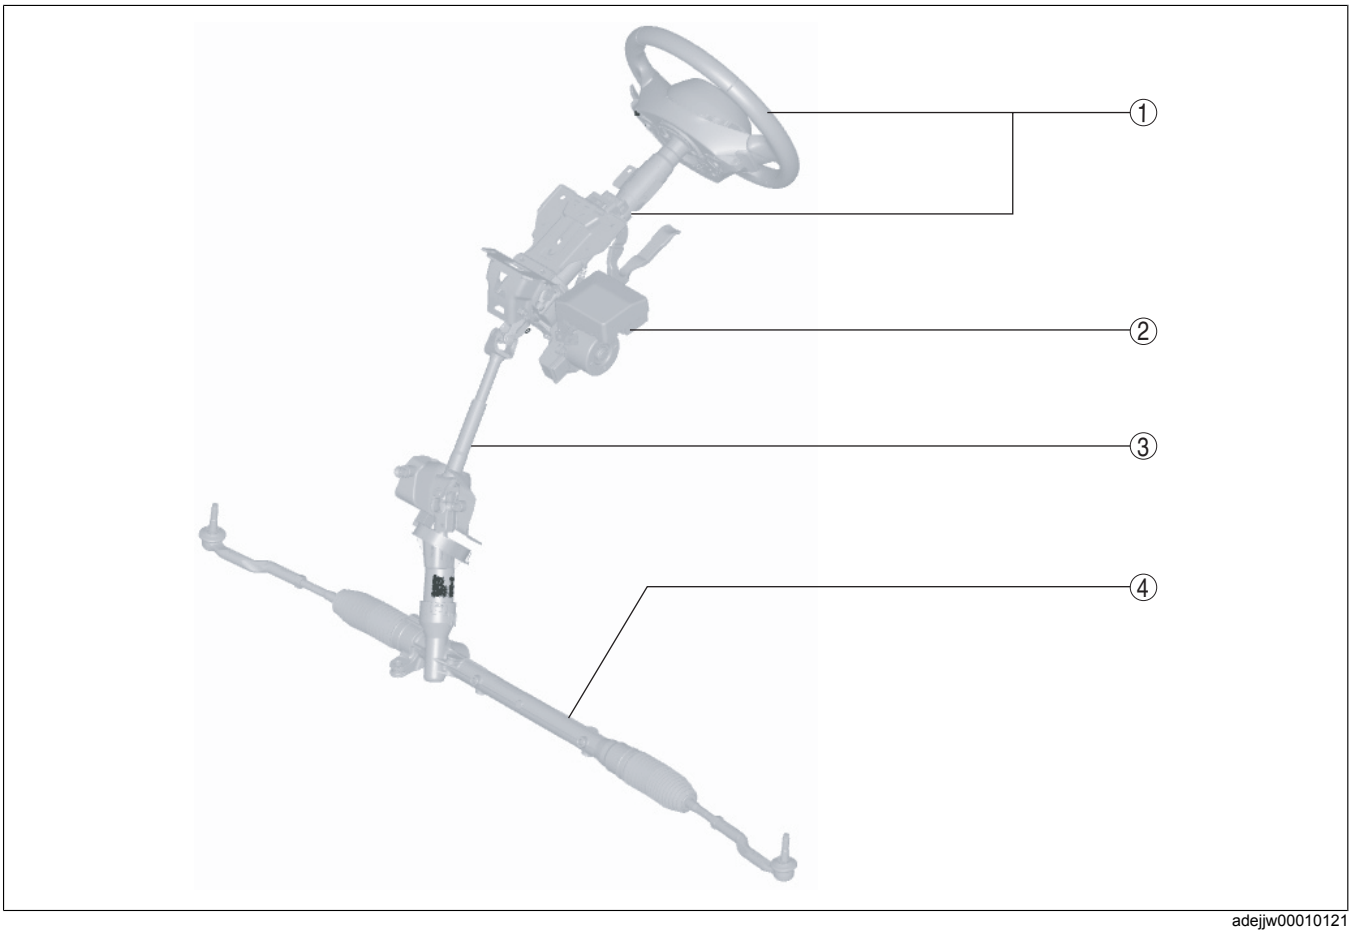

adejjw00010121

1	Steering wheel and column (See STEERING WHEEL AND COLUMN INSPECTION.) (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.) (See STEERING WHEEL SIDE COVER REMOVAL/INSTALLATION.) (See STEERING WHEEL BEZEL REMOVAL/INSTALLATION.) (See STEERING SHAFT INSPECTION.)
2	EPS CM (See EPS CONTROL MODULE INSPECTION.)
3	Intermediate shaft (See INTERMEDIATE SHAFT REMOVAL/INSTALLATION.)
4	Steering gear and linkage (See TIE-ROD END REPLACEMENT.) (See STEERING GEAR AND LINKAGE REMOVAL/INSTALLATION.) (See STEERING GEAR AND LINKAGE INSPECTION.) (See STEERING GEAR AND LINKAGE DISASSEMBLY.) (See TIE-ROD END INSPECTION.) (See TIE ROD INSPECTION.) (See STEERING GEAR AND LINKAGE ASSEMBLY.)