
STEERING GEAR AND LINKAGE DISASSEMBLY

id061300801800


1. Remove the steering gear and linkage. (See STEERING GEAR AND LINKAGE REMOVAL/INSTALLATION.)
2. Disassemble in the order indicated in the figure.

L.H.D.

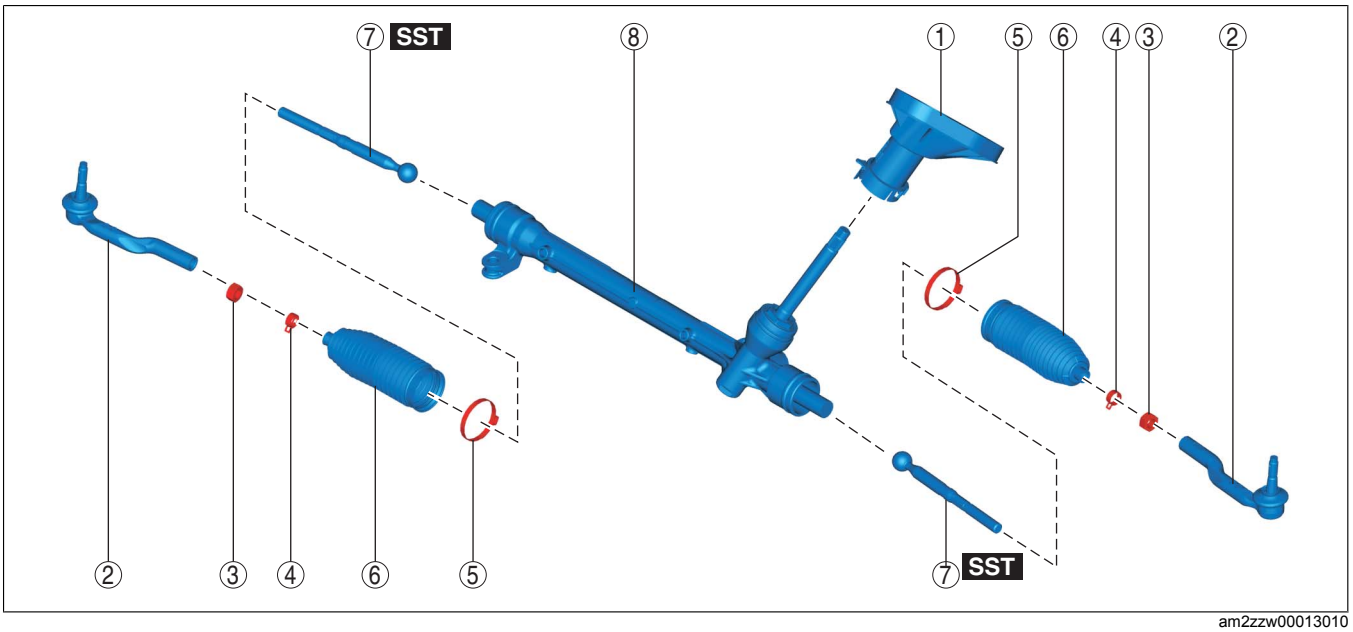

am2zzw00013010

R.H.D.

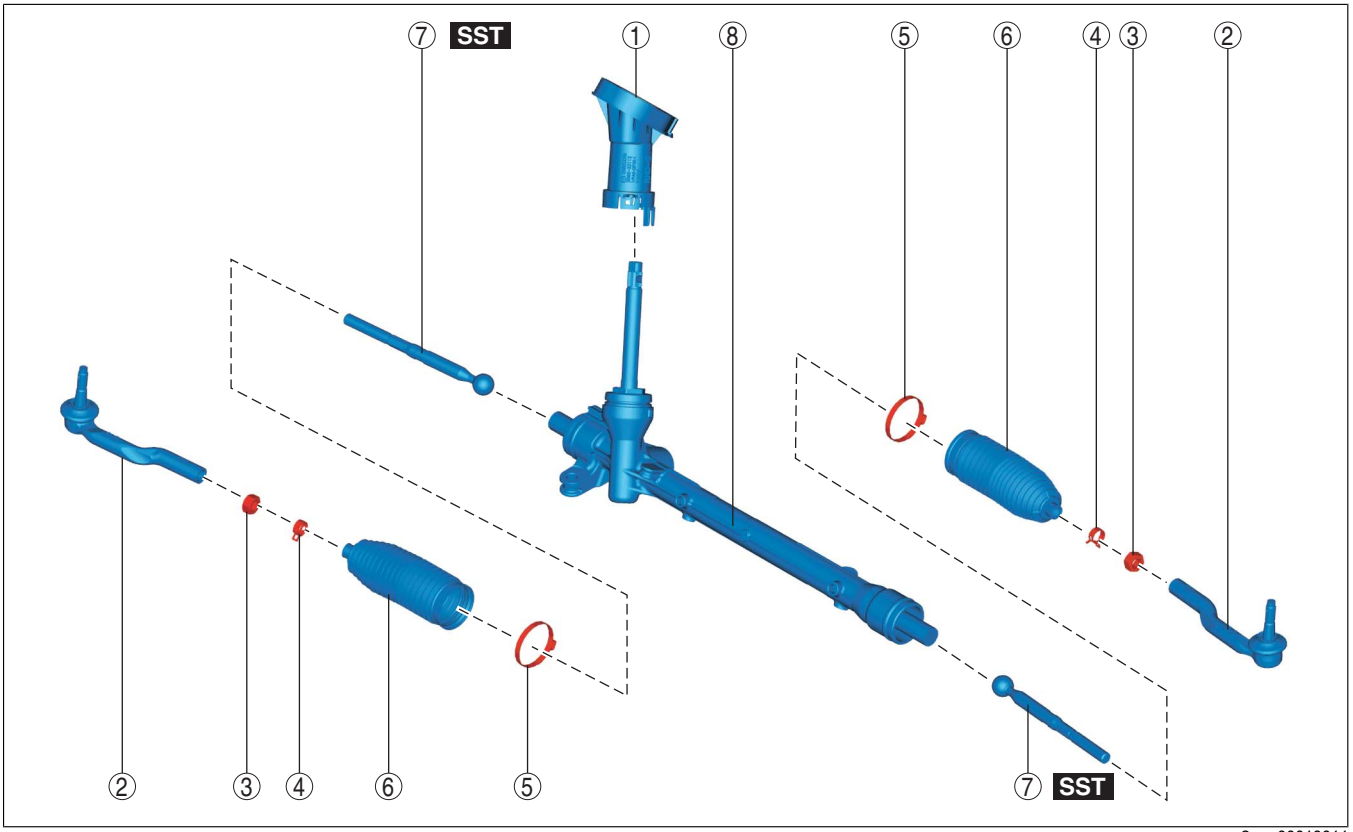


am2zzw00013011

1	Dust cover (See Dust Cover Disassembly Note.)
2	Tie-rod end (See Tie-rod End Disassembly Note.)
3	Locknut
4	Boot clamp
5	Boot band (See Boot Band Disassembly Note .)
6	Boot
7	Tie Rod (See Tie Rod Disassembly Note.)
8	Steering gear

Dust Cover Disassembly Note


1. Disengage the dust cover tabs shown in the figure from the steering gear.
2. Remove the dust cover from the steering gear.

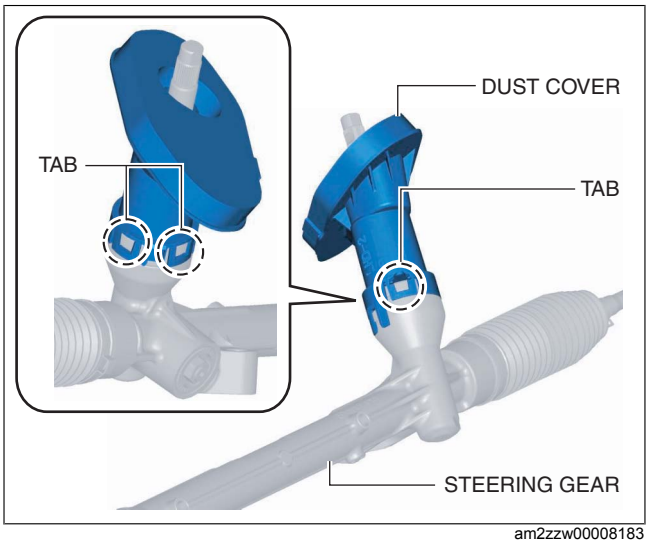

am2zzw00008183


Tie-rod End Disassembly Note

1. Place alignment marks as shown in the figure for proper installation.

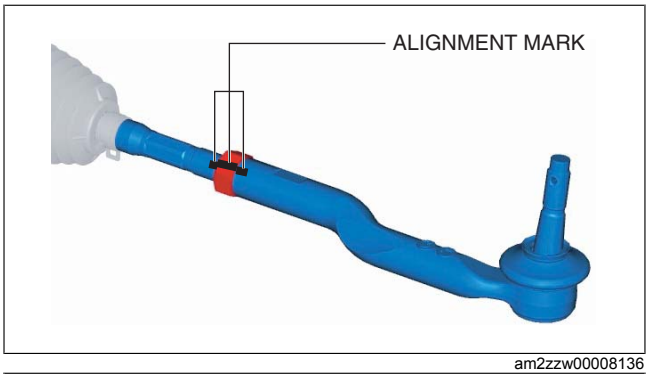

am2zzw00008136


2. Remove the tie-rod end.

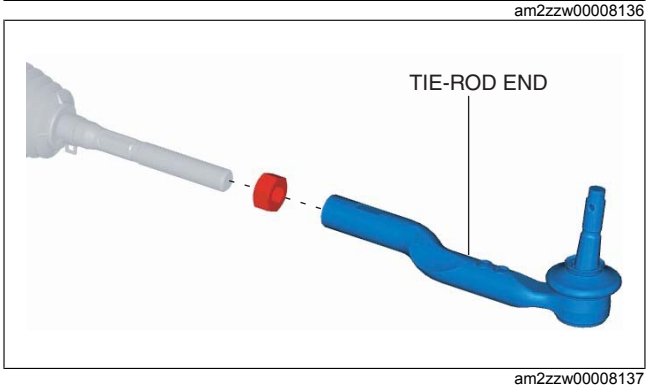

am2zzw00008137

Boot Band Disassembly Note


1. Insert a flathead screwdriver into the crimped part of the boot band, expand the crimped part and remove the boot band.

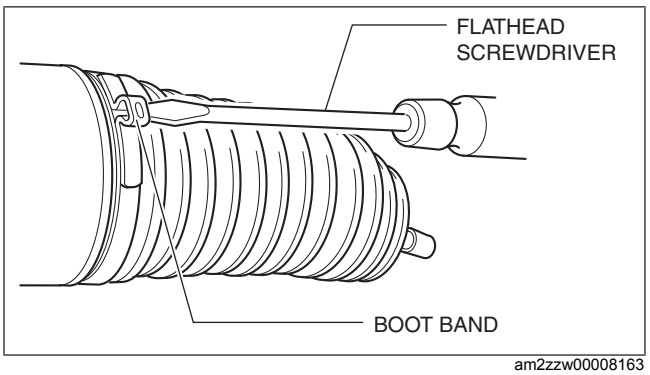

am2zzw00008163

Tie Rod Disassembly Note

1. Lock the steering rack end (pinion gear side) against rotation using a crescent wrench and remove the tie rod using the **SST**.

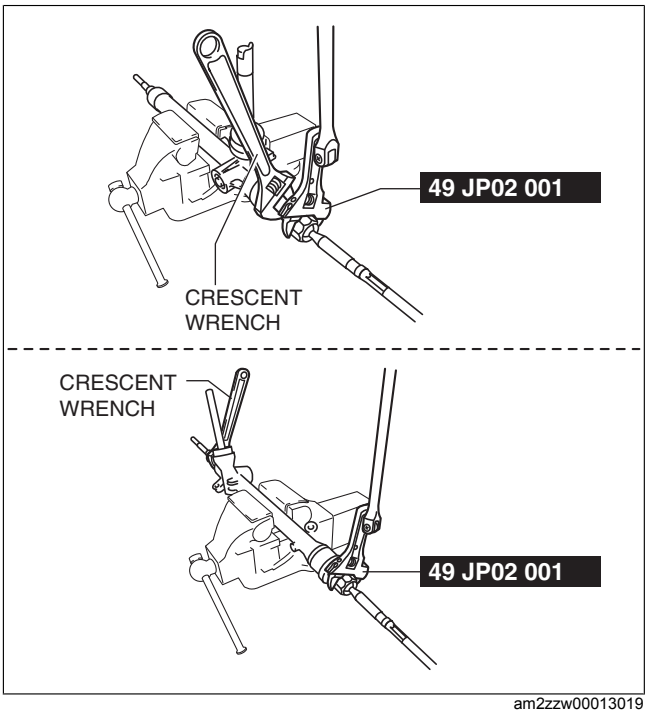

am2zzw00013019