
TIE-ROD END INSPECTION

id061300802700

1. Remove the steering gear and linkage. (See STEERING GEAR AND LINKAGE REMOVAL/INSTALLATION.)
2. Remove the tie-rod end. (See STEERING GEAR AND LINKAGE DISASSEMBLY.)
3. Inspect the tie-rod end for damage and the boot of the tie-rod end for cracks.
   - If there is any malfunction, replace the tie-rod end. (See STEERING GEAR AND LINKAGE ASSEMBLY.)
4. Inspect the tie-rod end for excessive play.
   - If there is any malfunction, replace the tie-rod end. (See STEERING GEAR AND LINKAGE ASSEMBLY.)
5. Rotate the tie-rod end **5 times**.

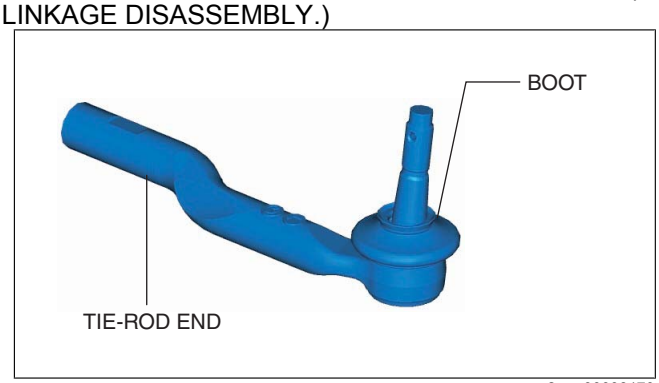


am2zzw00008170

6. Install 2 nuts to the tie-rod end and measure the rotational torque of the tie-rod end using a torque wrench.

   Tie-rod end rotational torque
   0.5—3.0 N·m {5.1—30 kgf·cm, 4.5—26 in·lbf}

   - If not within the specification, replace the tie-rod end. (See STEERING GEAR AND LINKAGE ASSEMBLY.)

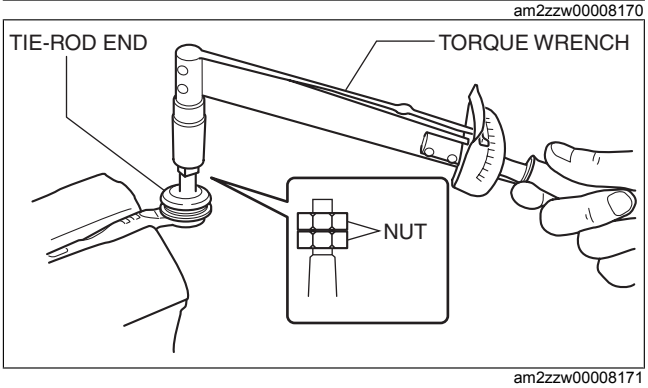

am2zzw00008171