
TIE ROD INSPECTION

id061300802900

1. Remove the steering gear and linkage. (See STEERING GEAR AND LINKAGE REMOVAL/INSTALLATION.)
2. Remove the tie-rod end and boot. (See STEERING GEAR AND LINKAGE DISASSEMBLY.)
3. Verify that there is no damage to or twisting of the tie rod.
   - If there is any malfunction, replace the steering gear. (See STEERING GEAR AND LINKAGE ASSEMBLY.)
4. Inspect the tie rod for excessive play.
   - If there is any malfunction, replace the steering gear. (See STEERING GEAR AND LINKAGE ASSEMBLY.)
5. Swing the tie rod **10 times**.
6. Measure the swing torque of the tie rod using a pull scale.

   Tie rod swing torque
   0.4—4.0 N·m {4.1—40 kgf·cm, 3.6—35 in·lbf}
   [Pull scale reading: 2.7—27.1 N {0.28—2.76 kgf, 0.61—6.09 lbf}]

   - If not within the specification, replace the steering gear. (See STEERING GEAR AND LINKAGE ASSEMBLY.)

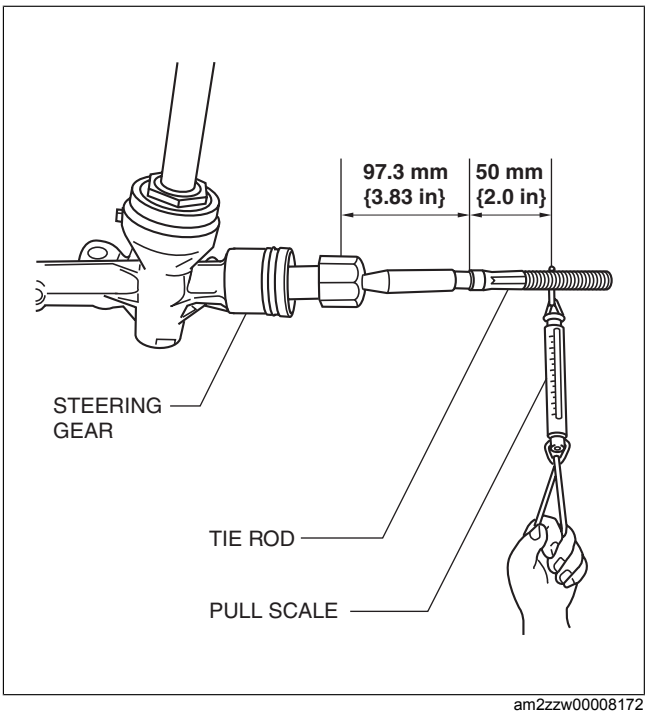

am2zzw00008172