
DTC B1C1C:12, B1C1C:13 [FULL-AUTO AIR CONDITIONER]

id0702c1200100

System malfunction location	• B1C1C:12: Airflow mode actuator (potentiometer) circuit short to power supply • B1C1C:13: Airflow mode actuator (potentiometer) circuit open
Detection condition	• Malfunction in wiring harness between airflow mode actuator and climate control unit
Fail-safe function	**Malfunction determined when ignition switched ON** • Airflow mode actuator drive signal is stopped right when the malfunction is determined.For manual operation, only vent or defroster mode is operable. **Malfunction already exists when ignition switched ON** • Control based on ambient temperature.For manual operation, only vent or defroster mode is operable.
Possible cause	• Connector or terminal malfunction • Airflow mode actuator malfunction • Open circuit in wiring harness between climate control unit and airflow mode actuator • Short to power supply in wiring harness between climate control unit and airflow mode actuator • Climate control unit malfunction

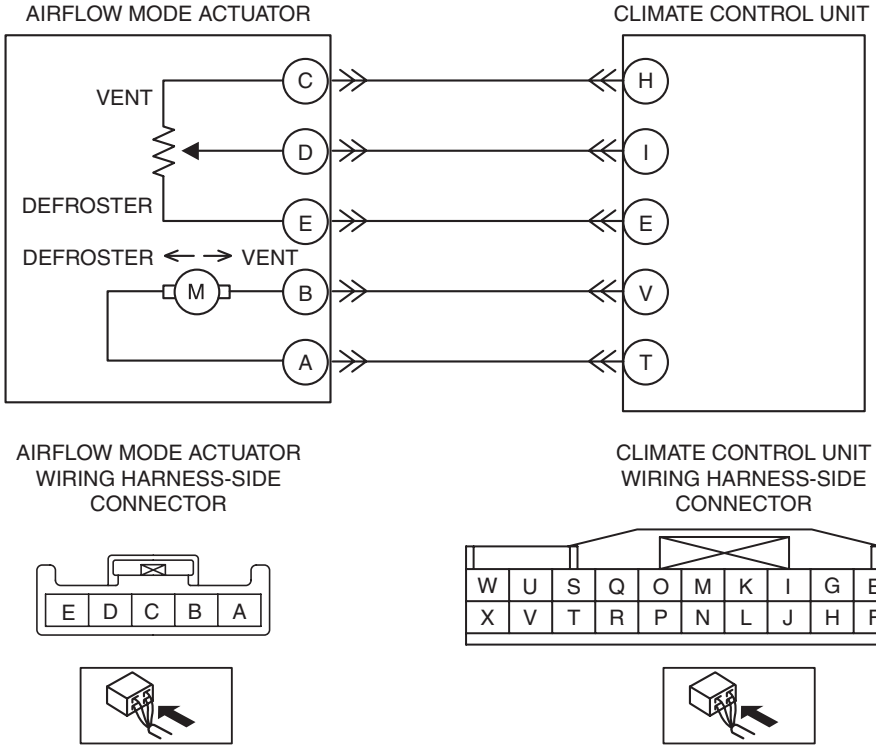

Diagnostic procedure

STEP	INSPECTION		ACTION
1	**INSPECT AIRFLOW MODE ACTUATOR CONNECTOR** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the airflow mode actuator connector. (See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) • Inspect the connector and terminals (corrosion, damage, pin disconnection). • Are the connector and terminals normal?	Yes	Go to the next step.
		No	Repair/replace the connector or terminal. After repair procedure, go to the next step.
2	**INSPECT AIRFLOW MODE ACTUATOR** • Inspect the airflow mode actuator. (See AIRFLOW MODE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].) • Is it normal?	Yes	Go to the next step.
		No	Replace the airflow mode actuator. (See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) Go to the next step.

STEP	INSPECTION		ACTION
3	**INSPECT AIRFLOW MODE ACTUATOR (POTENTIOMETER) CIRCUIT FOR OPEN CIRCUIT** • Disconnect the climate control unit connector. (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) • Disconnect the airflow mode actuator connector. (See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) • Inspect for continuity between the following terminals (wiring harness-side): — Climate control unit terminal H—airflow mode actuator terminal C — Climate control unit terminal I—airflow mode actuator terminal D — Climate control unit terminal E—airflow mode actuator terminal E • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between climate control unit terminal and airflow mode actuator terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
4	**INSPECT AIRFLOW MODE ACTUATOR (POTENTIOMETER) CIRCUIT FOR SHORT TO POWER SUPPLY** • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side): — Climate control unit terminal H — Climate control unit terminal I — Climate control unit terminal E • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between climate control unit terminal and airflow mode actuator terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to the next step.
5	**VERIFY CLIMATE CONTROL UNIT CONNECTOR CONDITION** • Inspect the connector and terminals (corrosion, damage, pin disconnection). • Are the connector and terminals normal?	Yes	Go to the next step.
		No	Repair/replace the malfunctioning vehicle wiring harness, connector, or terminal. After repair procedure, go to the next step.
6	**VERIFY THAT SAME DTC IS NOT OUTPUT AGAIN** • Reconnect the disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the past malfunction from memory. (See CLEARING DTC [FULL-AUTO AIR CONDITIONER].) • Verify DTCs. (See DTC DISPLAY [FULL-AUTO AIR CONDITIONER].) • Is DTC B1C1C:12, B1C1C:13 output?	Yes	Repeat the inspection from Step 1. • If the malfunction does not recur, go to the next step. • If the malfunction recurs, replace the climate control unit. (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) Go to the next step.
		No	Go to the next step.
7	**VERIFY THAT NO OTHER DTCs ARE PRESENT** • Verify other DTCs displayed. (See DTC DISPLAY [FULL-AUTO AIR CONDITIONER].) • Are any other DTCs output?	Yes	Perform the corresponding DTC inspection. (See DTC TABLE [FULL-AUTO AIR CONDITIONER].)
		No	DTC troubleshooting completed.