

DTC U3003:16, U3003:17 [FULL-AUTO AIR CONDITIONER]

id0702c1731000

System malfunction location	• U3003:16: Climate control unit power supply circuit voltage below threshold **(10 V or less)** • U3003:17: Climate control unit power supply circuit voltage above threshold **(17.3 V or more)**
Detection condition	• Climate control unit power supply voltage is other than **10—17.3 V**
Fail-safe function	Not applicable
Possible cause	• Generator system malfunction • INTERIOR 15 A, ROOM 25 A fuse malfunction • Battery malfunction • Climate control unit connector malfunction • Open or short circuit to ground in wiring harness between battery positive terminal and climate control unit terminal • Climate control unit malfunction

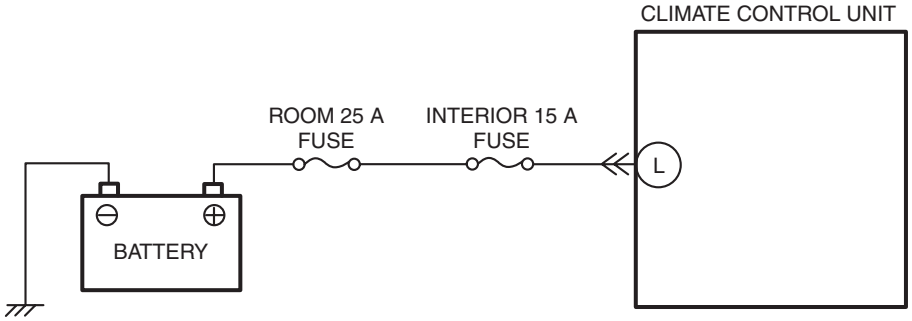

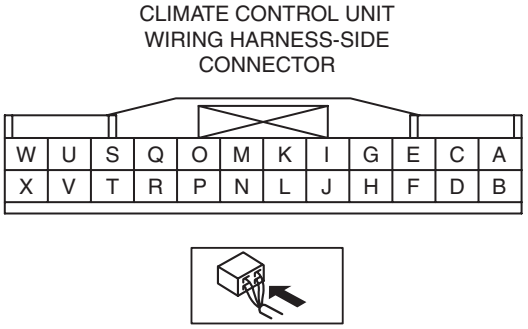

Diagnostic procedure

Step	Inspection		Action
1	**INSPECT PCM DTC (INSPECT GENERATOR CIRCUIT)** • Switch the ignition off. • Connect the M-MDS to the DLC-2. • Perform the PCM DTC inspection using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.
2	**INSPECT FUSE** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Remove the ROOM 15 A fuse. • Is the fuse normal?	Yes	Install the ROOM 15 A fuse, then go to the next step.
		No	Replace the ROOM 15 A fuse, then go to the next step.

Step	Inspection		Action
3	**INSPECT BATTERY** • Inspect the battery. (See BATTERY INSPECTION.) • Is the battery normal?	Yes	Go to the next step.
		No	Replace or charge the battery. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See BATTERY RECHARGING.) Then go to the next step.
4	**VERIFY CLIMATE CONTROL UNIT CONNECTOR CONDITION** • Disconnect the climate control unit connector. (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) • Inspect the connector and terminals (corrosion, damage, pin disconnection). • Are the connector and terminals normal?	Yes	Go to the next step.
		No	Repair/replace the connector or terminal. After repair procedure, go to the next step.
5	**INSPECT CLIMATE CONTROL UNIT POWER SUPPLY CIRCUIT FOR SHORT TO GROUND** • Inspect for continuity between climate control unit terminal L and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between climate control unit terminal 1B and battery positive terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 7.
		No	Go to the next step.
6	**INSPECT CLIMATE CONTROL UNIT POWER SUPPLY CIRCUIT FOR OPEN CIRCUIT** • Inspect for continuity between climate control unit terminal L and battery positive terminal. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between climate control unit terminal 1B and battery positive terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
7	**INSPECT CLIMATE CONTROL UNIT** • Reconnect the disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear DTCs using the M-MDS. (See CLEARING DTC [FULL-AUTO AIR CONDITIONER].) • Perform the climate control unit DTC inspection using the M-MDS. (See DTC DISPLAY [FULL-AUTO AIR CONDITIONER].) • Are DTCs U3003:16 or U3003:17 displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction does not recur, go to the next step. • If the malfunction recurs, replace the climate control unit. (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) Go to the next step.
		No	Go to the next step.
8	**VERIFY THAT NO OTHER DTCs ARE PRESENT** • Verify other DTCs displayed. (See DTC DISPLAY [FULL-AUTO AIR CONDITIONER].) • Are any other DTCs output?	Yes	Perform the corresponding DTC inspection. (See DTC TABLE [FULL-AUTO AIR CONDITIONER].)
		No	DTC troubleshooting completed.