
DTC U300E:13 [FULL-AUTO AIR CONDITIONER]

id0702c1731800

System malfunction location	• Climate control unit power supply circuit open (IG1)
Detection condition	• Malfunction in wiring harness between climate control unit and IG1 relay
Fail-safe function	Not applicable
Possible cause	• IG1 relay malfunction • Climate control unit connector malfunction • Open circuit in wiring harness between battery positive terminal and climate control unit terminal • Climate control unit malfunction

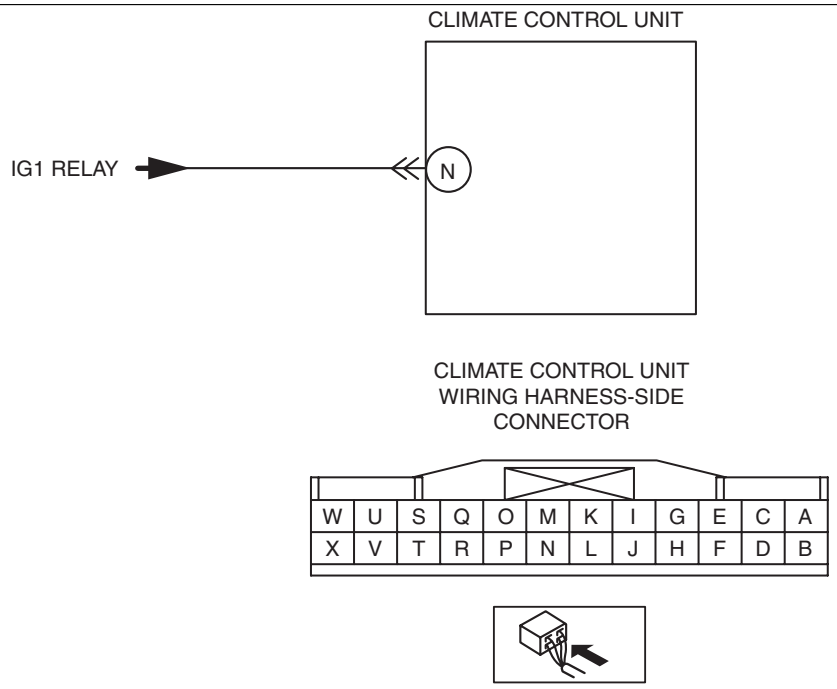

Step	Inspection		Action
1	**INSPECT IG1 RELAY FOR MALFUNCTION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Remove the IG1 relay. (See RELAY LOCATION.) • Inspect the IG1 relay. (See RELAY INSPECTION.) • Is the IG1 relay normal?	Yes	Go to the next step.
		No	Replace the IG1 relay, then go to Step 5. (See RELAY LOCATION.)
2	**VERIFY CLIMATE CONTROL UNIT CONNECTOR CONDITION** • Disconnect the climate control unit connector. (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) • Inspect the connector and terminals (corrosion, damage, pin disconnection). • Are the connector and terminals normal?	Yes	Go to the next step.
		No	Repair/replace the connector or terminal. After repair procedure, go to the next step.

Step	Inspection		Action
3	**INSPECT CLIMATE CONTROL UNIT POWER SUPPLY CIRCUIT FOR OPEN CIRCUIT** • Inspect for continuity between climate control unit terminal N and IG1 relay. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between climate control unit terminal and IG1 relay. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
4	**INSPECT CLIMATE CONTROL UNIT** • Reconnect the disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear DTCs using the M-MDS. • Perform the climate control unit DTC inspection using the M-MDS. (See DTC DISPLAY [FULL-AUTO AIR CONDITIONER].) • Are DTCs U300E:13 displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction does not recur, go to the next step. • If the malfunction recurs, replace the climate control unit. (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) Go to the next step.
		No	Go to the next step.
5	**VERIFY THAT NO OTHER DTCs ARE PRESENT** • Verify other DTCs displayed. (See DTC DISPLAY [FULL-AUTO AIR CONDITIONER].) • Are any other DTCs output?	Yes	Perform the corresponding DTC inspection. (See DTC TABLE [FULL-AUTO AIR CONDITIONER].)
		No	DTC troubleshooting completed.