
DTC U200D:11 [FULL-AUTO AIR CONDITIONER]

id0702c1736600

System malfunction location	• Climate control unit circuit voltage (+5V) circuit short to ground
Detection condition	• Malfunction in wiring harness between climate control unit circuit voltage (+5V) and each sensor/actuator
Fail-safe function	Not applicable
Possible cause	• Connector or terminal malfunction • Each sensor/actuator malfunction • Short to ground in wiring harness between climate control unit and air mix actuator • Short to ground in wiring harness between climate control unit and airflow mode actuator • Short to ground in wiring harness between climate control unit and solar radiation sensor • Climate control unit malfunction

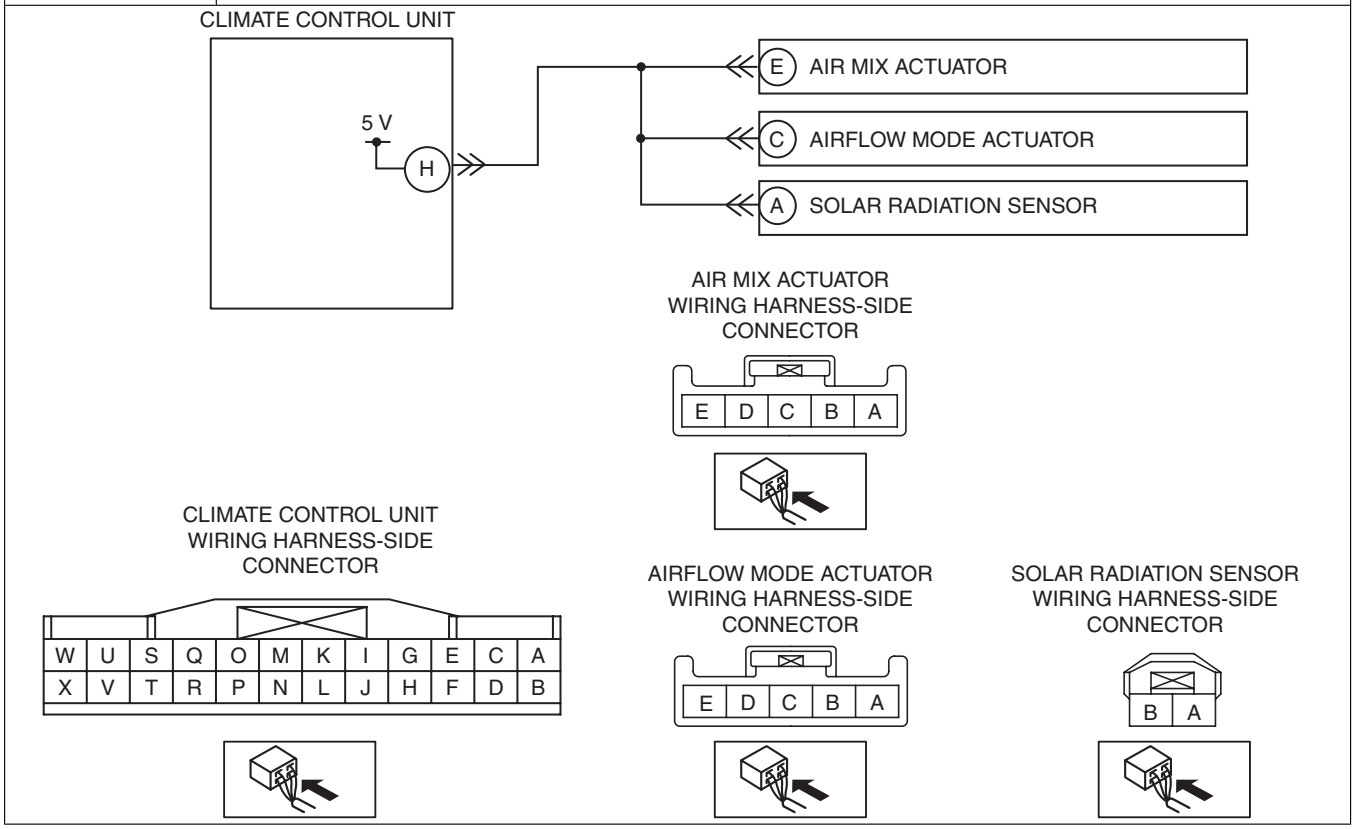

Diagnostic procedure

STEP	INSPECTION		ACTION
1	**VERIFY CLIMATE CONTROL UNIT CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the climate control unit connectors. (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) • Inspect the connector and terminals (corrosion, damage, pin disconnection). • Are the connector and terminals normal?	Yes	Go to the next step.
		No	Repair/replace the malfunctioning vehicle wiring harness, connector, or terminal. After repair procedure, go to the next step.

STEP	INSPECTION		ACTION
2	**VERIFY CONNECTOR CONDITION** • Disconnect the following each sensor/actuator connectors. — Air mix actuator (See AIR MIX ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) — Airflow mode actuator (See AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) — Solar radiation sensor (See SOLAR RADIATION SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) • Inspect the connector and terminals (corrosion, damage, pin disconnection). • Are the connector and terminals normal?	Yes	Go to the next step.
		No	Replace the malfunctioning part. (See AIR MIX ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See SOLAR RADIATION SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) After replace procedure, go to the next step.
3	**INSPECT EACH SENSOR/ACTUATOR** • Inspect the following each sensor/actuator. — Air mix actuator (See AIR MIX ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].) — Airflow mode actuator (See AIRFLOW MODE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].) — Solar radiation sensor (See SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].) • Is it normal?	Yes	Go to the next step.
		No	Replace the malfunctioning sensor/actuator. (See AIR MIX ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See SOLAR RADIATION SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) After replace procedure, go to the next step.
4	**INSPECT EACH SENSOR/ACTUATOR CIRCUIT FOR SHORT TO GROUND** • Inspect for continuity between the following terminal (wiring harness-side) and body ground: — Climate control unit terminal H • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between climate control unit terminal H and each sensor/actuator terminals. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to the next step.
		No	Go to the next step.
5	**VERIFY THAT SAME DTC IS NOT OUTPUT AGAIN** • Reconnect the disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the past malfunction from memory. (See CLEARING DTC [FULL-AUTO AIR CONDITIONER].) • Verify DTCs. (See DTC DISPLAY [FULL-AUTO AIR CONDITIONER].) • Is DTC U200D:11 output?	Yes	Repeat the inspection from Step 1. • If the malfunction does not recur, go to the next step. • If the malfunction recurs, replace the climate control unit. (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) Go to the next step.
		No	Go to the next step.
6	**VERIFY THAT NO OTHER DTCs ARE PRESENT** • Verify other DTCs displayed. (See DTC DISPLAY [FULL-AUTO AIR CONDITIONER].) • Are any other DTCs output?	Yes	Perform the corresponding DTC inspection. (See DTC TABLE [FULL-AUTO AIR CONDITIONER].)
		No	DTC troubleshooting completed.