
REFRIGERANT SYSTEM PERFORMANCE TEST

id071000800700

Note
- Measure the air conditioner output temperature after **approx.10 min** have elapsed from engine start.

1. Inspect the refrigerant pressure. (See REFRIGERANT PRESSURE CHECK.)
2. Place a dry-bulb thermometer in the driver-side center ventilator outlet.
3. Start the engine and warm it up.
4. Set the fan speed to MAX HI.
5. Turn the A/C switch on.
6. Set to RECIRCULATE mode.
7. Set the temperature control to MAX COLD.
8. Set to VENT mode.
9. Close all the doors and windows.
10. Maintain the engine speed at **1,500 rpm**.
11. Wait until the air conditioner output temperature stabilizes.

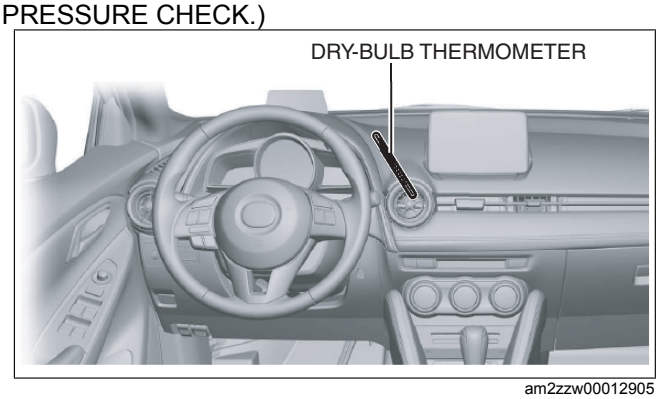


am2zzw00012905

Stabilized condition
- The A/C compressor repeatedly turns on and off at regular intervals.


12. After the blower air is stabilized, read the dry-bulb thermometer.
13. Verify the ambient temperature.
14. Verify that there is blower air temperature readings within the shaded areas of the figure.

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (HFC-134a (R-134a))

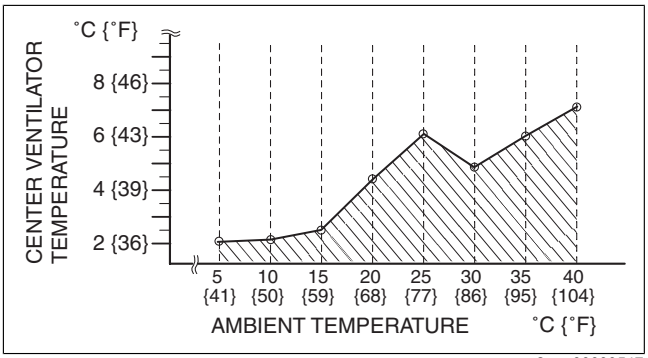


am2zzw00009547

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (Thai specs. (HFC-134a (R-134a)))

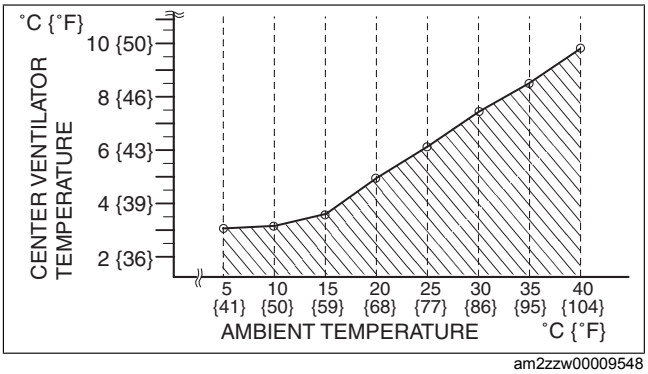


am2zzw00009548

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (Thai specs. (HFC-134a (R-134a)), without heater system)

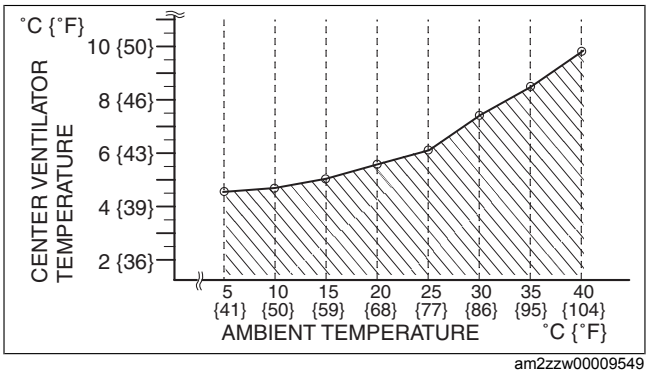


am2zzw00009549

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (HFO-1234yf (R-1234yf))

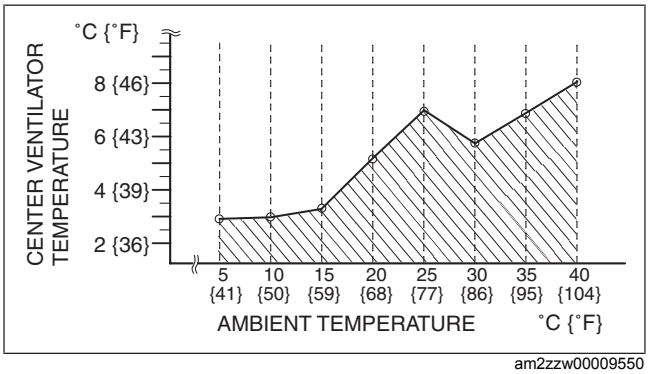


am2zzw00009550

SKYACTIV-D 1.5 (HFC-134a (R-134a))

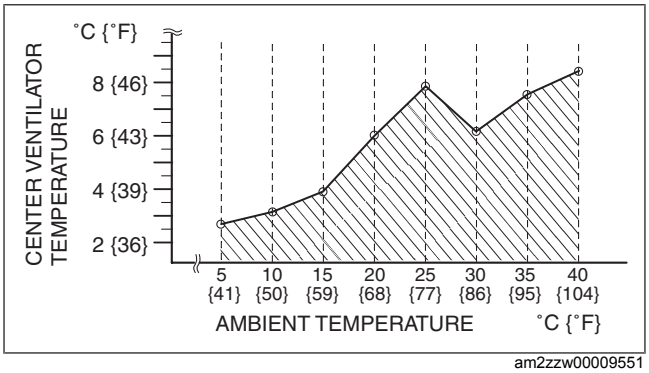

am2zzw00009551


SKYACTIV-D 1.5 (Thai specs. (HFC-134a (R-134a)))

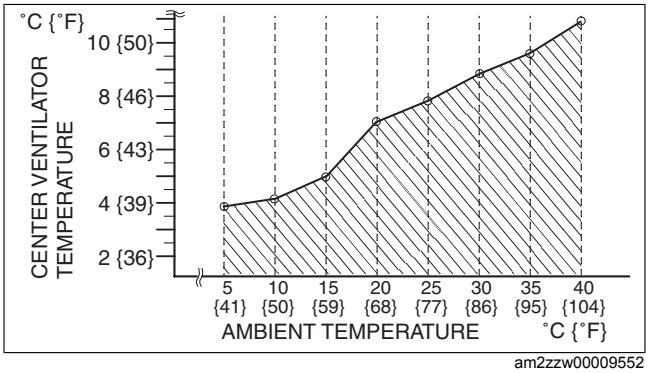

am2zzw00009552

SKYACTIV-D 1.5 (HFO-1234yf (R-1234yf))

- If the there is any malfunction, inspect the refrigerant system according to the troubleshooting chart. (See FOREWORD [FULL-AUTO AIR CONDITIONER].) (See FOREWORD [MANUAL AIR CONDITIONER].)

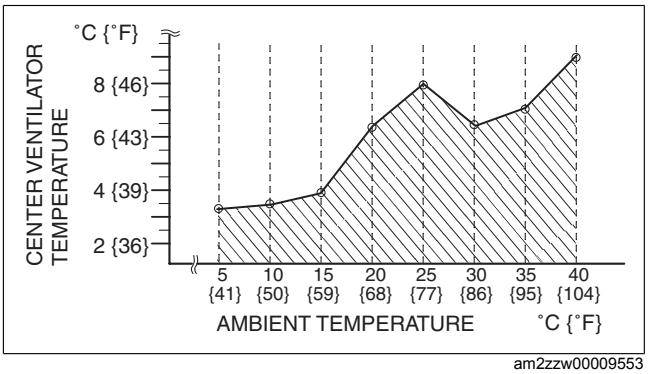

am2zzw00009553