
BLOWER UNIT

id071100001300

Purpose, Function
- The blower unit switches the airflow between FRESH and RECIRCULATE and sends it to the A/C unit.

Construction
- The blower unit consists of the following parts.

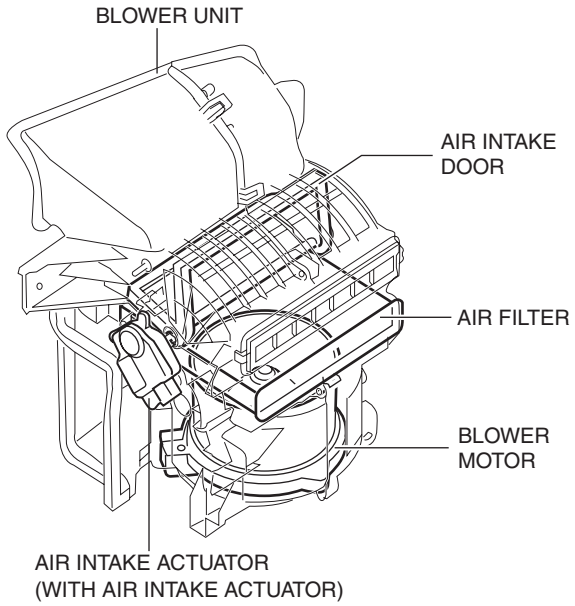

am2zzn00002100

Operation
- For the blower unit operation, refer to the BLOWER SYSTEM. (See BLOWER SYSTEM.)

Fail-safe
- Not applicable