RECEIVER/DRIER

id071100002300

Purpose, Function

- The receiver/drier temporarily stores refrigerant and extracts only liquid refrigerant. As a result, outflow to the expansion valve of refrigerant, which could not be liquefied completely by the condenser, is prevented, and the discharge pulsation of the A/C compressor is absorbed.

Construction

- The receiver/drier consists of the following parts.

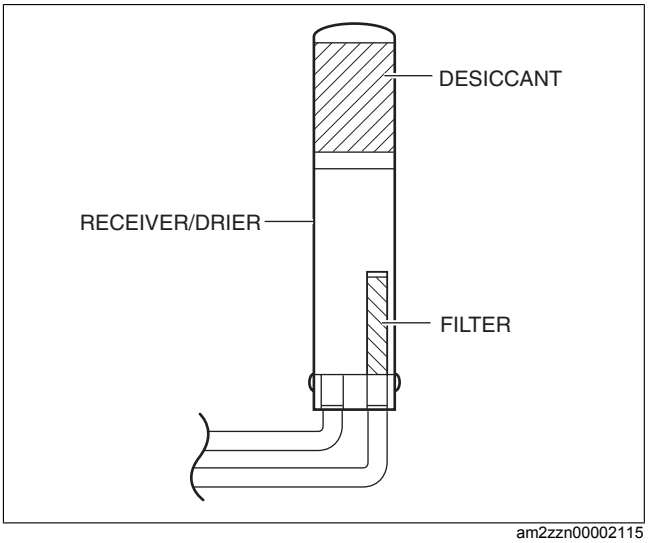

am2zzn00002115

Operation

- For the receiver/drier operation, refer to the REFRIGERANT SYSTEM. (See REFRIGERANT SYSTEM.)

Fail-safe

- Not applicable