
HEATER CORE

id071100002600

Purpose, Function
- Engine coolant is circulated inside the heater core.

Construction
- The heater core consists of a tube which passes engine coolant, and the heat radiation fins.

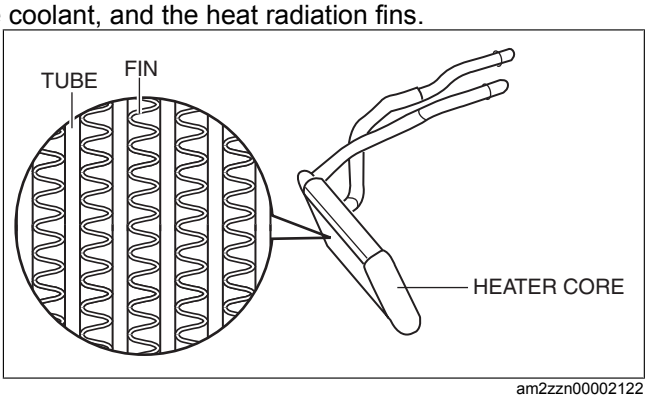

am2zzn00002122

Operation
- For the heater core operation, refer to the HEATER SYSTEM. (See HEATER SYSTEM.)

Fail-safe
- Not applicable