

## BLOWER FAN CONTROLLER INSPECTION

id071100006200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (2) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
3. Remove the blower fan controller. (See BLOWER FAN CONTROLLER REMOVAL/INSTALLATION.)
4. Connect the blower fan controller connector.
5. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
6. Switch the ignition ON (engine off or on).
7. Connect the negative (-) lead of the tester to body ground.
8. Insert the positive (+) lead of the tester into each blower fan controller terminal.
9. Measure the voltage according to the terminal voltage table.
   - If there is any malfunction, inspect the parts under “Inspection item (s)”.
     — If the parts under “Inspection item (s)” are found to be normal, replace the blower fan controller. (See BLOWER FAN CONTROLLER REMOVAL/INSTALLATION.)

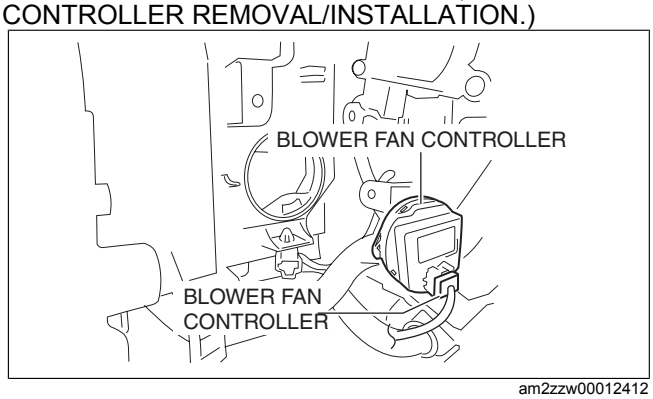


am2zzw00012412

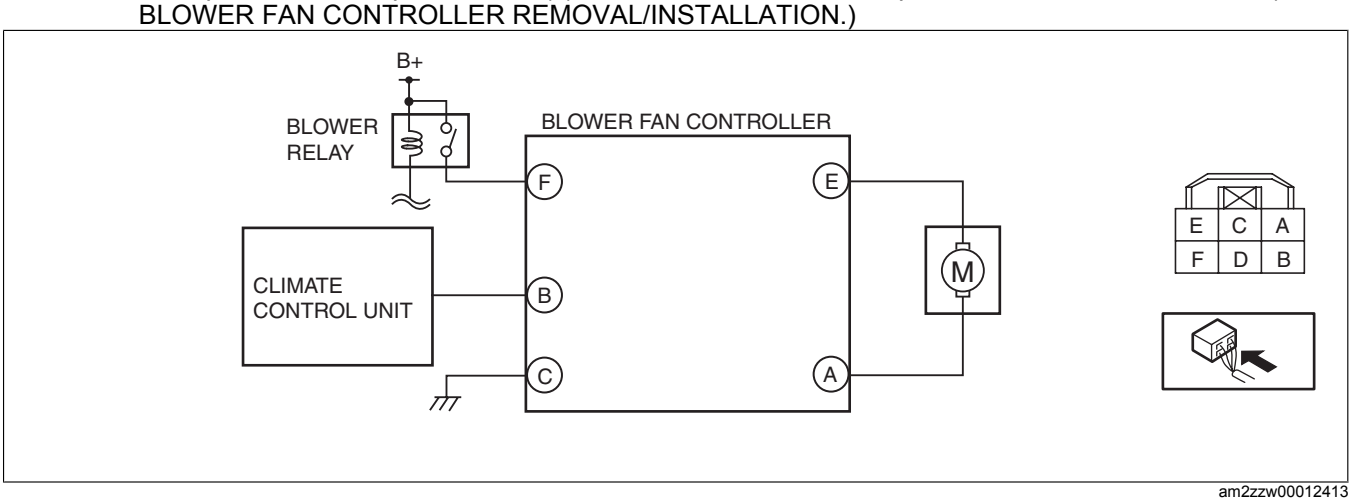


am2zzw00012413


### Terminal Voltage Table (Reference)

| Terminal | Signal name | Connected to | Measurement condition | Voltage (V) | Inspection item (s) |
|---|---|---|---|---|---|
| A | Motor operation (-) | Blower motor | Switch the ignition off | 1.0 or less | • Blower motor<br>• Related wiring harness |
| | | | Fan stopped (Switch the ignition ON (engine off or on)) | B+ | |
| | | | Fan: manual 1st | 8.4 | |
| | | | Fan: manual 3rd | 6.8 | |
| | | | Fan: manual 7th | 1.0 or less | |
| B | Blower fan speed control | Climate control unit | (See Blower Fan Speed Control Signal.) | | • Related wiring harness<br>• Climate control unit |
| C | GND | Body ground | Under any condition | 1.0 or less | • Related wiring harness |
| D | — | — | — | — | — |
| E | Motor operation (+) | Blower motor | Switch the ignition off | 1.0 or less | • Blower motor<br>• Related wiring harness |
| | | | Switch the ignition ON (engine off or on) | B+ | |
| F | B+ | Blower relay | Switch the ignition off | 1.0 or less | • Related wiring harness<br>• Blower relay |
| | | | Switch the ignition ON (engine off or on) | B+ | |

**Blower Fan Speed Control Signal**
**Fan stopped**
**Blower fan controller terminal**
- B(+)—body ground(-)

**Oscilloscope setting**
- 5 V/DIV (Y), 1 ms/DIV (X), DC range

**Vehicle condition**
- Switch the ignition ON (engine off or on)

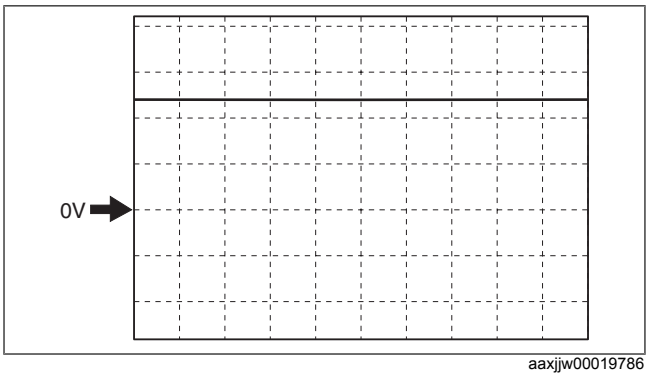


aaxjjw00019786

**Manual 1st**
**Blower fan controller terminal**
- B(+)—body ground(-)

**Oscilloscope setting**
- 5 V/DIV (Y), 1 ms/DIV (X), DC range

**Vehicle condition**
- Switch the ignition ON (engine off or on)
- Airflow mode: VENT
- Air intake mode: RECIRCULATE

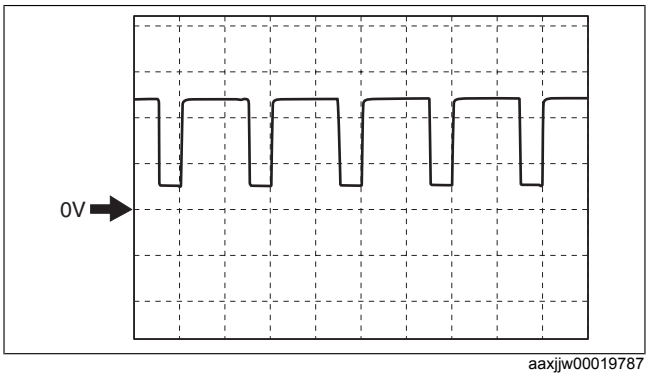


aaxjjw00019787

**Manual 3rd**
**Blower fan controller terminal**
- B(+)—body ground(-)

**Oscilloscope setting**
- 5 V/DIV (Y), 1 ms/DIV (X), DC range

**Vehicle condition**
- Switch the ignition ON (engine off or on)
- Airflow mode: VENT
- Air intake mode: RECIRCULATE

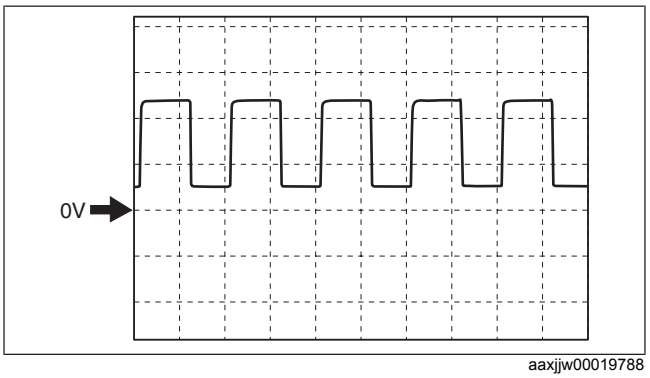


aaxjjw00019788

**Manual 7th**
**Blower fan controller terminal**
- B(+)—body ground(-)

**Oscilloscope setting**
- 5 V/DIV (Y), 1 ms/DIV (X), DC range

**Vehicle condition**
- Switch the ignition ON (engine off or on)
- Airflow mode: VENT
- Air intake mode: RECIRCULATE

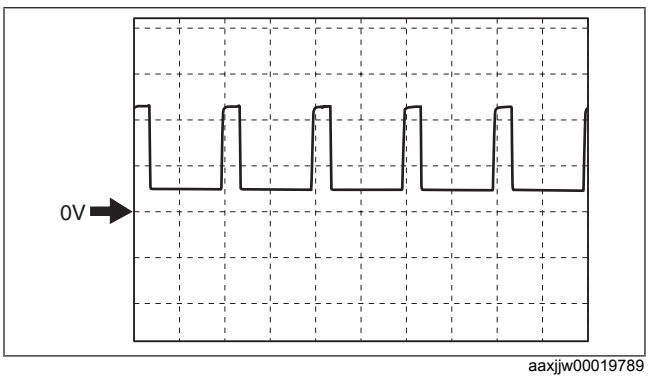

aaxjjw00019789