
## MAGNETIC CLUTCH DISASSEMBLY/ASSEMBLY [SKYACTIV-D 1.5]

id071100006312

1. Disassemble in the order indicated in the table.

| | |
|---|---|
| 1 | Bolt<br>(See Bolt Removal/Installation Note.) |
| 2 | Washer |
| 3 | Pressure plate |
| 4 | Shim |
| 5 | Snap ring<br>(See Snap Ring Removal/Installation Note.) |
| 6 | A/C compressor pulley<br>(See A/C Compressor Pulley Removal Note.)<br>(See A/C Compressor Pulley Installation Note.) |
| 7 | Snap ring<br>(See Snap Ring Removal/Installation Note.) |
| 8 | Stator |
| 9 | A/C compressor body |

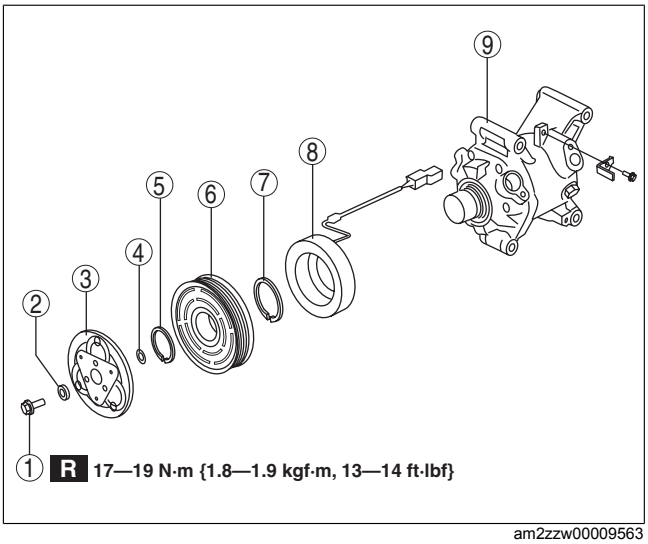


am2zzw00009563

2. Assemble in the reverse order of disassembly.
3. Adjust the magnetic clutch clearance. (See MAGNETIC CLUTCH ADJUSTMENT [SKYACTIV-D 1.5].)


### Bolt Removal/Installation Note

1. When removing or installing the bolt, lock the A/C compressor pulley against rotation using the following procedure.

**Caution**

- **When connecting the positive battery cable to the magnetic clutch connector, use a cable with a female terminal of the correct size. Otherwise, load will be applied to the terminal, resulting in deformation or damage, and poor contact. In addition, the positive battery cable could disconnect from the connector resulting in a short circuit.**


(1) Apply battery positive voltage to the magnetic clutch connector and connect the A/C compressor body to the ground.

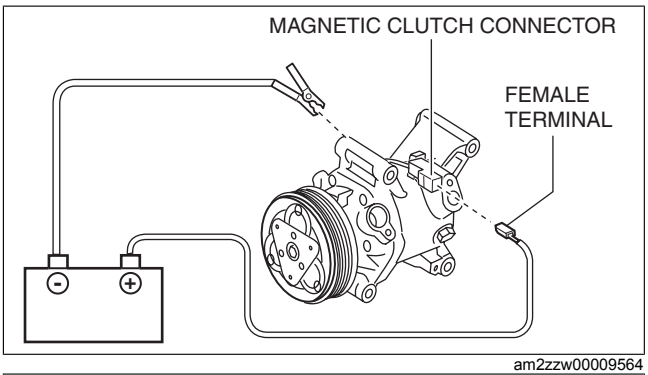


am2zzw00009564

(2) Wrap the drive belt, which is no longer of use, tightly around the A/C compressor pulley.
(3) Hold the drive belt in place with pliers.
(4) Remove/installation the bolt.


**Tightening torque**
**17—19 N·m {1.8—1.9 kgf·m, 13—14 ft·lbf}**

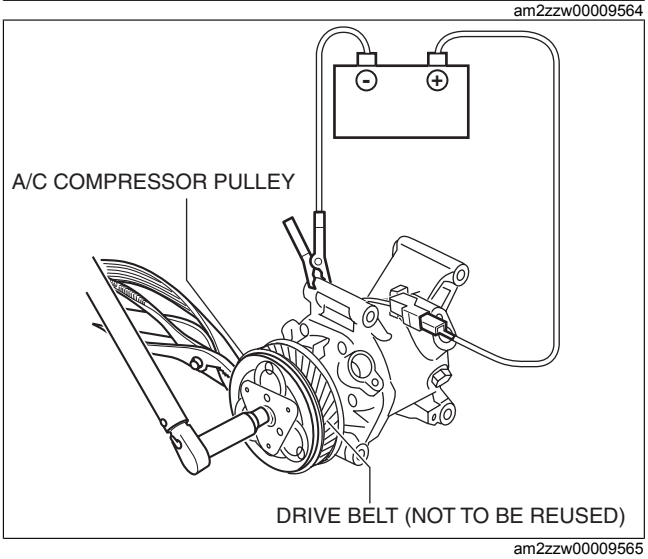


am2zzw00009565

**Snap Ring Removal/Installation Note**

1. Remove/install the snap ring using a snap ring pliers.

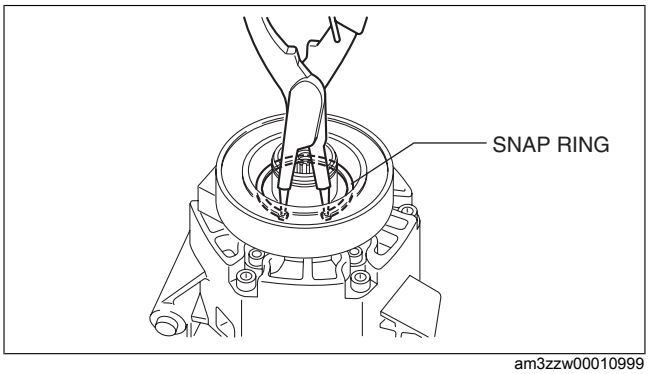



am3zzw00010999

**A/C Compressor Pulley Removal Note**

**Note**

- Wrap protective tape around the tabs of the **SST (49 0839 425C)** so that the A/C compressor pulley is not scratched.


1. Remove the A/C compressor pulley using the **SSTs (49 0839 425C, 49 U027 001)**.

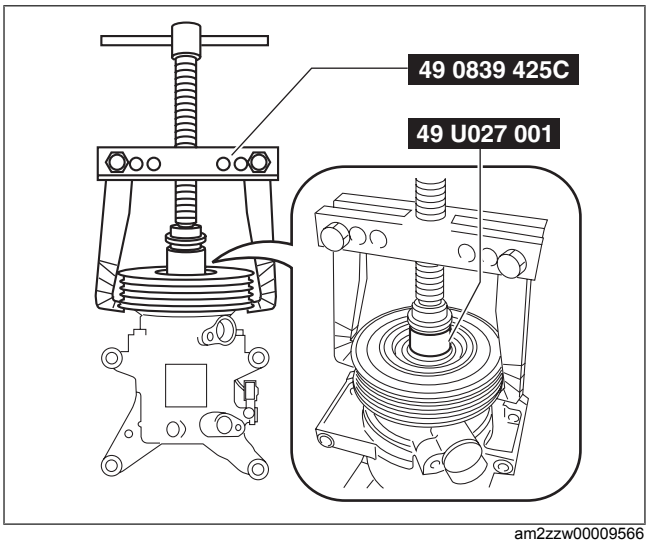


am2zzw00009566

**Caution**


- **If the A/C compressor pulley is removed with the SST (49 0839 425C) tabs attached to the stator, the stator could be damaged. When using the SST (49 0839 425C), make sure the tabs are not attached.**

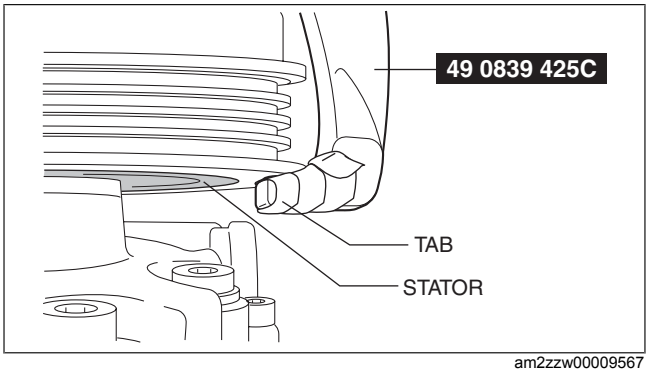


am2zzw00009567

**A/C Compressor Pulley Installation Note**

1. Set the **SST (49 F034 207)** as shown in the figure.

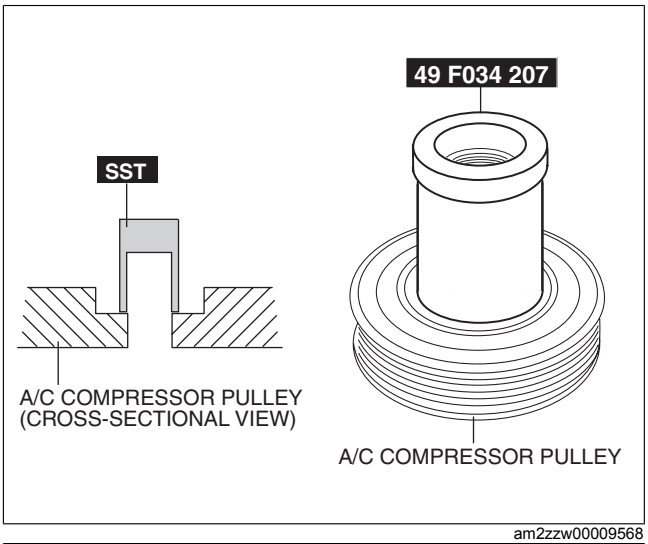



am2zzw00009568

2. Install the inner wheel of the A/C compressor pulley using **SST (49 0839 425C, 49 F034 207)** to the compressor.

**Caution**

- **If the SST is not properly positioned when the A/C compressor pulley is press-fit, the A/C compressor axle will interfere with the SST, possibly damaging component parts. Verify the SST and axle are properly positioned and perform the procedure very carefully.**

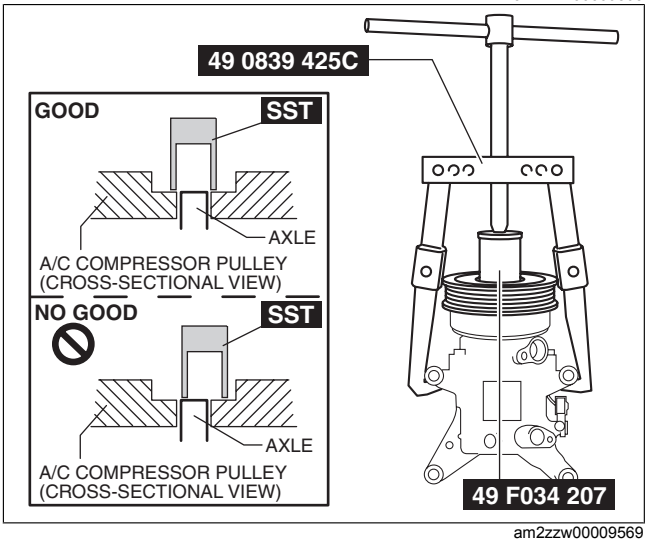


am2zzw00009569