
MAGNETIC CLUTCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0711000065l1

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Connect battery to terminal A of magnetic clutch and ground to A/C compressor body.

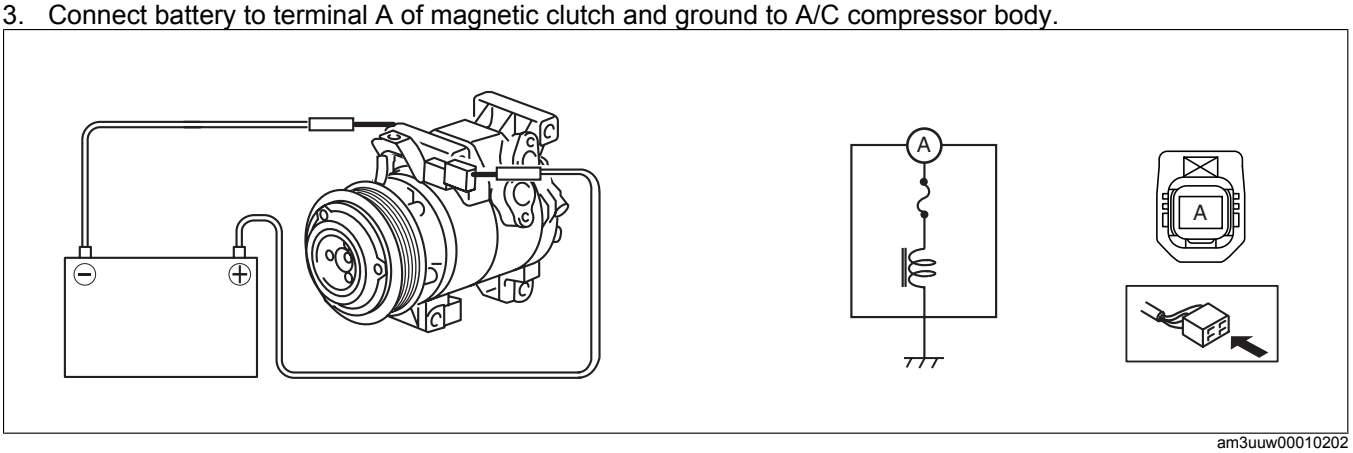

am3uuw00010202

4. Verify that the magnetic clutch operates.
   - If there is any malfunction, replace the magnetic clutch. (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)