
MAGNETIC CLUTCH INSPECTION [SKYACTIV-D 1.5]

id0711000065l2

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the coolant reserve tank. (See COOLANT RESERVE TANK REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Connect battery to terminal A of magnetic clutch and ground to A/C compressor body.

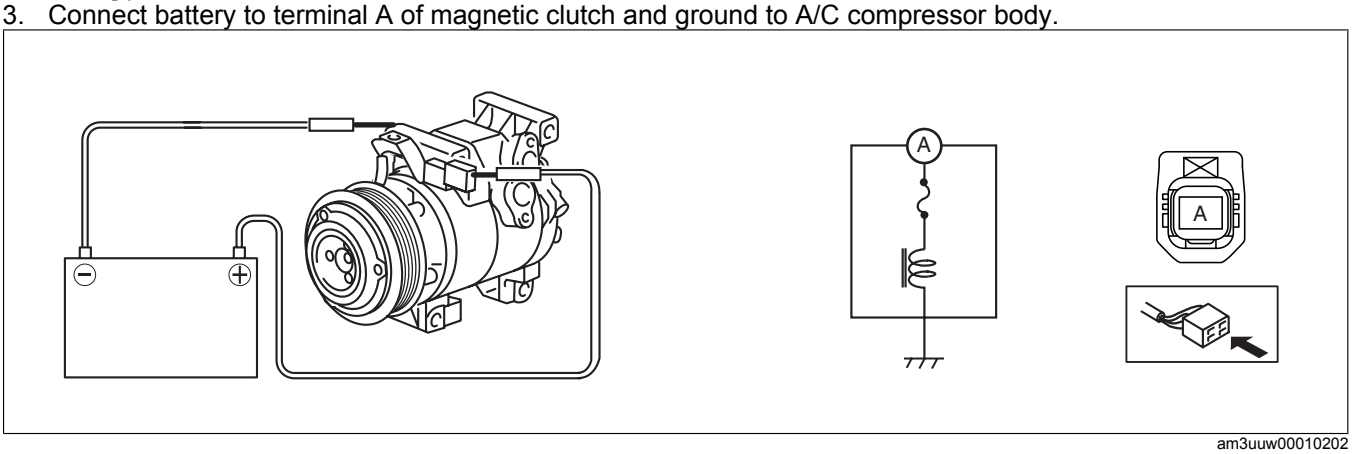

am3uuw00010202

4. Verify that the magnetic clutch operates.
   - If there is any malfunction, replace the magnetic clutch. (See MAGNETIC CLUTCH DISASSEMBLY/ASSEMBLY [SKYACTIV-D 1.5].)