
RESISTOR REMOVAL/INSTALLATION


id071100016300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (2) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
3. Disconnect the resistor connector.

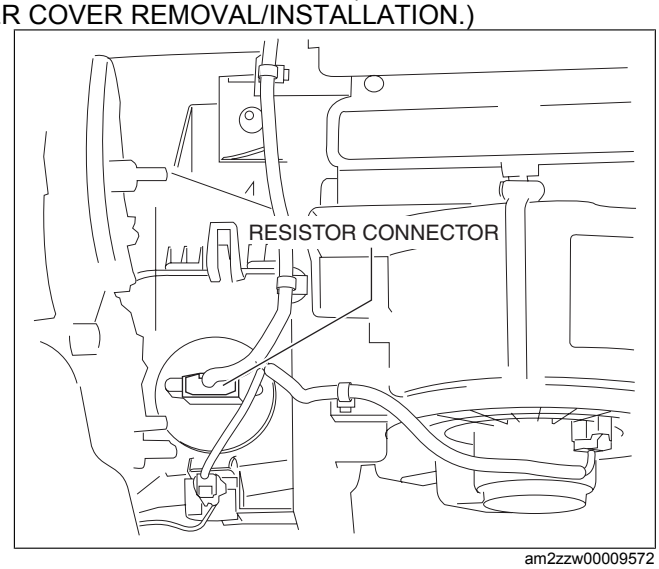


am2zzw00009572

4. Rotate the resistor (2) while pressing the tab (1).

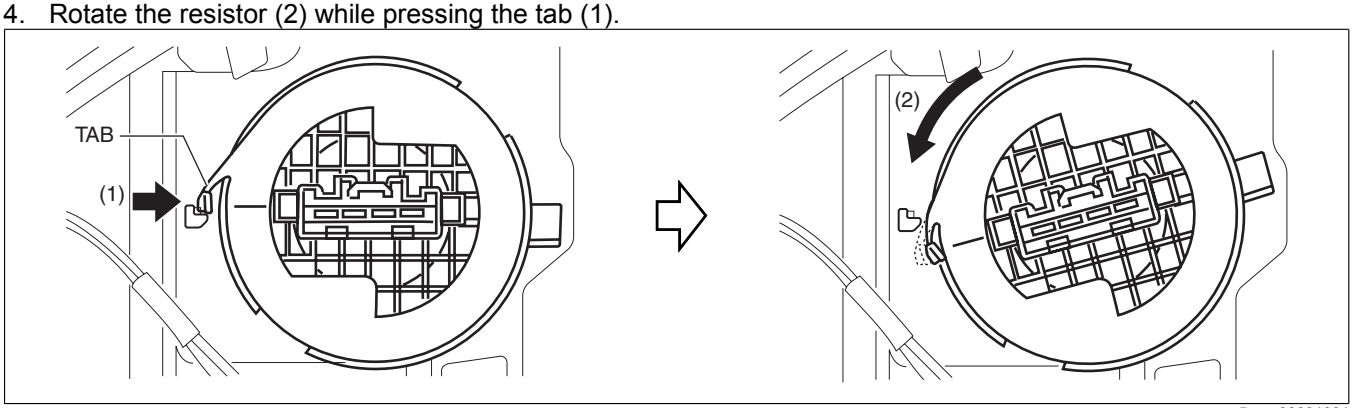

ac5wzw00001901

5. Remove the resistor.
6. Install in the reverse order of removal.

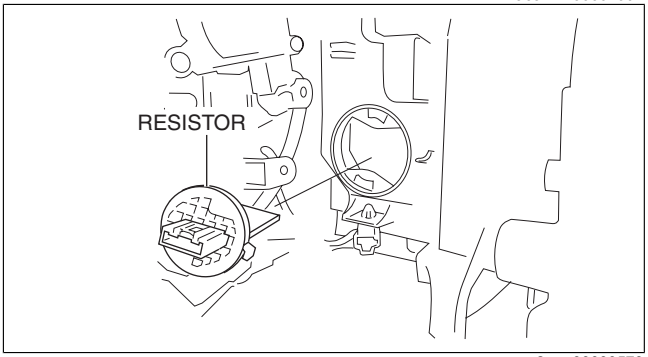

am2zzw00009573