
RESISTOR INSPECTION

id071100016400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (2) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
3. Verify that the resistance between the resistor terminals is as shown in the table.
   - If there is any malfunction, replace the resistor.

Terminal	Resistance (ohm)
A—D	0.54
A—B	1.47
A—C	3.92

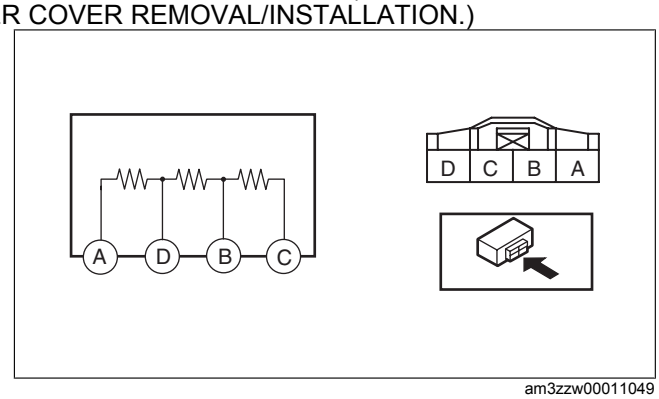

am3zzw00011049