
AIR FILTER REMOVAL/INSTALLATION

id071100360100

1. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
2. While pressing the tabs in the direction of arrows (1) shown in the figure, remove the air filter in the direction of arrow (2).
3. Install in the reverse order of removal.

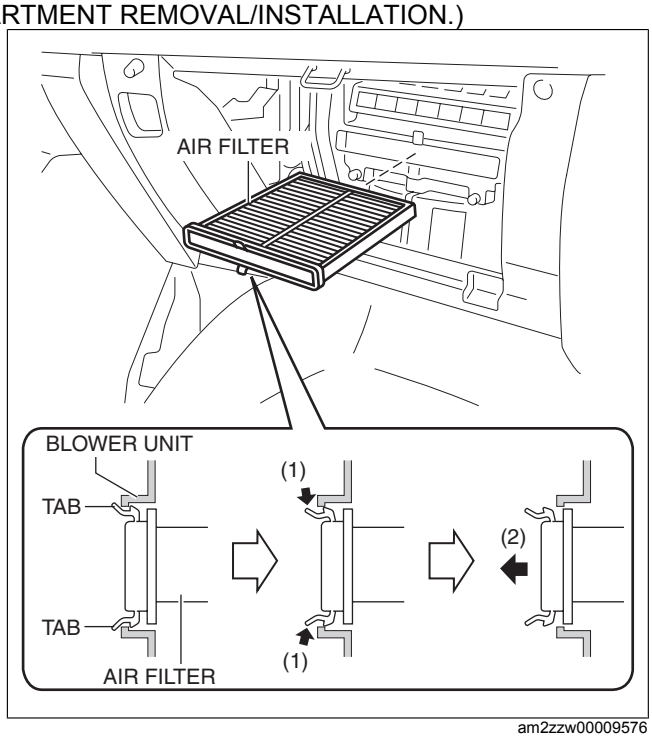

am2zzw00009576