A/C UNIT DISASSEMBLY/ASSEMBLY


id071100800300

L.H.D. (Full-auto Air Conditioner)

1. Disassemble in the order indicated in the table.

Caution

- **If a non-specified grease is used, it may result in abnormal noise or an operation malfunction of the links. Use only a grease coating agent on each link and do not wipe off or add additional grease.**

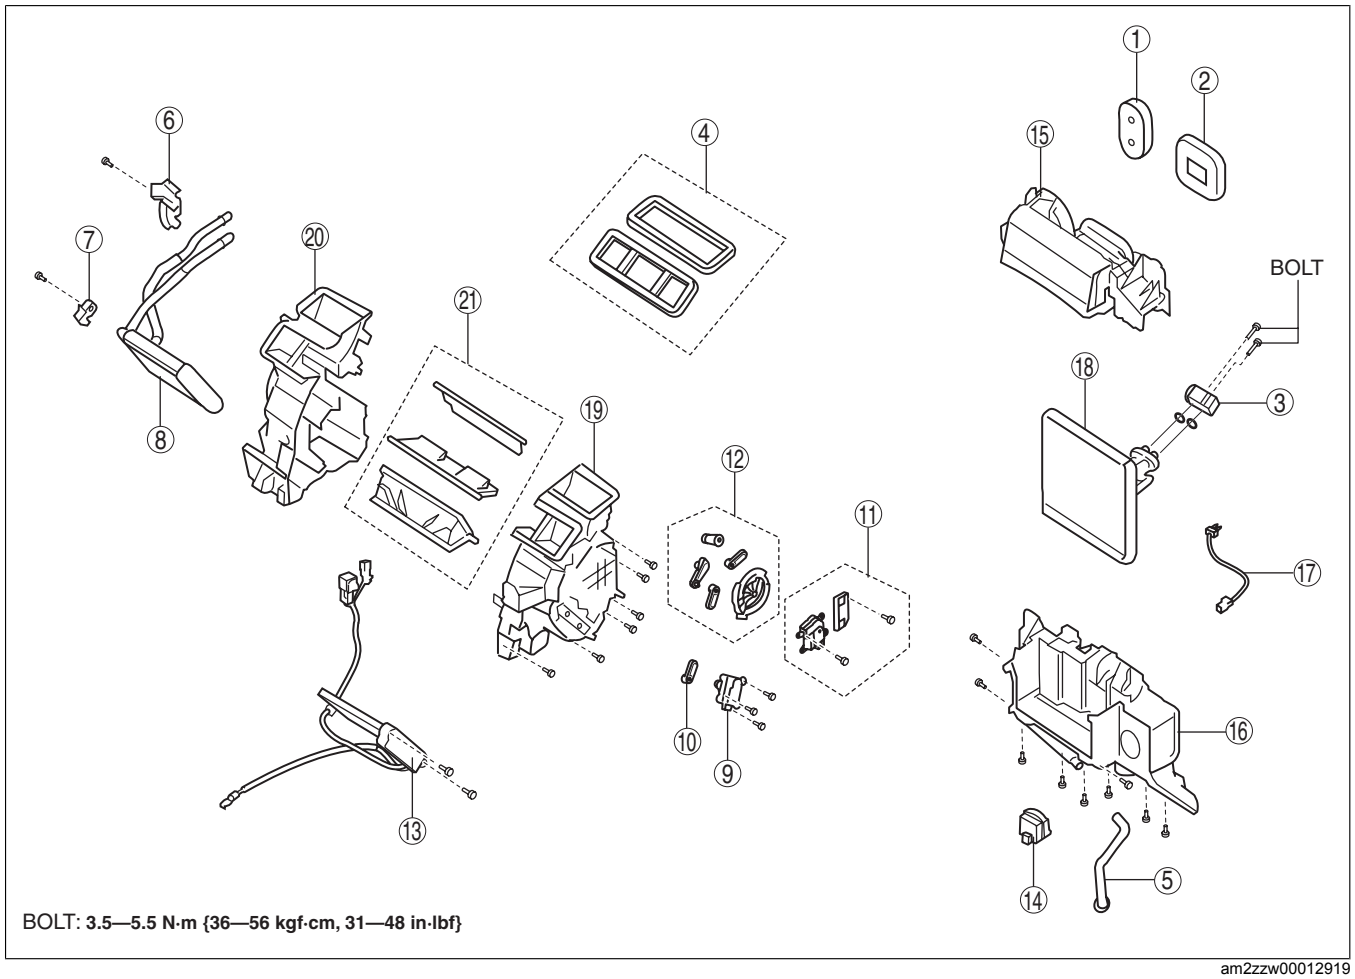

am2zzw00012919

×: Applicable
—: Not applicable


Step	Part name	Disassembly/assembly of main parts		
		Heater core	Evaporator temperature sensor	Evaporator
1	Polyurethane foam A	×	×	×
2	Polyurethane foam B	—	×	×
3	Expansion valve	—	—	×
4	Adhesive polyurethane	—	—	—
5	Drain hose	—	—	—
6	Plate A	×	×	×
7	Plate B	×	×	×
8	Heater core	×	×	×
9	Air mix actuator	—	—	—
10	Air mix link	—	—	—
11	Airflow mode actuator	—	—	—
12	Airflow mode link set	—	—	—
13	PTC heater (With PTC heater)	—	—	—
14	Blower fan controller	—	—	—
15	A/C case A	—	×	×
16	A/C case B	—	×	×

Step	Part name	Disassembly/assembly of main parts		
		Heater core	Evaporator temperature sensor	Evaporator
17	Evaporator temperature sensor (See Evaporator temperature sensor assembly note.)	—	×	×
18	Evaporator	—	—	×
19	A/C case C	—	—	—
20	A/C case D	—	—	—
21	Door damper	—	—	—

2. Assemble in the reverse order of disassembly.

Evaporator temperature sensor assembly note

1. Assemble the evaporator temperature sensor as shown in the figure.

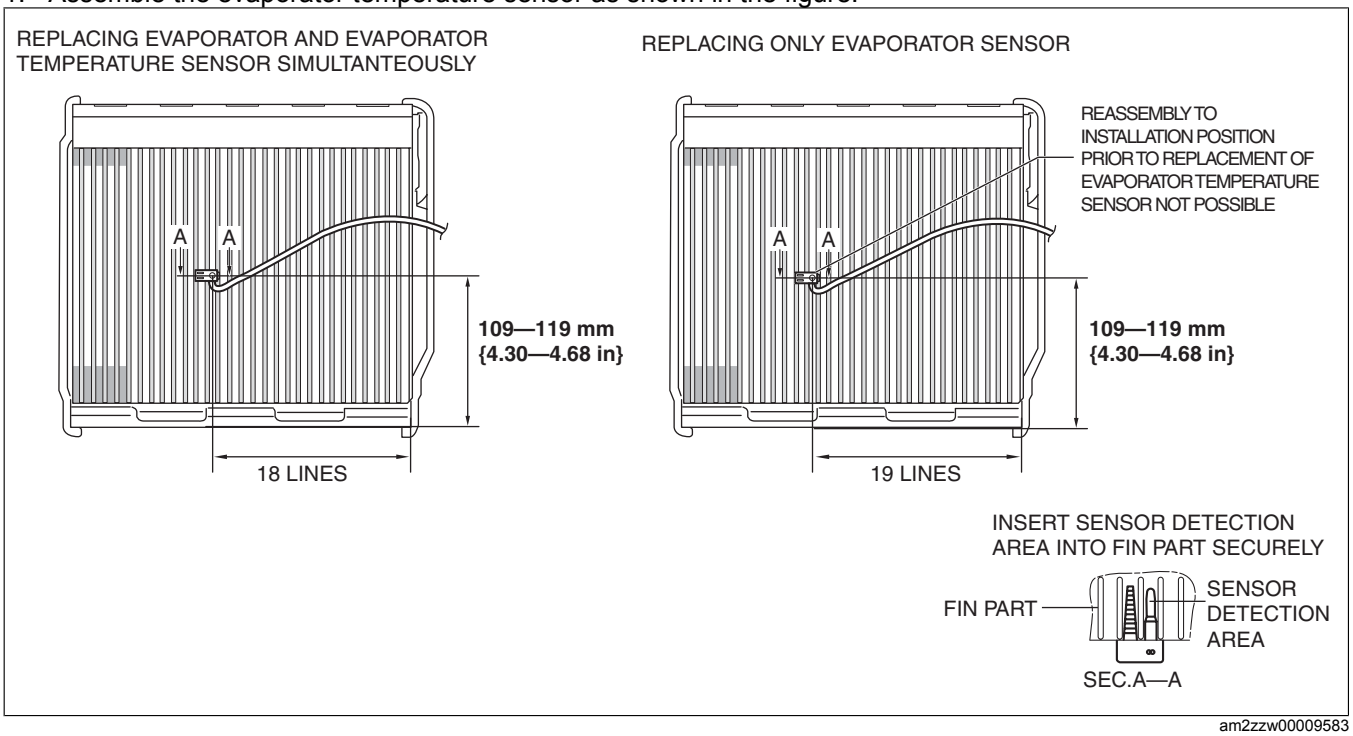

am2zzw00009583

Caution

- **If the evaporator temperature sensor is assembled to its previous installation position, it may not function due to poor contact of the evaporator fin surface with the sensor detection area caused by fin deformation. When replacing only the evaporator sensor, shift the evaporator temperature sensor installation position from the current position and assemble.**

Note


- If an evaporator temperature sensor cannot be correctly positioned on the evaporator, replace the evaporator.

L.H.D. (Manual Air Conditioner)

1. Disassemble in the order indicated in the table.

Caution

- **If a non-specified grease is used, it may result in abnormal noise or an operation malfunction of the links. Use only a grease coating agent on each link and do not wipe off or add additional grease.**

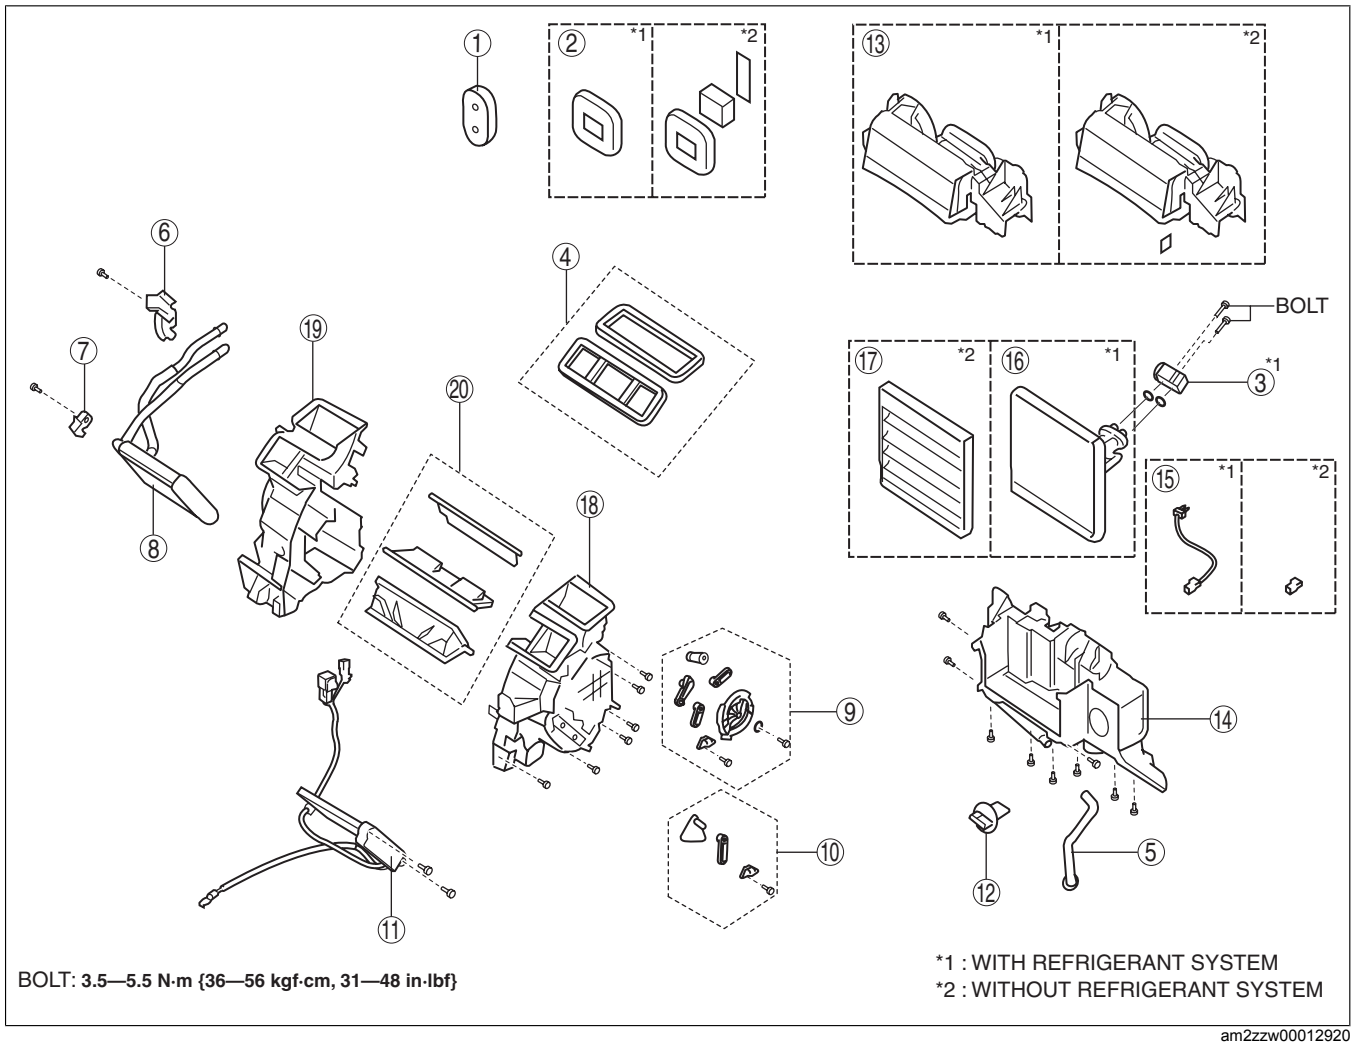

BOLT: **3.5—5.5 N·m {36—56 kgf·cm, 31—48 in·lbf}**

am2zzw00012920


×: Applicable
—: Not applicable

Step	Part name	Disassembly/assembly of main parts		
		Heater core	Evaporator temperature sensor	Evaporator
1	Polyurethane foam A	×	×	×
2	Polyurethane foam B	—	×	×
3	Expansion valve *1	—	—	×
4	Adhesive polyurethane	—	—	—
5	Drain hose	—	—	—
6	Plate A	×	×	×
7	Plate B	×	×	×
8	Heater core	×	×	×
9	Airflow mode link set	—	—	—
10	Air mix link	—	—	—
11	PTC heater (With PTC heater)	—	—	—
12	Resistor	—	—	—
13	A/C case A	—	×	×
14	A/C case B	—	×	×
15	Evaporator temperature sensor *1 (See Evaporator temperature sensor assembly note.)	—	×	×
16	Evaporator *1	—	—	×
17	Case *2	—	—	—
18	A/C case C	—	—	—
19	A/C case D	—	—	—

Step	Part name	Disassembly/assembly of main parts		
		Heater core	Evaporator temperature sensor	Evaporator
20	Door damper	—	—	—

*1 : With refrigerant system
*2 : Without refrigerant system
2. Assemble in the reverse order of disassembly.

Evaporator temperature sensor assembly note
1. Assemble the evaporator temperature sensor as shown in the figure.

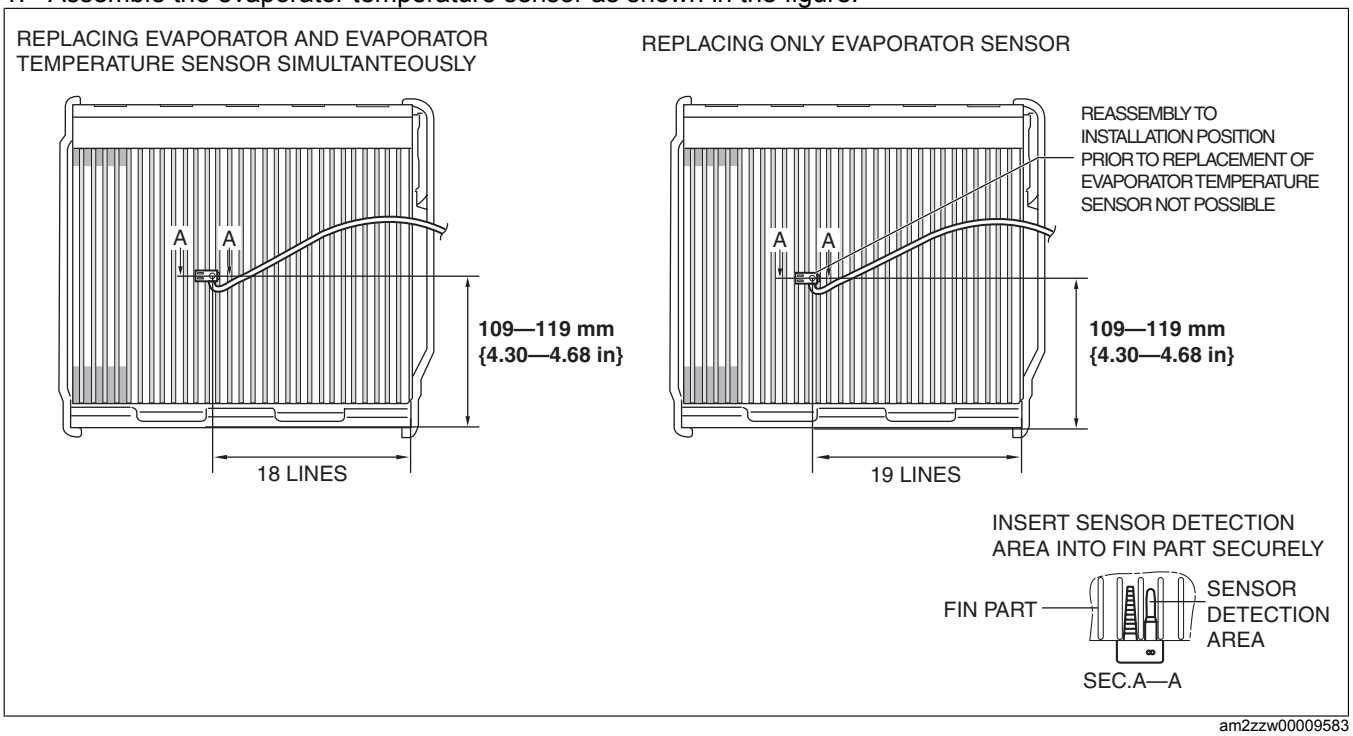


am2zzw00009583

Caution
- **If the evaporator temperature sensor is assembled to its previous installation position, it may not function due to poor contact of the evaporator fin surface with the sensor detection area caused by fin deformation. When replacing only the evaporator sensor, shift the evaporator temperature sensor installation position from the current position and assemble.**

Note
- If an evaporator temperature sensor cannot be correctly positioned on the evaporator, replace the evaporator.

R.H.D. (Full-auto Air Conditioner)
1. Disassemble in the order indicated in the table.

Caution
- **If a non-specified grease is used, it may result in abnormal noise or an operation malfunction of the links. Use only a grease coating agent on each link and do not wipe off or add additional grease.**

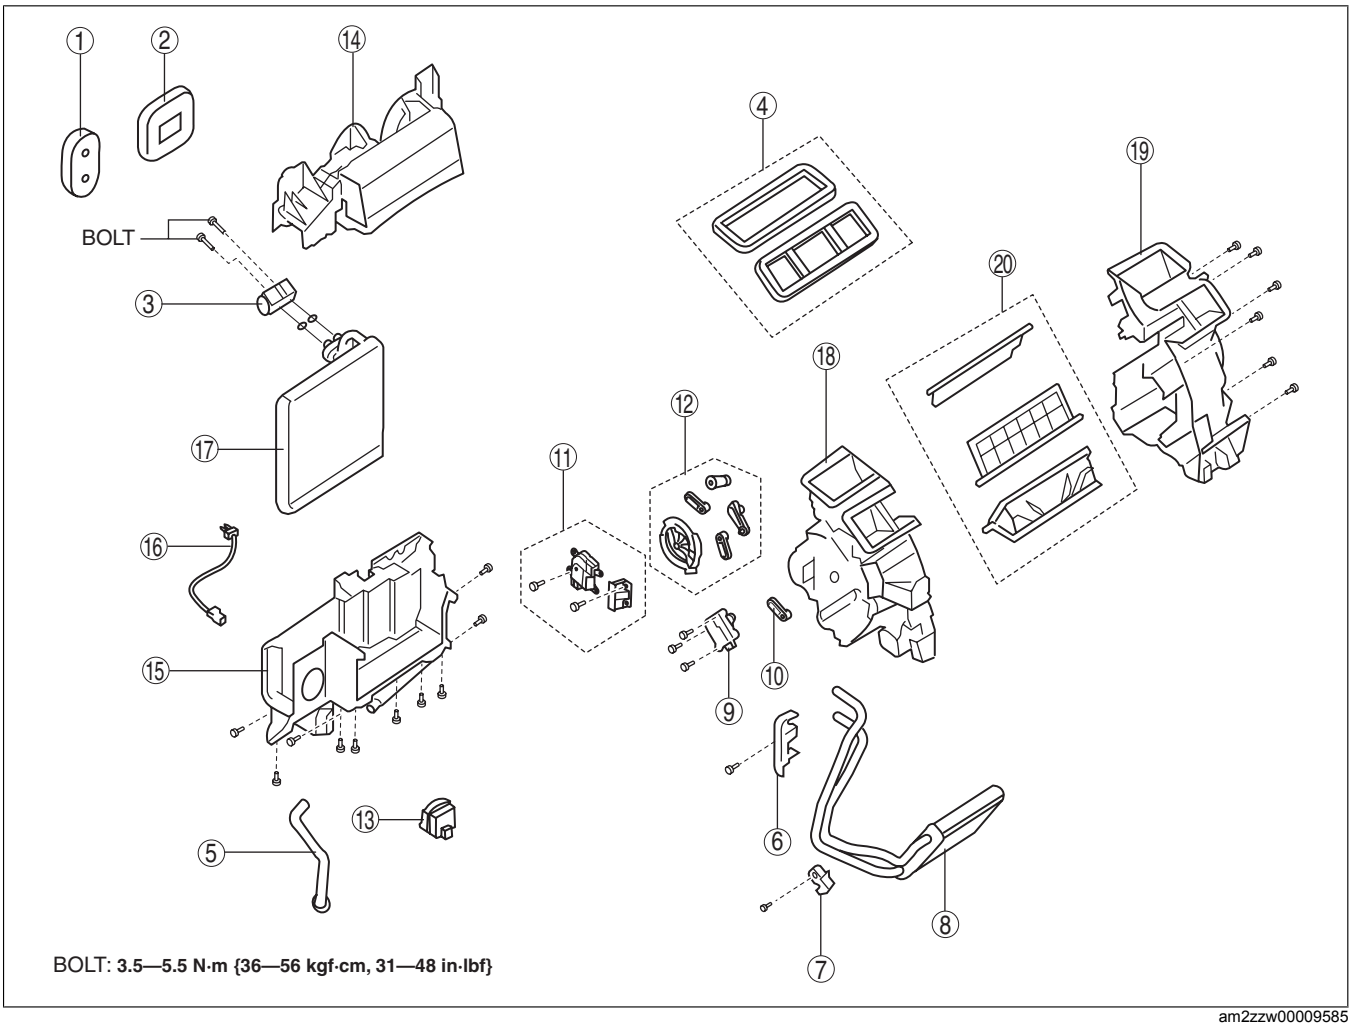

am2zzw00009585


×: Applicable
—: Not applicable

Step	Part name	Disassembly/assembly of main parts		
		Heater core	Evaporator temperature sensor	Evaporator
1	Polyurethane foam A	×	×	×
2	Polyurethane foam B	—	×	×
3	Expansion valve	—	—	×
4	Adhesive polyurethane	—	—	—
5	Drain hose	—	—	—
6	Plate A	×	×	×
7	Plate B	×	×	×
8	Heater core	×	×	×
9	Air mix actuator	—	—	—
10	Air mix link	—	—	—
11	Airflow mode actuator	—	—	—
12	Airflow mode link set	—	—	—
13	Blower fan controller	—	—	—
14	A/C case A	—	×	×
15	A/C case B	—	×	×
16	Evaporator temperature sensor (See Evaporator temperature sensor assembly note.)	—	×	×
17	Evaporator	—	—	×
18	A/C case C	—	—	—
19	A/C case D	—	—	—
20	Door damper	—	—	—

2. Assemble in the reverse order of disassembly.

Evaporator temperature sensor assembly note

1. Assemble the evaporator temperature sensor as shown in the figure.

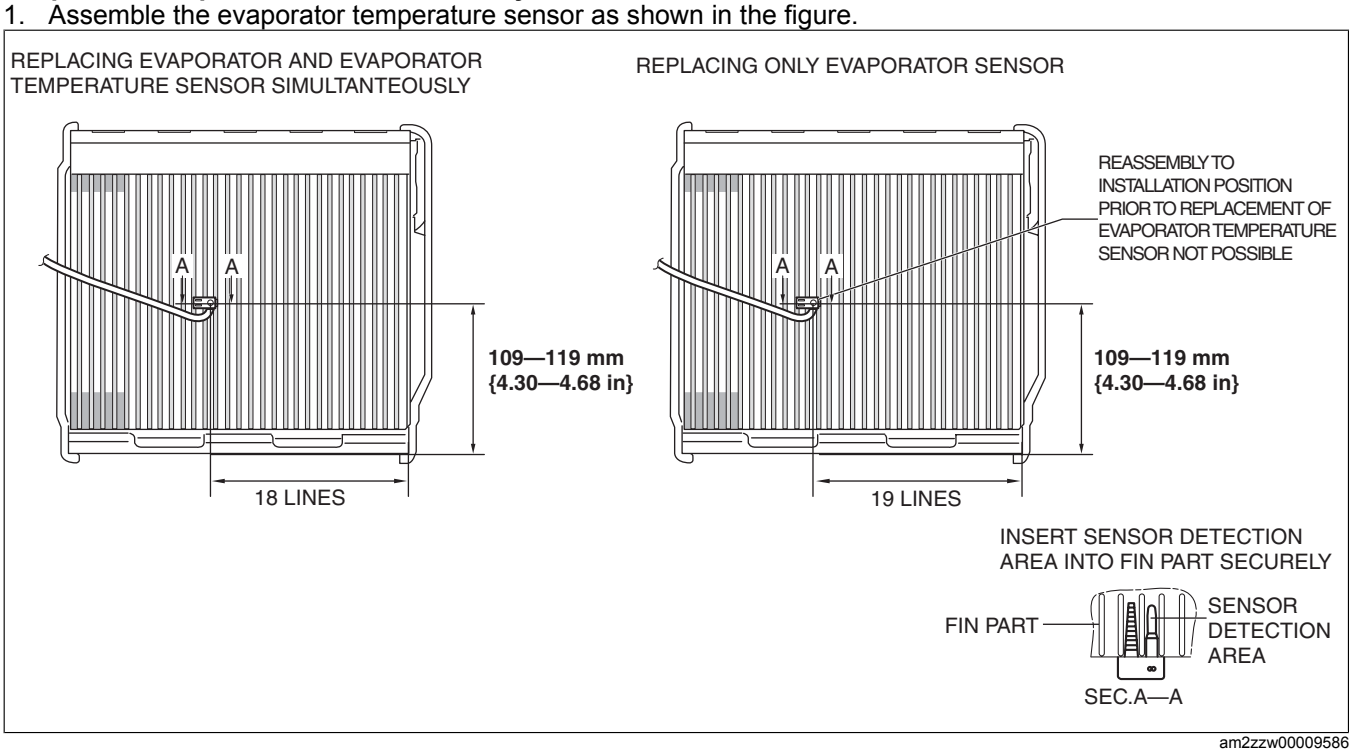

am2zzw00009586

Caution

- **If the evaporator temperature sensor is assembled to its previous installation position, it may not function due to poor contact of the evaporator fin surface with the sensor detection area caused by fin deformation. When replacing only the evaporator sensor, shift the evaporator temperature sensor installation position from the current position and assemble.**

Note


- If an evaporator temperature sensor cannot be correctly positioned on the evaporator, replace the evaporator.

R.H.D. (Manual Air Conditioner)

1. Disassemble in the order indicated in the table.

Caution

- **If a non-specified grease is used, it may result in abnormal noise or an operation malfunction of the links. Use only a grease coating agent on each link and do not wipe off or add additional grease.**

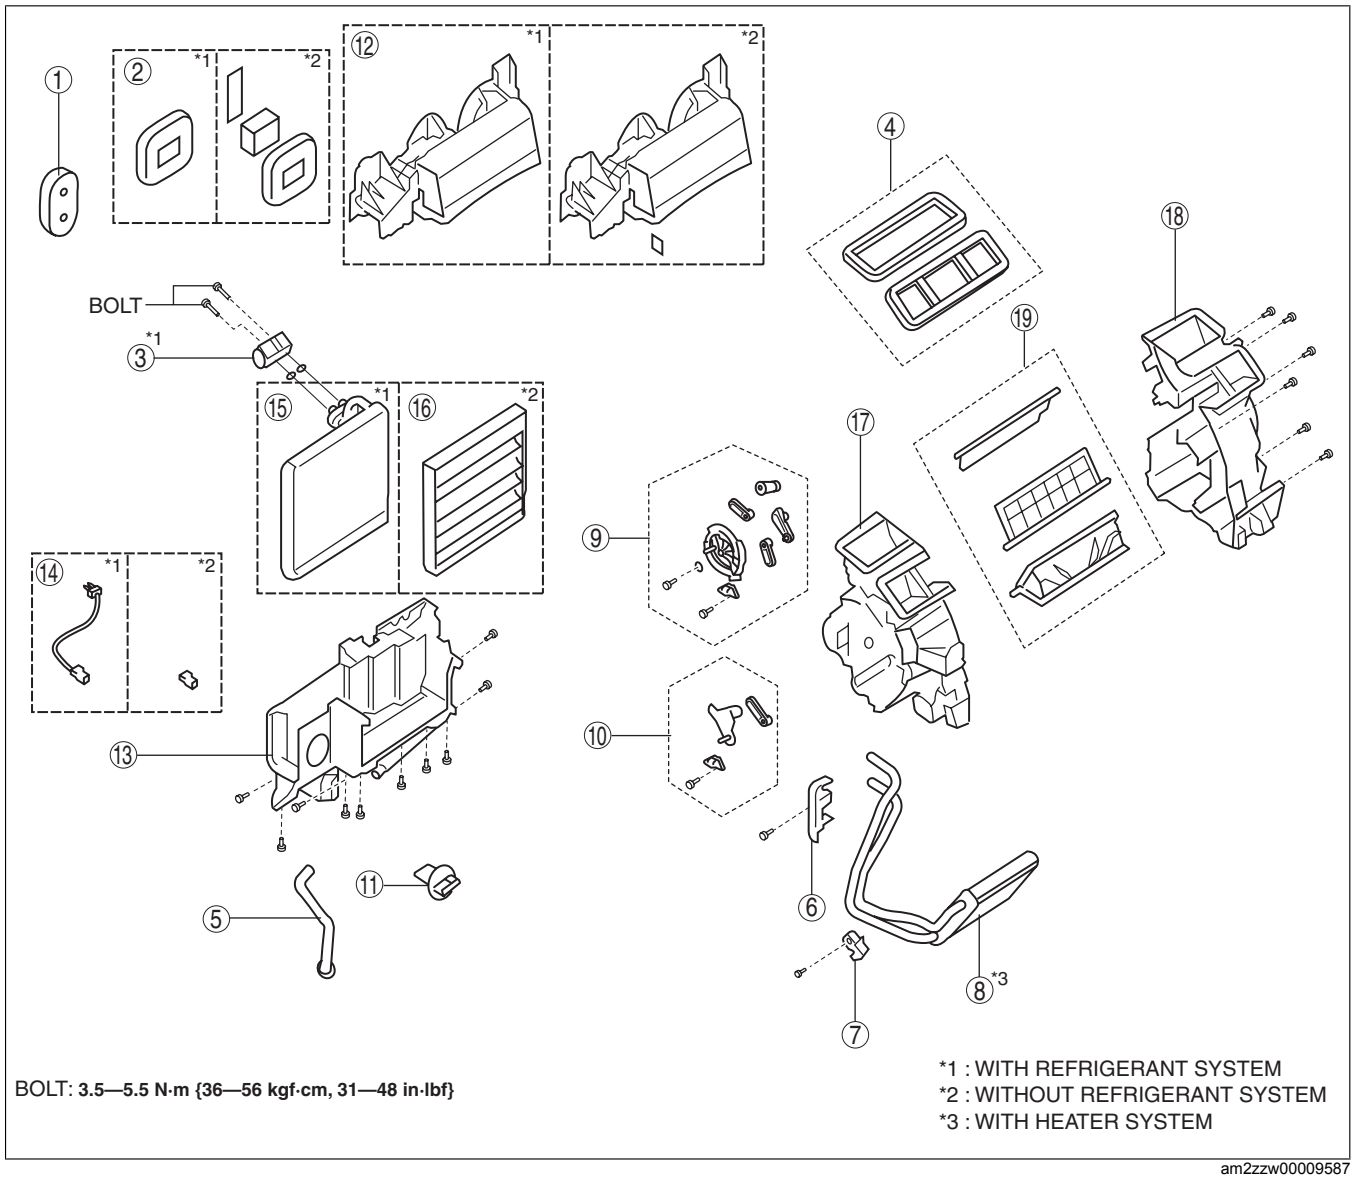

am2zzw00009587


×: Applicable
—: Not applicable

Step	Part name	Disassembly/assembly of main parts		
		Heater core	Evaporator temperature sensor	Evaporator
1	Polyurethane foam A	×	×	×
2	Polyurethane foam B	—	×	×
3	Expansion valve *1	—	—	×
4	Adhesive polyurethane	—	—	—
5	Drain hose	—	—	—
6	Plate A	×	×	×
7	Plate B	×	×	×
8	Heater core *3	×	×	×
9	Airflow mode link set	—	—	—
10	Air mix link	—	—	—
11	Resistor	—	—	—
12	A/C case A	—	×	×
13	A/C case B	—	×	×
14	Evaporator temperature sensor *1 (See Evaporator temperature sensor assembly note.)	—	×	×
15	Evaporator *1	—	—	×

Step	Part name	Disassembly/assembly of main parts		
		Heater core	Evaporator temperature sensor	Evaporator
16	Case *2	—	—	—
17	A/C case C	—	—	—
18	A/C case D	—	—	—
19	Door damper	—	—	—

*1 : With refrigerant system
*2 : Without refrigerant system
*3 : With heater system
2. Assemble in the reverse order of disassembly.

Evaporator temperature sensor assembly note
1. Assemble the evaporator temperature sensor as shown in the figure.

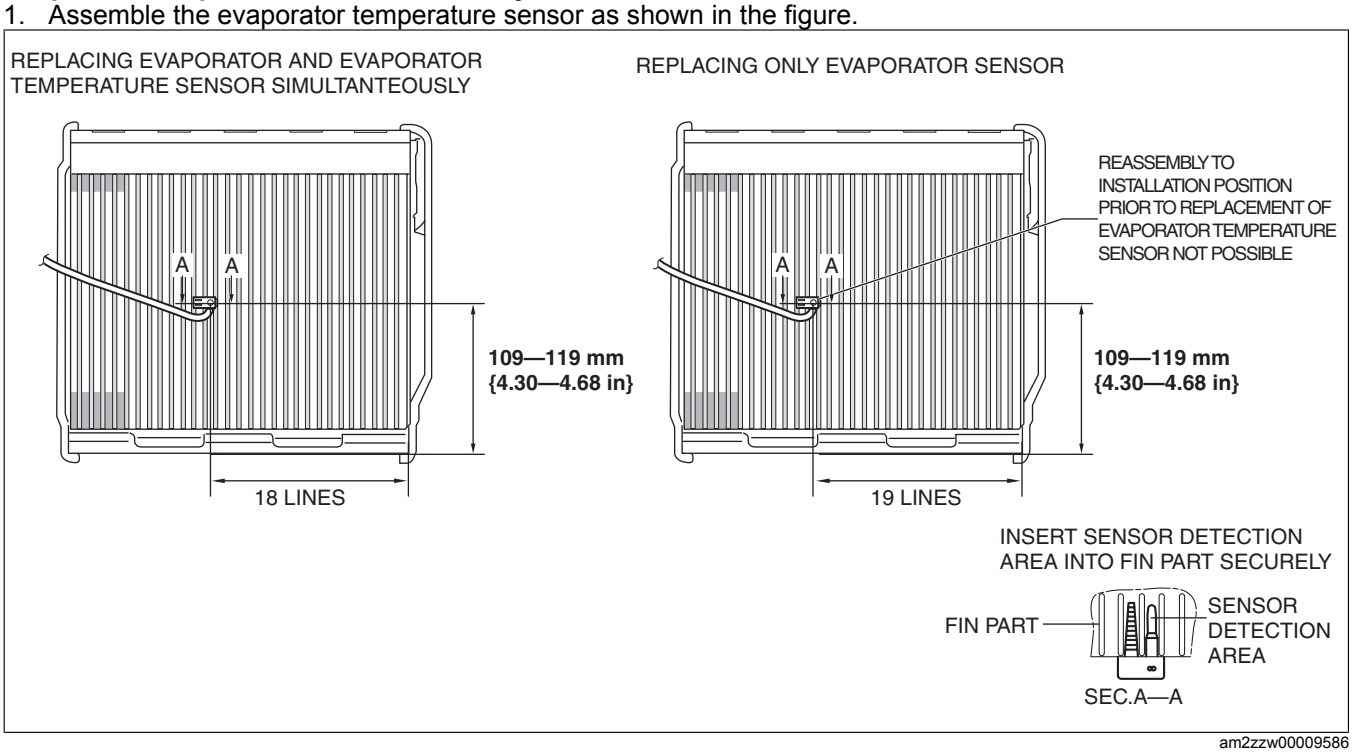

am2zzw00009586

Caution
- **If the evaporator temperature sensor is assembled to its previous installation position, it may not function due to poor contact of the evaporator fin surface with the sensor detection area caused by fin deformation. When replacing only the evaporator sensor, shift the evaporator temperature sensor installation position from the current position and assemble.**

Note
- If an evaporator temperature sensor cannot be correctly positioned on the evaporator, replace the evaporator.