
BLOWER UNIT DISASSEMBLY/ASSEMBLY

id071100800600

1. Disassemble in the order indicated in the table.

Caution

- **If a non-specified grease is used, it may result in abnormal noise or an operation malfunction of the links. Use only a grease coating agent on each link and do not wipe off or add additional grease.**

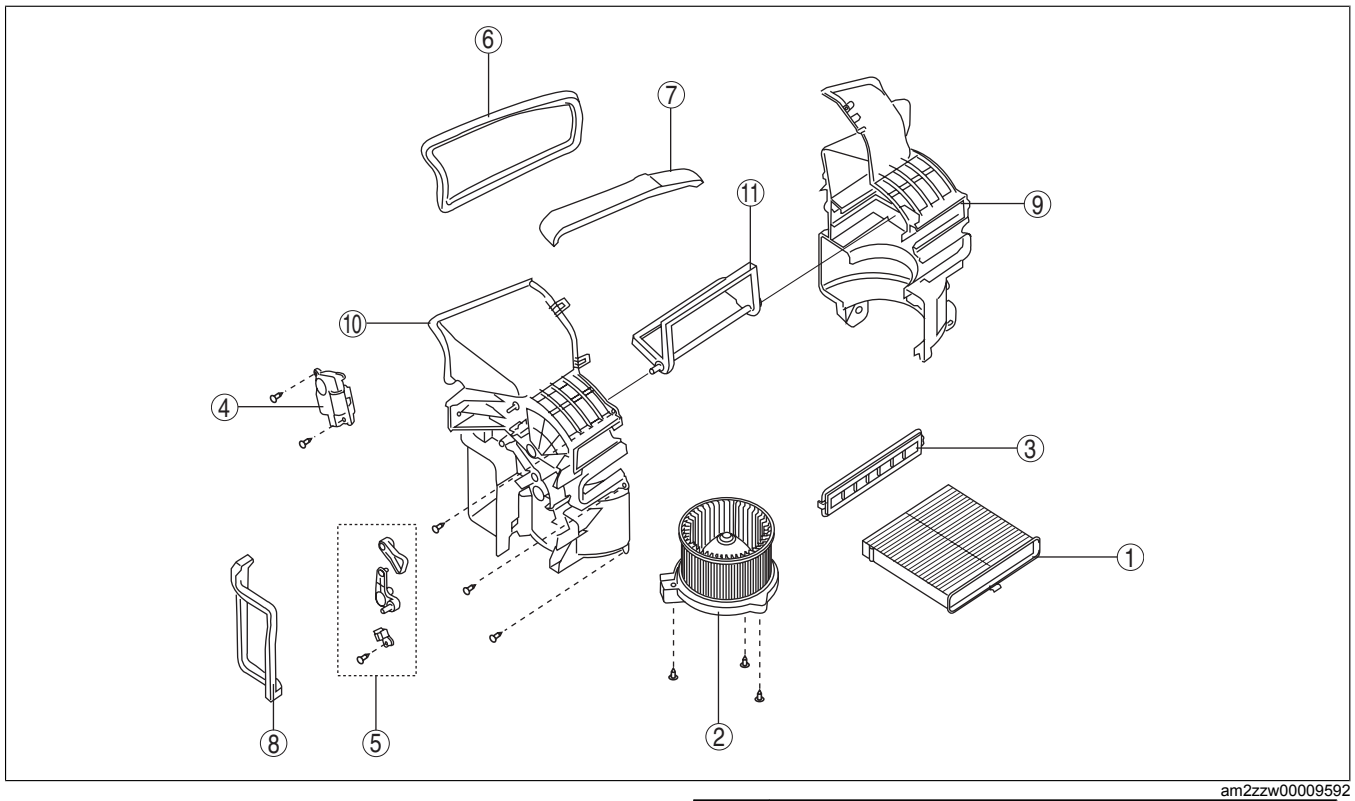

am2zzw00009592

1	Air filter
2	Blower motor
3	Cover
4	Air intake actuator (with air intake actuator)
5	Air intake link (with air intake link)
6	Polyurethane A

7	Polyurethane B
8	Polyurethane C
9	Blower case A
10	Blower case B
11	Air intake door

2. Assemble in the reverse order of disassembly.