
A/C COMPRESSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id07110080101

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Discharge the refrigerant. (See REFRIGERANT RECOVERY.)(See REFRIGERANT CHARGING.)
3. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
4. Remove the drive belt. (See DRIVE BELT REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5. Disconnect the connector.
6. Remove bolts.

Caution

- **If moisture or foreign matter enters the refrigeration cycle, cooling ability will be lowered and abnormal noise or other malfunctions could occur. Always plug open fittings immediately after removing any refrigeration cycle parts.**

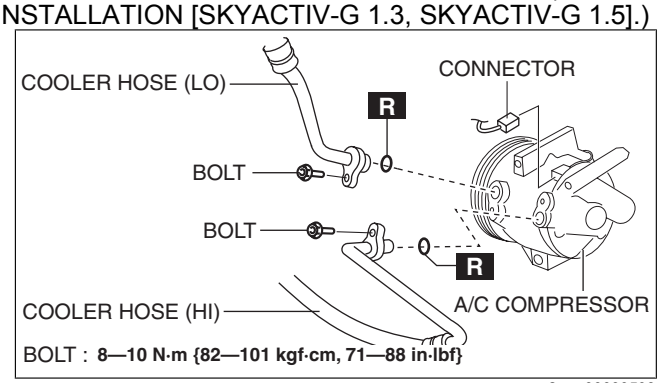


am2zzw00009593

7. Remove the cooler hose (LO). (See REFRIGERANT LINE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
8. Remove the cooler hose (HI). (See REFRIGERANT LINE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
9. Remove bolts.
10. Remove the A/C compressor. Do not allow compressor oil to spill.

Caution

- **If moisture or foreign matter enters the refrigeration cycle, cooling ability will be lowered and abnormal noise or other malfunctions could occur. Always plug open fittings immediately after removing any refrigeration cycle parts.**

11. Install in the reverse order of removal. (See A/C Compressor Installation Note.)
12. Perform the refrigerant system performance test. (See REFRIGERANT SYSTEM PERFORMANCE TEST.)

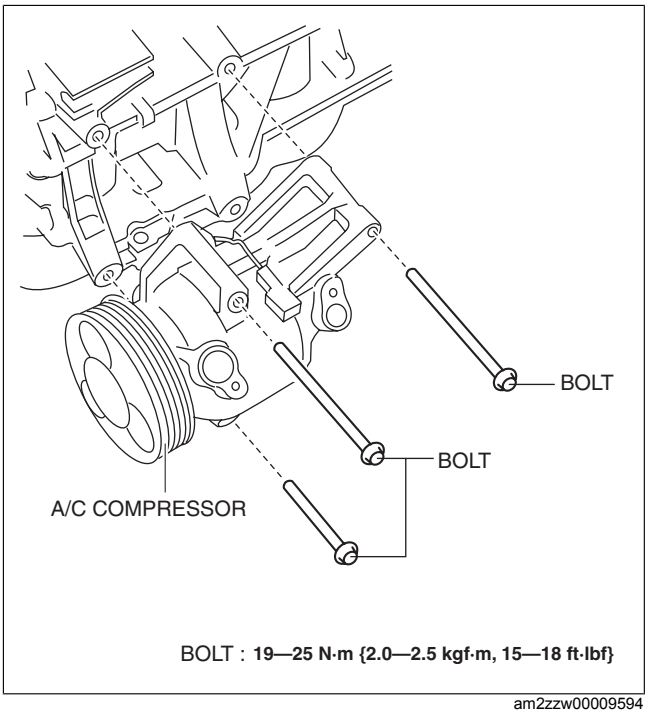

am2zzw00009594

A/C Compressor Installation Note

Caution


- **Due to the high moisture-absorption characteristics of the compressor oil, it may absorb moisture if left over a long period of time thereby negatively affecting A/C operation. Drain the compressor oil and refill within 10 min. of each other.**

1. Rotate the new A/C compressor shaft six to eight revolutions while pouring compressor oil into a clean measuring container. Use this compressor oil to refill the new compressor. Do not allow compressor oil to become contaminated.
2. Rotate the old A/C compressor shaft six to eight revolutions while adding compressor oil to a separate, clean measuring container.
3. Compare the compressor oil amounts. The amount of the compressor oil drained from the new A/C compressor should be more than the old one.

4. Add the same amount compressor oil drained from the old A/C compressor back into the new A/C compressor.

   Compressor oil type
   ZXL200PG (HFC-134a (R-134a))
   VC200YF (HFO-1234yf (R-1234yf))

   Compressor oil sealed volume (approx. quantity)
   110 ml {110 cc, 3.72 fl oz}

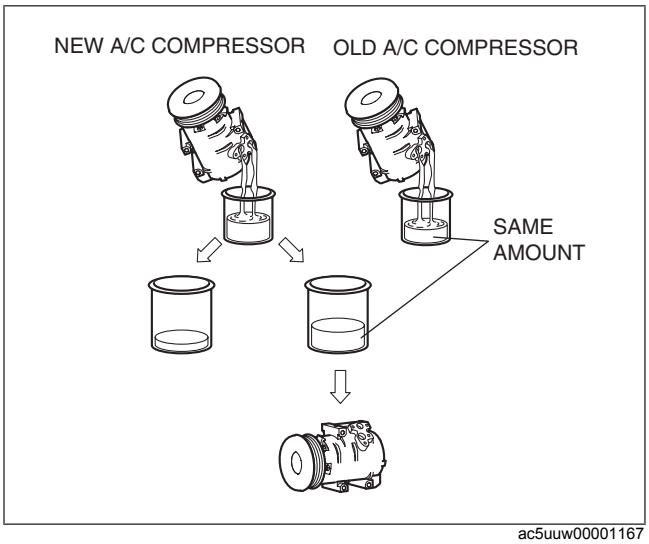

ac5uuw00001167