
A/C COMPRESSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id07110080101l2

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Discharge the refrigerant. (See REFRIGERANT RECOVERY.)(See REFRIGERANT CHARGING.)
3. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
4. Remove the front tire (RH). (See GENERAL PROCEDURES (FRONT AND REAR AXLES).)
5. Remove the coolant reserve tank. (See COOLANT RESERVE TANK REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Disconnect the connector.
7. Remove the bolts.


Caution

- **If moisture or foreign matter enters the refrigeration cycle, cooling ability will be lowered and abnormal noise or other malfunctions could occur. Always plug open fittings immediately after removing any refrigeration cycle parts.**

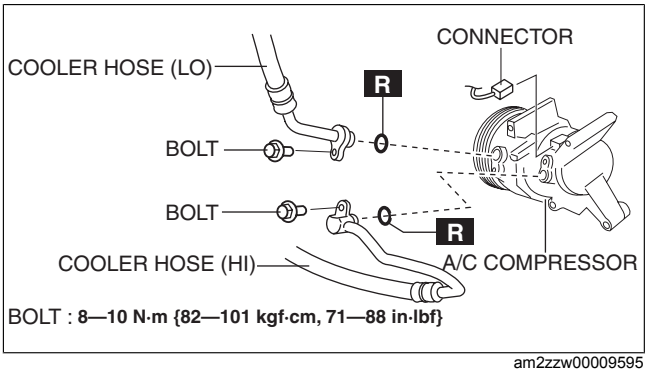


am2zzw00009595

8. Remove the cooler hose (LO). (See REFRIGERANT LINE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
9. Remove the cooler hose (HI). (See REFRIGERANT LINE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
10. Remove the bolts.
11. Bend back the front side of the mudguard (RH). (See MUDGUARD REMOVAL/INSTALLATION.)
12. Remove the front under cover No.1. (See FRONT UNDER COVER No.1 REMOVAL/ INSTALLATION.)
13. Remove the front splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
14. Remove the drive belt. (See DRIVE BELT REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

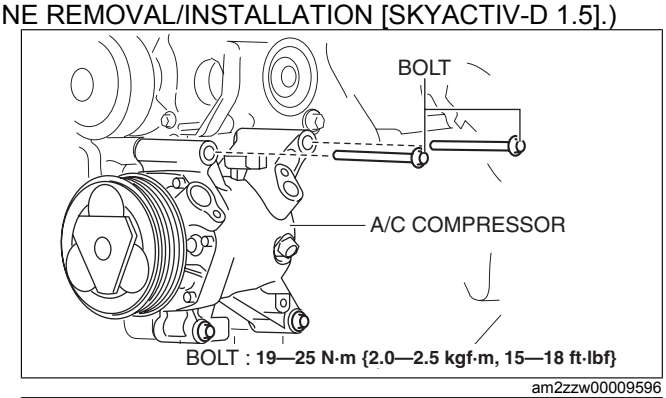


am2zzw00009596

15. Remove the bolt and remove the lower radiator hose bracket from the A/C compressor.

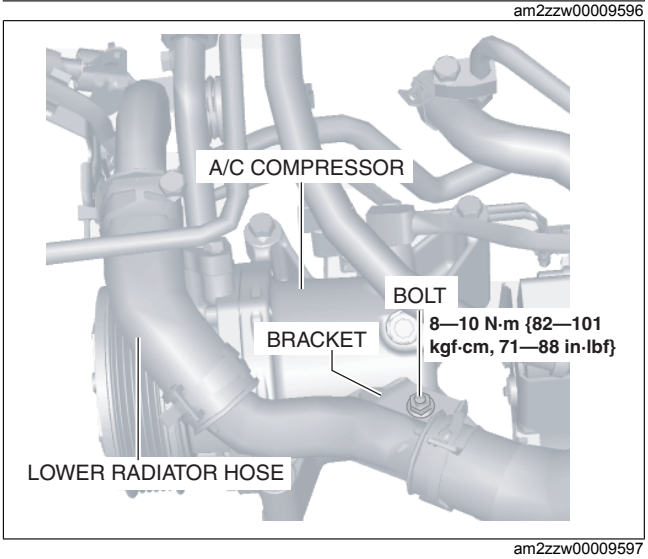


am2zzw00009597

16. Remove the bolts.

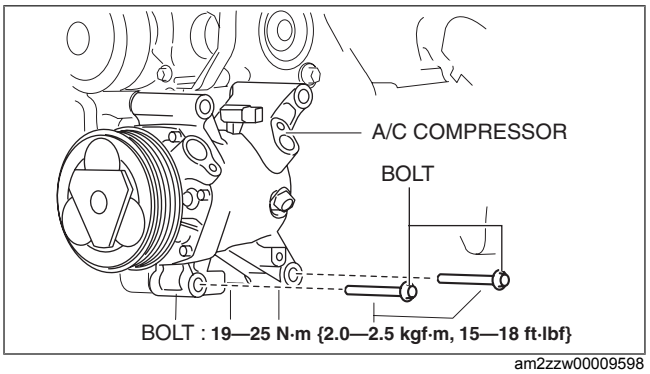


am2zzw00009598

17. Move the A/C compressor in the direction of the arrow shown in the figure and remove the pins from the engine.

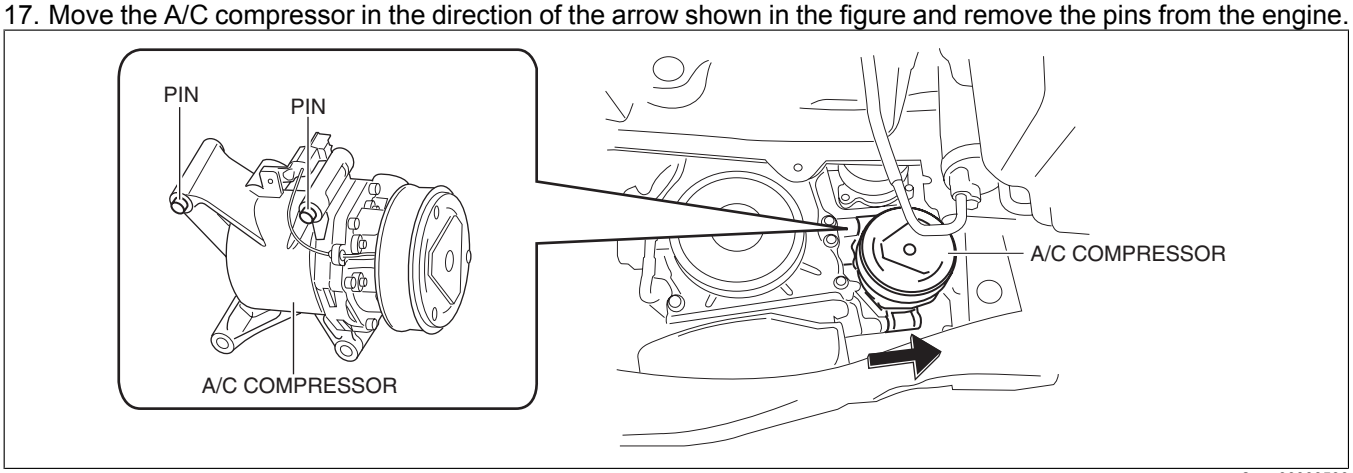

am2zzw00009599

18. Remove the A/C compressor in the direction of the arrow shown in the figure being careful not to allow compressor oil to spill.

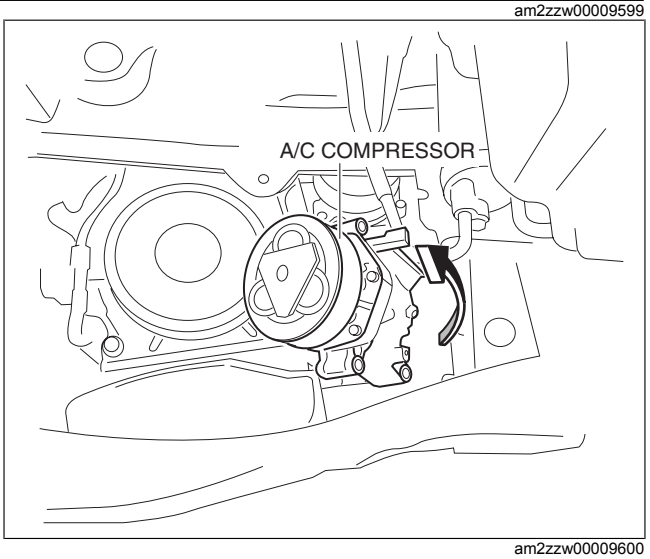

am2zzw00009600

Caution
- **If moisture or foreign matter enters the refrigeration cycle, cooling ability will be lowered and abnormal noise or other malfunctions could occur. Always plug open fittings immediately after removing any refrigeration cycle parts.**

19. Install in the reverse order of removal. (See A/C Compressor Installation Note.)
20. Perform the refrigerant system performance test. (See REFRIGERANT SYSTEM PERFORMANCE TEST.)

A/C Compressor Installation Note


Caution
- **Due to the high moisture-absorption characteristics of the compressor oil, it may absorb moisture if left over a long period of time thereby negatively affecting A/C operation. Drain the compressor oil and refill within 10 min. of each other.**

1. Rotate the new A/C compressor shaft six to eight revolutions while pouring compressor oil into a clean measuring container. Use this compressor oil to refill the new compressor. Do not allow compressor oil to become contaminated.
2. Rotate the old A/C compressor shaft six to eight revolutions while adding compressor oil to a separate, clean measuring container.
3. Compare the compressor oil amounts. The amount of the compressor oil drained from the new A/C compressor should be more than the old one.

4. Add the same amount compressor oil drained from the old A/C compressor back into the new A/C compressor.

   Compressor oil type
   DH-PR (HFC-134a (R-134a))
   YR20 (HFO-1234yf (R-1234yf))

   Compressor oil sealed volume (approx. quantity)
   140 ml {140 cc, 4.73 fl oz} (HFC-134a (R-134a))
   130 ml {130 cc, 4.40 fl oz} (HFO-1234yf (R-1234yf))

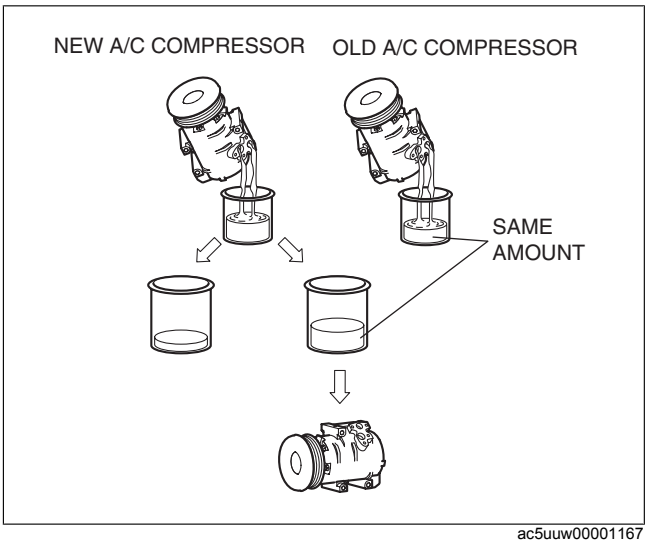

ac5uuw00001167