
HVAC BASIC SYSTEM LOCATION INDEX

id071100801700

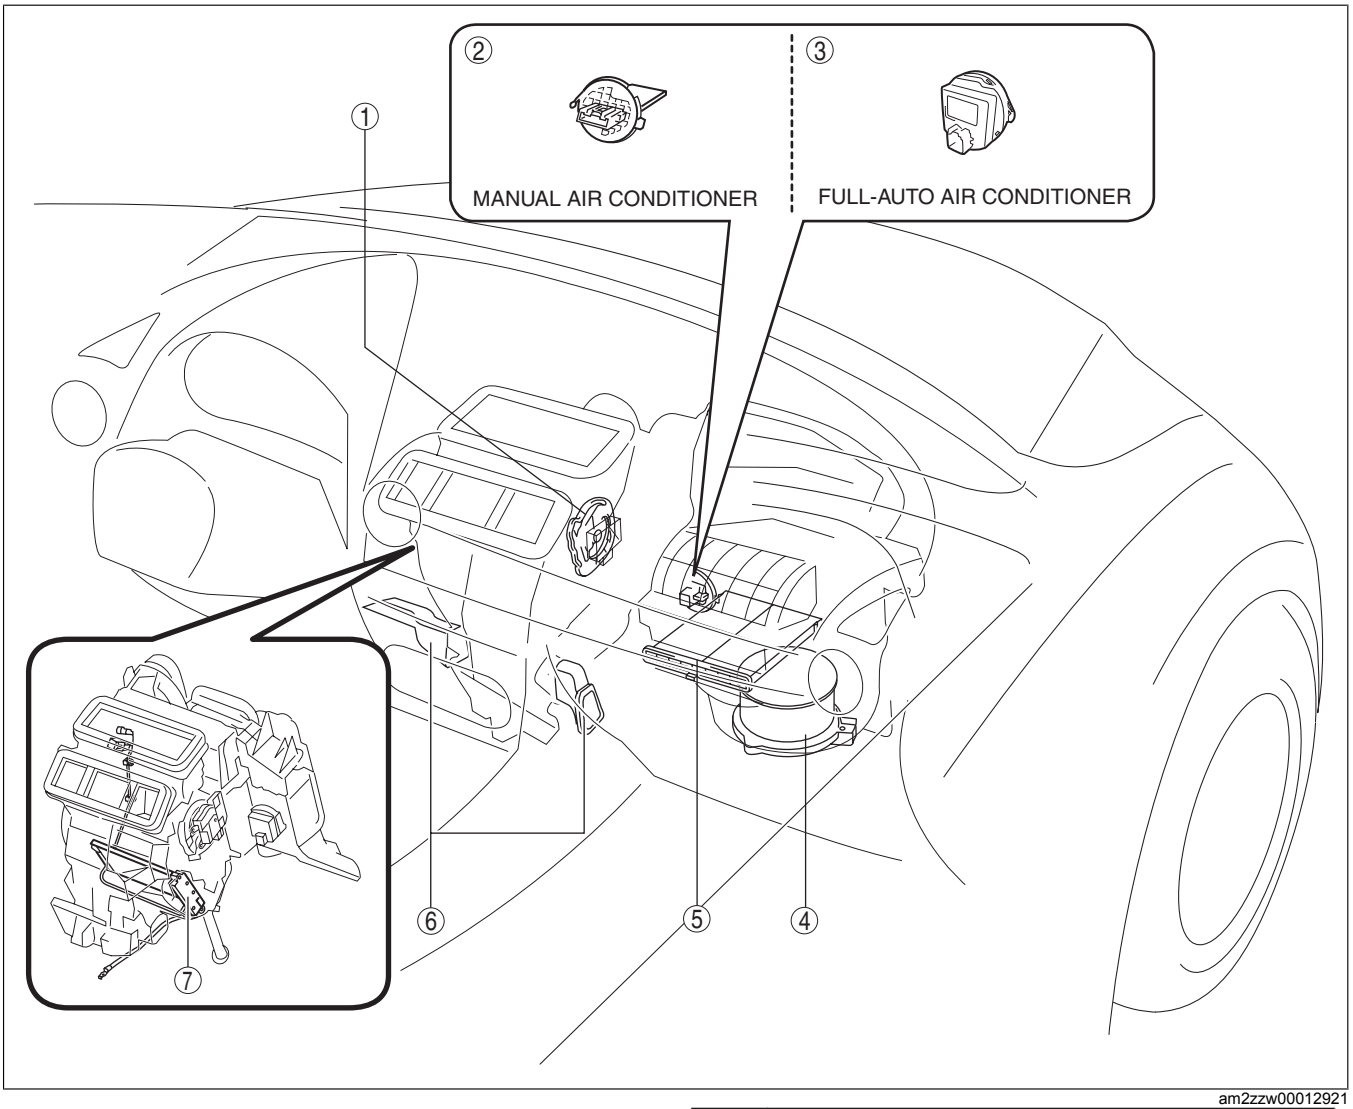


am2zzw00012921

1	Airflow mode main link (See AIRFLOW MODE MAIN LINK REMOVAL/ INSTALLATION.)
2	Resistor (manual air conditioner) (See RESISTOR REMOVAL/INSTALLATION) (See RESISTOR INSPECTION)
3	Blower fan controller (full-auto air conditioner) (See BLOWER FAN CONTROLLER REMOVAL/ INSTALLATION.) (See BLOWER FAN CONTROLLER INSPECTION.)
4	Blower motor (See BLOWER MOTOR REMOVAL/ INSTALLATION.) (See BLOWER MOTOR INSPECTION.)

5	Air filter (See AIR FILTER REMOVAL/INSTALLATION.) (See AIR FILTER INSPECTION.)
6	Front heat duct (See FRONT HEAT DUCT REMOVAL/ INSTALLATION.)
7	PTC heater (See PTC (POSITIVE TEMPERATURE COEFFICIENT) HEATER REMOVAL/ INSTALLATION.) (See PTC (POSITIVE TEMPERATURE COEFFICIENT) HEATER INSPECTION.)


SKYACTIV-G 1.3, SKYACTIV-G 1.5

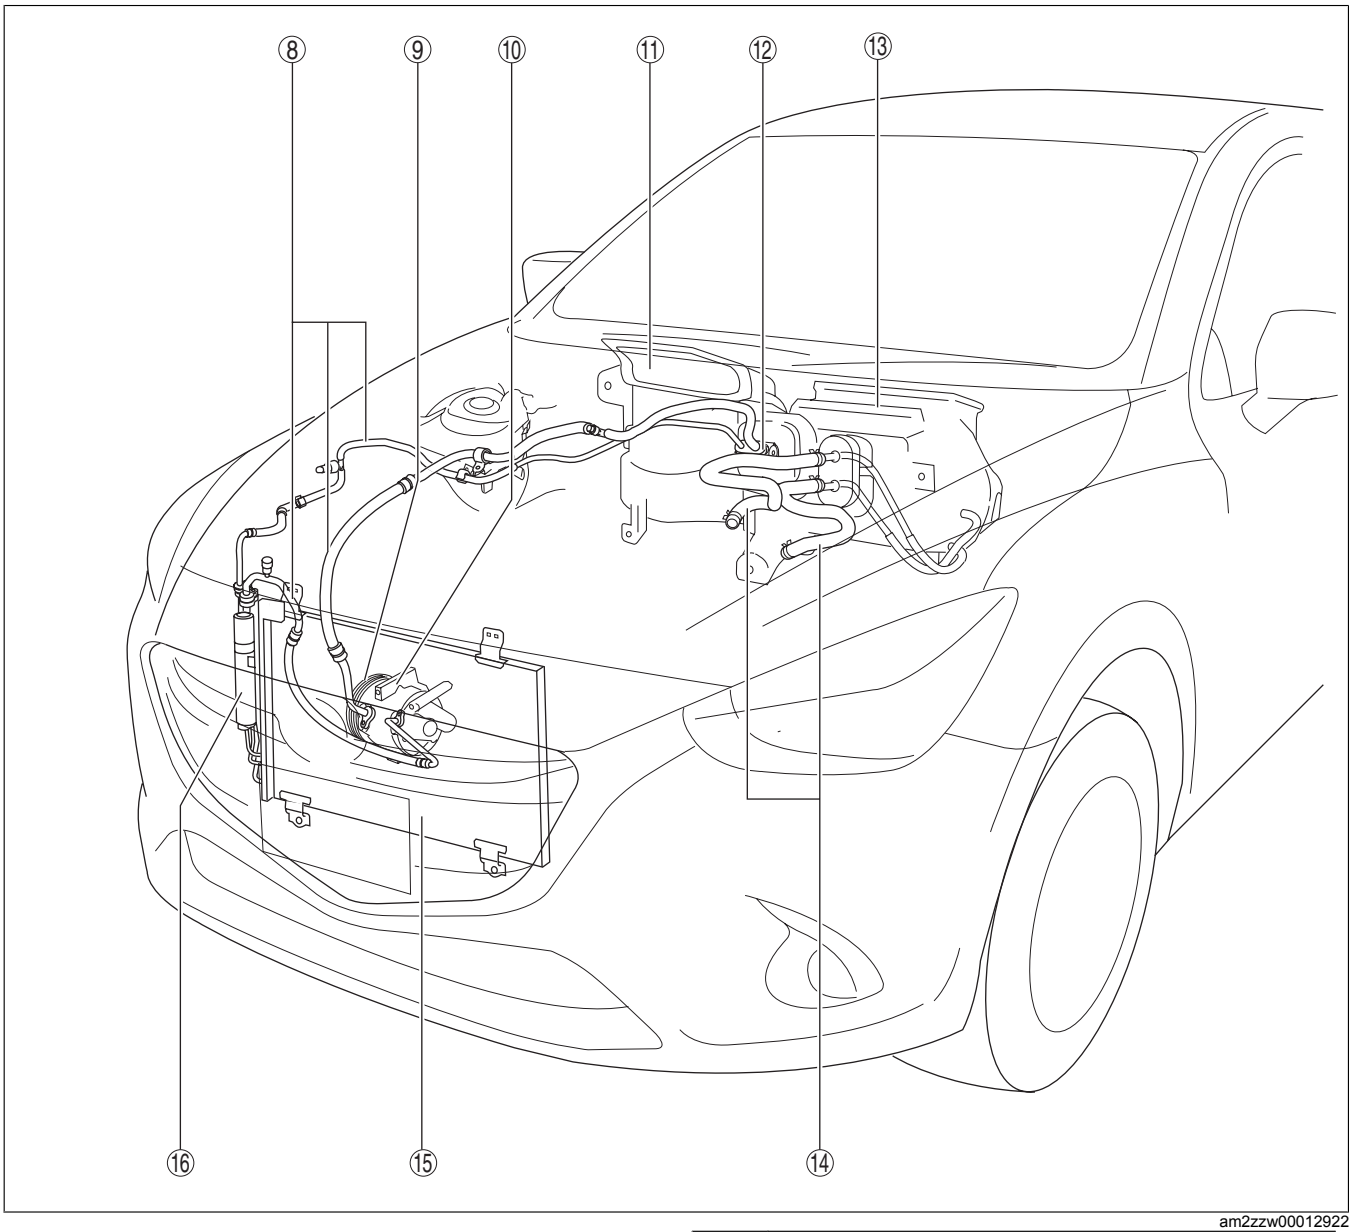

am2zzw00012922

8	Refrigerant line (See REFRIGERANT LINE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
9	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See MAGNETIC CLUTCH ADJUSTMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See MAGNETIC CLUTCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
10	A/C compressor (See A/C COMPRESSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
11	Blower unit (See BLOWER UNIT REMOVAL/INSTALLATION.) (See BLOWER UNIT DISASSEMBLY/ASSEMBLY.)
12	Expansion valve (See EXPANSION VALVE REMOVAL/ INSTALLATION.)
13	A/C unit (See A/C UNIT REMOVAL/INSTALLATION.) (See A/C UNIT DISASSEMBLY/ASSEMBLY.) (See EXPANSION VALVE REMOVAL/ INSTALLATION.) (See EVAPORATOR INSPECTION.) (See HEATER CORE INSPECTION.)
14	Heater hose (See HEATER HOSE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
15	Condenser (See CONDENSER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CONDENSER INSPECTION.)
16	Receiver/drier (See RECEIVER/DRIER REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

SKYACTIV-D 1.5

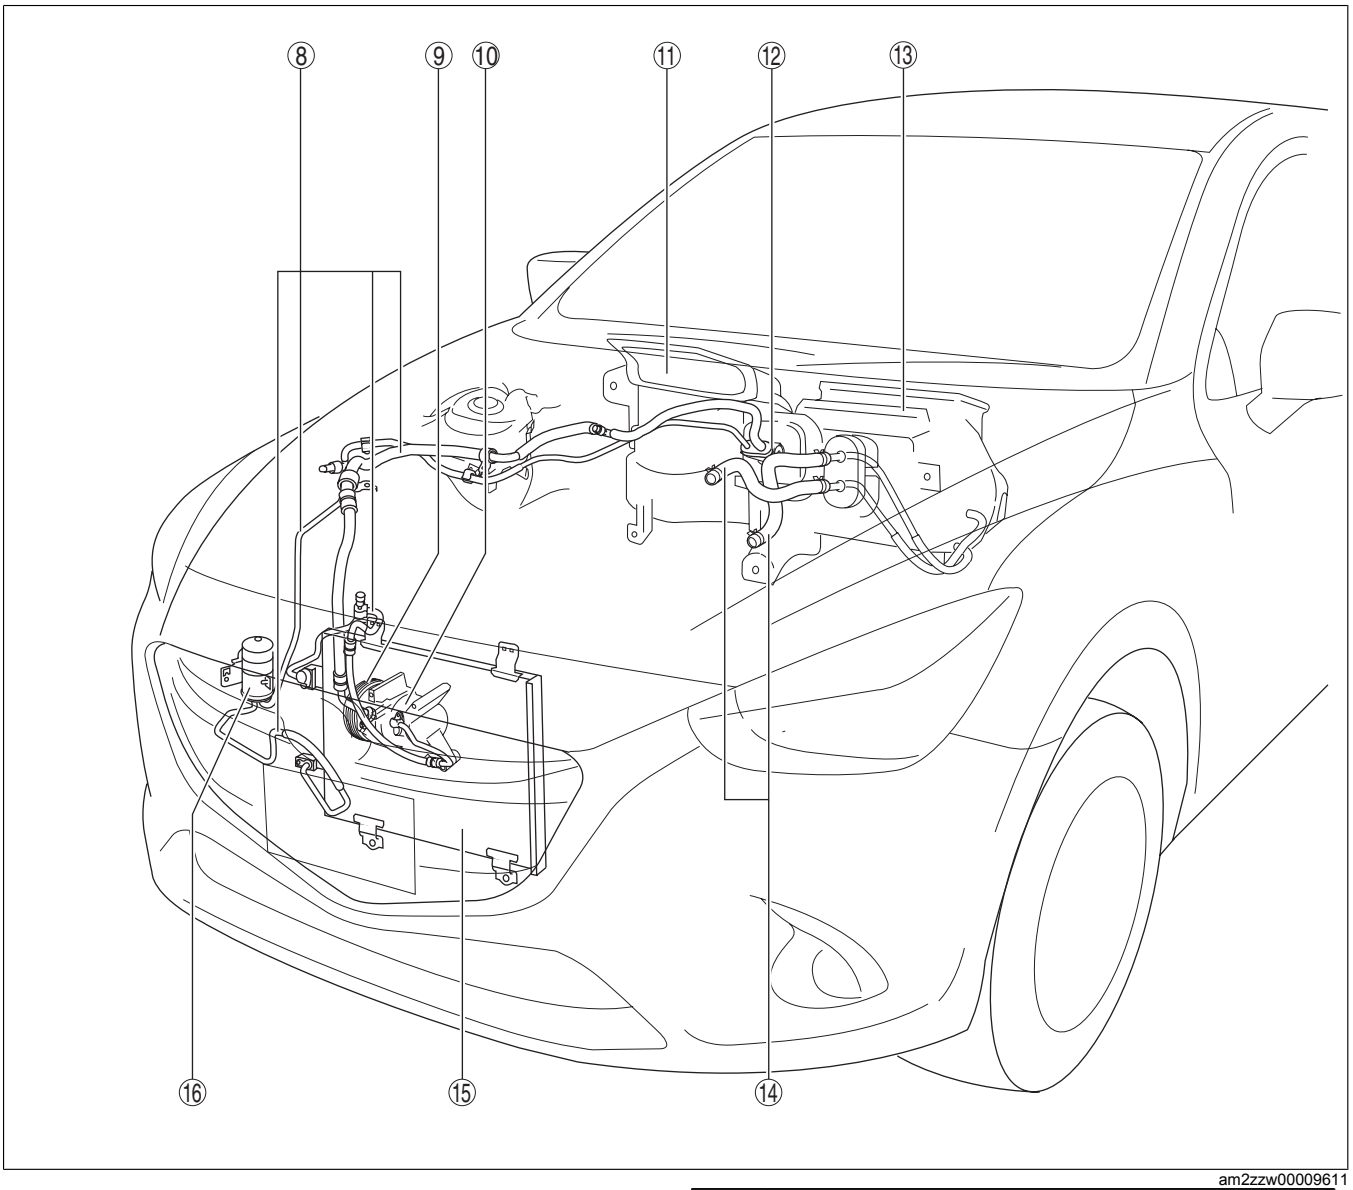

am2zzw00009611

8	Refrigerant line (See REFRIGERANT LINE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
9	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [SKYACTIV-D 1.5].) (See MAGNETIC CLUTCH ADJUSTMENT [SKYACTIV-D 1.5].) (See MAGNETIC CLUTCH INSPECTION [SKYACTIV-D 1.5].)
10	A/C compressor (See A/C COMPRESSOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
11	Blower unit (See BLOWER UNIT REMOVAL/INSTALLATION.) (See BLOWER UNIT DISASSEMBLY/ASSEMBLY.)
12	Expansion valve (See EXPANSION VALVE REMOVAL/ INSTALLATION.)
13	A/C unit (See A/C UNIT REMOVAL/INSTALLATION.) (See A/C UNIT DISASSEMBLY/ASSEMBLY.) (See EXPANSION VALVE REMOVAL/ INSTALLATION.) (See EVAPORATOR INSPECTION.) (See HEATER CORE INSPECTION.)
14	Heater hose (See HEATER HOSE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
15	Condenser (See CONDENSER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See CONDENSER INSPECTION.)
16	Receiver/drier (See RECEIVER/DRIER REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)