
AIRFLOW MODE MAIN LINK REMOVAL/INSTALLATION

id071100801800

Installation position

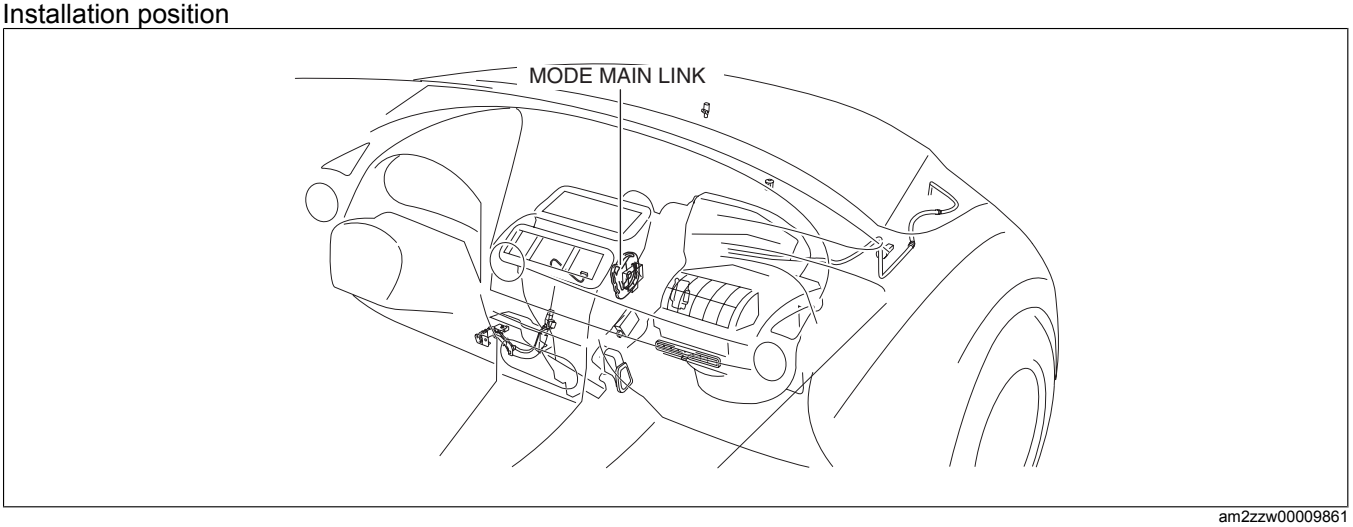

am2zzw00009861

Caution


- **If a non-specified grease is used, it may result in abnormal noise or an operation malfunction of the links. Use only a grease coating agent on each link and do not wipe off or add additional grease.**

Full-auto Air Conditioner

- The airflow mode main link is installed to the airflow mode actuator. When removing the airflow mode main link, refer to the airflow mode actuator removal/installation. (See AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)


Manual Air Conditioner

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Press the tab down, then slide the airflow mode wire off the link.
4. Remove the airflow mode wire from the wire clamp.

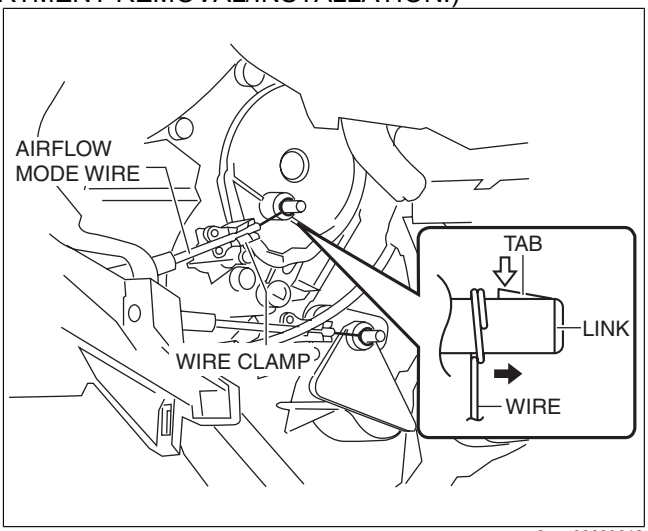

am2zzw00009612

5. Remove the screw, then airflow mode main link.
6. Install in the reverse order of removal.

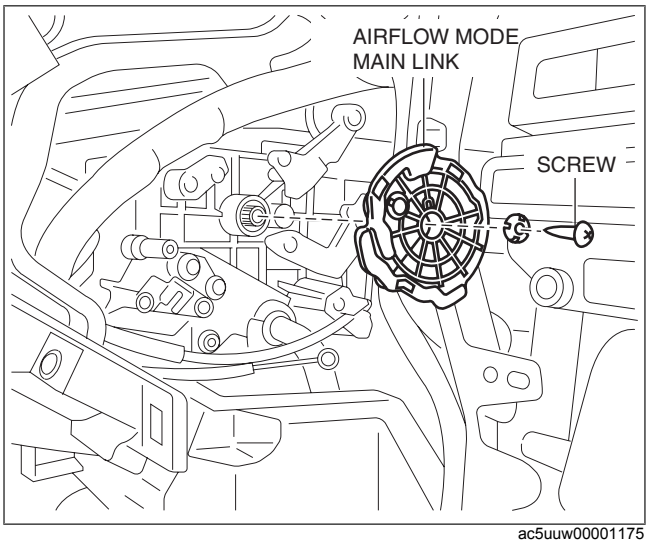

ac5uuw00001175