
HEATER HOSE REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id071100805112

1. Drain the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-D 1.5].)
2. Remove the following parts:
   (1) Engine cover (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
   (2) Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
   (3) Cowl grille (See COWL GRILLE REMOVAL/INSTALLATION.)
   (4) Keyless beeper (See KEYLESS BEEPER REMOVAL/INSTALLATION.)
   (5) Windshield wiper motor and link (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
   (6) Cowl panel (See COWL PANEL REMOVAL/INSTALLATION.)
3. Remove the clips.

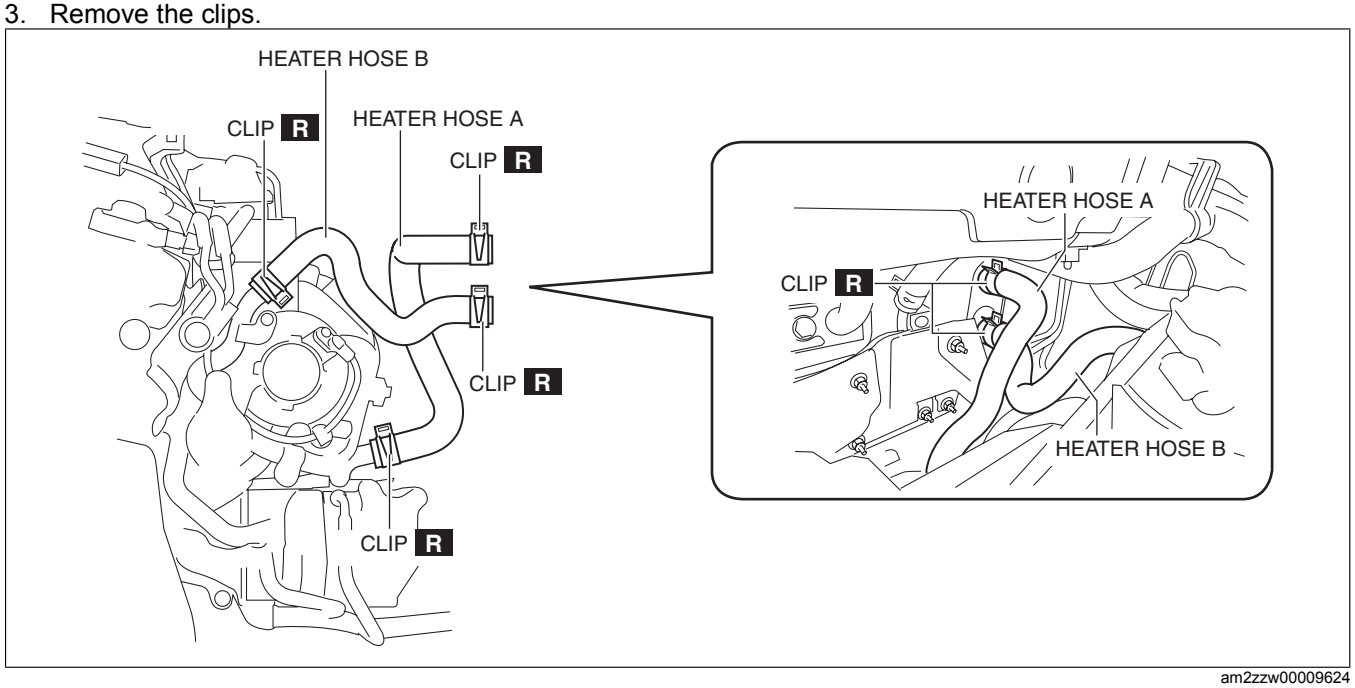

am2zzw00009624

4. Remove the heater hose A.
5. Remove the heater hose B.
6. Install in the reverse order of the removal.
7. Inspect for engine coolant leakage. (See ENGINE COOLANT LEAKAGE INSPECTION [SKYACTIV-D 1.5].)