CLIMATE CONTROL UNIT [FULL-AUTO AIR CONDITIONER]

id0740a1004100

Purpose

- The climate control unit controls the air conditioner in conjunction with the operation by the user and the vehicle driving conditions.

Function


- The climate control unit determines the air-conditioning conditions based on the input signals from each sensor and the control module and the operation signals from the control panel, and controls each actuator, A/C compressor, and the blower motor. (See FULL-AUTO AIR CONDITIONER SYSTEM [FULL-AUTO AIR CONDITIONER].)

Automatic configuration function

- When the ignition is switched ON (engine off or on) after the climate control unit is replaced, the climate control unit reads the vehicle specification information sent via CAN communication from the instrument cluster, and stores the vehicle specification information.
- The vehicle specification information recorded by the climate control unit is not erased even if the ignition is switched OFF (LOCK).
- The vehicle specification information recorded by the climate control unit is erased if the battery power is disconnected.

Construction

- A logic-type climate control unit has been adopted.
- The climate control unit consists of a control panel and a control unit.
- The switches and dials shown in the figure are located on the control panel.

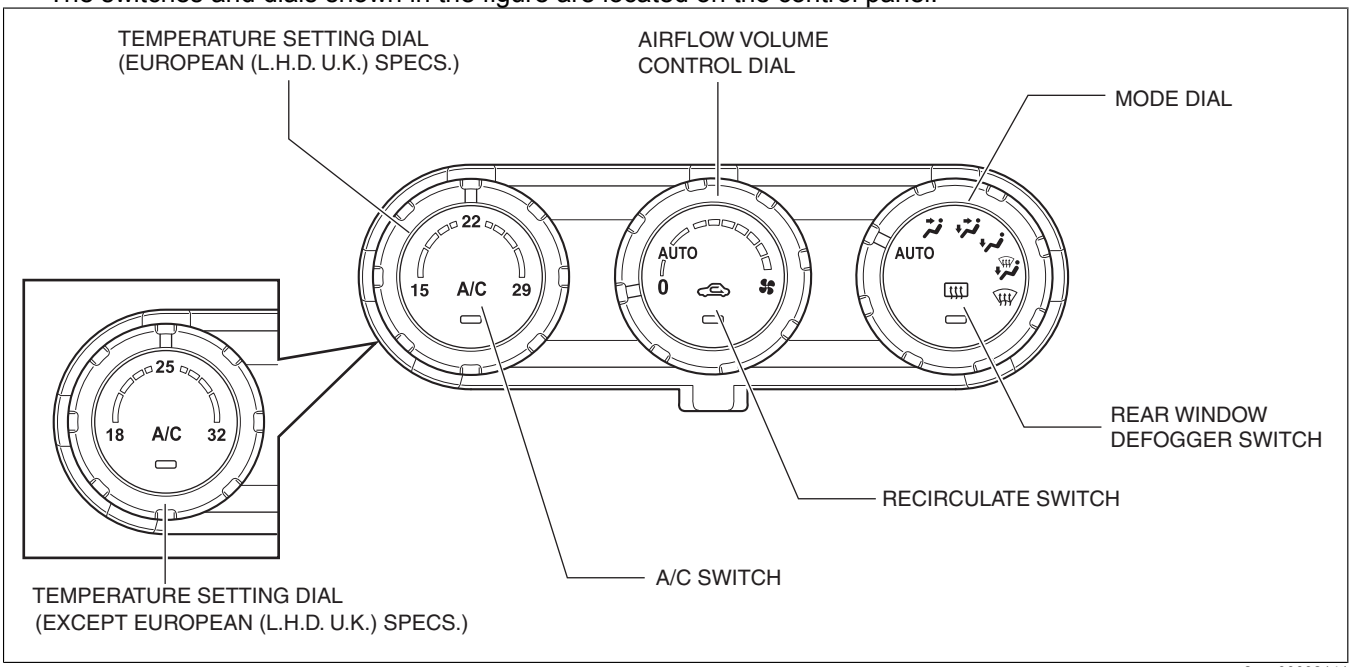

am2zzn00002141

Operation

- The climate control unit performs the controls shown in the table according to the switch/dial operation.

Operation switches/dials		Airflow temperature control	Airflow volume control			Airflow mode control		
		Control condition before switch operation	Control condition before switch operation			Control condition before switch operation		
		Automatic control	Automatic control	Manual control	Defroster control	Automatic control	Manual control	Defroster control
Airflow volume control dial	OFF	OFF	OFF	OFF	OFF	Fixed at mode when turned off	No change	No change
	AUTO	No change	No change	Automatic control	No change	No change		
	1—7		Manual control	Manual control	Manual control			
MODE dial	AUTO	No change	No change	No change	Automatic control	No change	Automatic control	Automatic control
	VENT					Manual control	Manual control	Manual control
	BI-LEVEL							
	HEAT							
	DEF/HEAT							
	DEFROSTER		Defroster control					
Temperature setting Dial	15/ 59*1 18/ 64*2	MAX control	MAX HI	No change	MAX HI	No change	No change	No change
	16—28/ 61—82*1 19—31/ 67—87*2	Automatic control	No change		No change			
	29/ 84*1 32/ 90*2	MAX control	AUTO HI *3		AUTO HI			
RECIRCULATE switch		No change	No change	No change	No change	No change	No change	No change
A/C switch		No change	No change	No change	No change	No change	No change	No change
Rear window defogger switch		No change	No change	No change	No change	No change	No change	No change

*1 : European (L.H.D. U.K.) specs.

*2 : Except European (L.H.D. U.K.) specs.

*3 : Water temperature correction takes precedence.

Operation switches/dials		Air intake control		A/C compressor control	
		Control condition before switch operation		Control condition before switch operation	
		Manual control	Defroster control	Automatic control	Defroster control
Airflow volume control dial	OFF	No change	No change	OFF	OFF
	AUTO			No change	No change
	1—7				
MODE dial	AUTO	No change	Auto control *3	No change	Auto control *3
	VENT				
	BI-LEVEL				
	HEAT				
	DEF/HEAT				
	DEFROSTER	Defroster control	No change	Defroster control	No change

Operation switches/dials		Air intake control		A/C compressor control	
		Control condition before switch operation		Control condition before switch operation	
		Manual control	Defroster control	Automatic control	Defroster control
Temperature setting Dial	15/ 59*1 18/ 64*2	No change	No change	No change	No change
	16—28/ 61—82*1 19—31/ 67—87*2				
	29/ 84*1 32/ 90*2				
RECIRCULATE switch		Manual control	Manual control	No change	No change
A/C switch		No change	No change	Manual control	Manual control
Rear window defogger switch		No change	No change	No change	No change

*1 : European (L.H.D. U.K.) specs.

*2 : Except European (L.H.D. U.K.) specs.

*3 : Returns to status prior to defroster control.