AMBIENT TEMPERATURE SENSOR [FULL-AUTO AIR CONDITIONER]


id0740a1004200

Purpose, Function

- The ambient temperature sensor converts the detected air temperature to an electric signal.

Construction


- A thermistor-type ambient temperature sensor has been adopted.
- The ambient temperature sensor is located on the shroud panel on the back side of the front bumper.

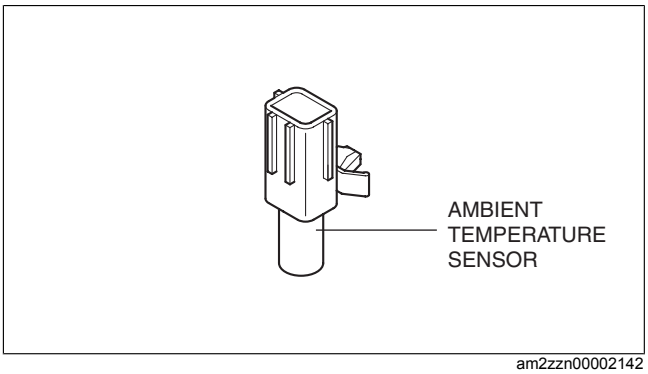

am2zzn00002142

Operation

- The thermistor changes the resistance according to the surrounding temperature.
- The resistance decreases if the temperature increases, and increases if the temperature decreases.

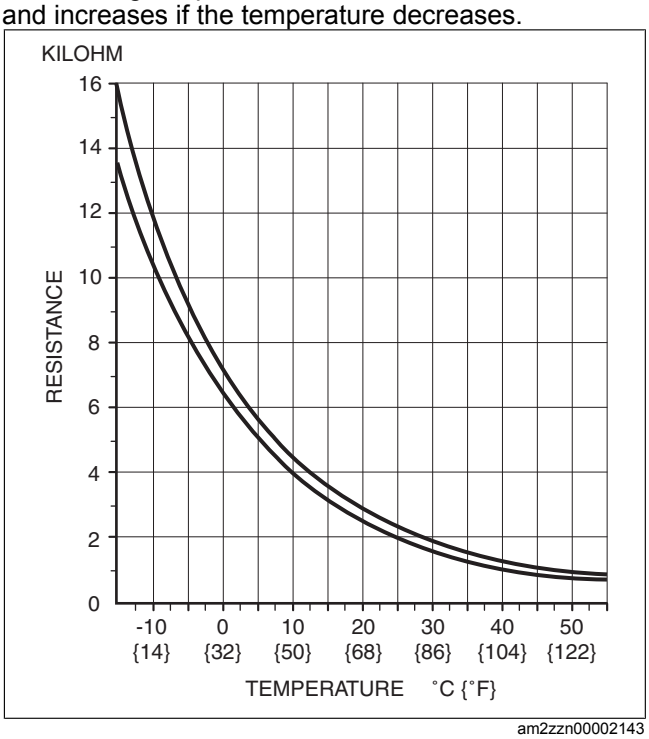

am2zzn00002143

Fail-safe

- Not applicable